

User Manual for

AutoTrack

Advanced Vehicle Swept Path Analysis

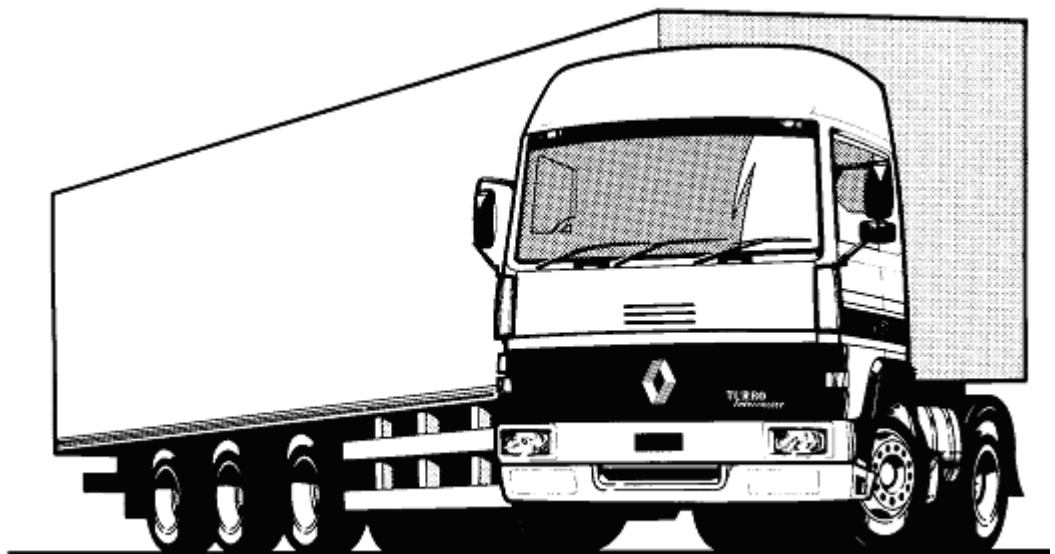

Licence agreement

This software is the property of Savoy Computing Services Limited.
It may be used only under the terms of the Licence Agreement.

Disclaimer

No warranty is given as to the results or performance of this Software.

The User is responsible for satisfying himself that the Software is suitable for his purpose and performs in accordance with the claims in the User Manual.

It is assumed that the User is a competent practitioner who is experienced in the theories and techniques upon which the Software is based.

Copyright notice

This software is the copyright of Savoy Computing Services Limited.

© Savoy Computing Services Limited (1991-2010)

AutoCAD is a registered trademark of Autodesk, Inc.

MicroStation 95, MicroStation SE, MicroStation /J, MicroStation V8 & MicroStation XM are trademarks of Bentley Systems Incorporated.

Savoy Computing Services Limited
Clermont House
High Street
Cranbrook
Kent
TN17 3DN
England

Tel : +44 (0)1580 720 011
Fax : +44 (0)1580 720 022
US: 1-866 527 3790
Eml: sales@savoy.co.uk
Web: <http://www.savoy.co.uk>

May 10

Contents

Installing AutoTrack	1
AutoTrack hardware lock	1
Authorisation code	2
Licences	2
Single user licences	2
Network licences	2
Trial copies	2
Demonstration copies	2
Installing the software	3
Single user version.....	3
Network version	4
Installing the NetHASP Licence Manager software (Network version only)	5
Installing the licence manager on a Windows NT/2000/XP server	5
Installing the licence manager on a Novell Netware server	10
Moving the NetHASP Licence Manager (Network version only)	10
Installing the NetHASP Licence Monitor software (Network version only)	11
Installing the licence monitor on a Windows NT/2000/xp client computer.....	11
Installing AutoTrack.....	14
Some final points to note.....	26
Modifying, repairing or removing AutoTrack	28
Installing AutoTrack from the web.....	31
To install the software	31
To extract the software.....	31
AutoCAD object enabler.....	32
To install the object enabler version from CD	32
To install the software from the web	32
Scripted 'silent' installations	33
Creating the install script.....	33
Running a silent install	34
Adding files to an installation	35
Uninstalling AutoTrack	35
Updating AutoTrack	35
Configuring AutoCAD manually	36
Configuring MicroStation, Bentley PowerDraft, Bentley PowerCivil or Bentley MX manually	38
Resolving hardware lock problems	40
Running the Licence Manager on the same computer as AutoTrack.....	40
Running the Licence Manager on a remote computer.....	41
Identifying and resolving problems	41
Technical Support	42
Starting AutoTrack	43
Running stand-alone AutoTrack	43
Welcome dialog ⁽¹⁷⁰⁰⁾	44
Demonstration Version dialog ⁽¹⁸⁰⁰⁾	45
Rental Version dialog ⁽¹⁸²⁰⁾	46
Transfer Rental Licence dialog ⁽¹⁸⁵⁰⁾	47
Retrieve Rental Licence dialog ⁽¹⁸⁴⁰⁾	47
Running AutoTrack in AutoCAD	48

To run AutoTrack from the Taskbar Start Programs Menu.....	48
To run AutoTrack from within AutoCAD.....	48
To load and run AutoTrack for AutoCAD manually.....	50
Viewing AutoTrack paths in AutoCAD if you don't have AutoTrack	52
Running AutoTrack in MicroStation	53
To run AutoTrack from the Taskbar Start Programs menu.....	53
To run AutoTrack from within MicroStation.....	54
To load and run AutoTrack for MicroStation manually.....	55
The New Features dialog ⁽¹⁹⁷⁵⁾	56
The Getting Started dialog (not AutoTrack Templates) ⁽¹⁹⁰⁰⁾	57
A few do's and don'ts	58

Introduction **59**

What AutoTrack can and can't do	59
Capabilities.....	59
Features	59
Limitations	59
Migrating from WinTrack	60
Reading pre-v5 AutoTrack libraries	60
How to use AutoTrack.....	60
Settings	61
Modelling rigid vehicles	61
Modelling articulated semi-trailer vehicles	61
Modelling drawbar and multi-trailer vehicles.....	61
Modelling aircraft.....	62
Modelling combination steered vehicles	62
Modelling vehicles with pushing tractors.....	62
Modelling vehicles with steerable couplings	62
Modelling Active Hitches	62
Development & planning scenarios	62
Modelling the effects of super elevation and side friction	63
Modelling trams and light rail vehicles	63
Modelling conveyor systems.....	63
Fastest line through roundabouts	63
Checking vertical clearances	63
What's new in version 8?	64
Manual layout.....	71
Notation conventions.....	71
Mouse conventions	71
Default values	71
Getting help	71
Context sensitive on-line help	72
On-line assistance.....	72
Help tutor.....	72
Video tutorial	72

Settings **73**

Settings Wizard	73
Settings Wizard: Scale ⁽²⁴⁰⁰⁾	74
Settings Wizard: Editing Units ⁽²⁴¹⁰⁾	75
Settings Wizard: Layers ⁽²⁴²⁰⁾	76
Settings Wizard: Turn Transitions ⁽²⁴⁴⁰⁾	77
Settings Wizard: Design Speed ⁽²⁴³⁰⁾	78
Settings Wizard: Steering Limits ⁽²⁴⁵⁰⁾	79
Settings Wizard: Articulation Limits ⁽²⁴⁵⁵⁾	80
Settings Wizard: Dynamics ⁽²⁴⁶⁰⁾	81
Settings Wizard: Updates ⁽²⁴⁷⁰⁾	82
Settings Wizard: Finish ⁽²⁴⁸⁰⁾	83
Report Wizard	84

Report Wizard: Start ⁽³⁷⁰⁰⁾	85
Report Wizard: Graphical sub-reports ⁽³⁷¹⁰⁾	86
Report Wizard: Path Annotation ⁽³⁷⁹⁰⁾	87
Report Wizard: Profile ⁽³⁸⁰⁵⁾	88
Report Wizard: Steering & Articulation Graph ⁽³⁷⁹⁵⁾	89
Report Wizard: Construction Lines ⁽³⁸⁰⁰⁾	90
Report Attributes dialog ⁽³⁸²⁰⁾	91
Attributes dialog ⁽³⁸³⁰⁾	91
Report Wizard: Finish ⁽³⁸¹⁰⁾	92
System Settings	93
System Settings: Start Up ⁽²⁰⁰⁰⁾	94
System Settings: Directories ⁽²²⁰⁰⁾	96
System Settings: AutoLoad ⁽²⁰⁰⁵⁾	97
System Settings: Language ⁽²⁰¹⁰⁾	99
System Settings: Network ⁽²⁰¹⁵⁾	100
System Settings: Internet ⁽²²¹⁰⁾	102
System Settings: Updates ⁽²¹⁹⁰⁾	103
System Settings: View ⁽²⁰⁴⁰⁾	105
System Settings: Skill Level ⁽²⁰⁵⁰⁾	107
System Settings: Paths: AutoDrive (Roads only) ⁽²¹⁰⁰⁾	108
System Settings: Paths: Manual Drive (Roads only) ⁽²¹¹⁰⁾	110
System Settings: Paths: Follow Drive (Roads only) ⁽²¹²⁰⁾	112
System Settings: Paths: Guided Drive (Rail only) ⁽²¹³⁰⁾	114
Drawing Settings	115
Drawing Settings: Units ⁽²⁰²⁰⁾	116
Drawing Settings: Scale ⁽²⁰³⁰⁾	117
Drawing Settings: Paths: Layers (AutoCAD only) ⁽²⁰⁶⁰⁾	118
Drawing Settings: Paths: Levels (MicroStation v8 onwards) ⁽²⁰⁶⁷⁾	119
Drawing Settings: Paths: Levels (MicroStation pre-v8 only) ⁽²⁰⁶⁵⁾	120
Layer / Level naming conventions	121
Drawing Settings: Paths: Tracking Point (Roads & Airports) ⁽²¹⁷⁰⁾	123
Drawing Settings: Paths: Model (Roads & Airports) ⁽²⁰⁷⁰⁾	125
Drawing Settings: Paths: Speed (Roads, Rail & Airports) ⁽²⁰⁸⁰⁾	127
Drawing Settings: Paths: Transitions (Roads & Airports) ⁽²⁰⁸⁵⁾	128
Drawing Settings: Dynamics (Roads & Airports) ⁽²¹⁸⁰⁾	130
Drawing Settings: Paths: Reports ⁽³⁰⁰⁰⁾	132
Drawing Settings: Paths: Construction Lines ⁽³¹⁶⁰⁾	133
Drawing Settings: Paths: Reports: Discrete ⁽³⁰²⁰⁾	135
Drawing Settings: Paths: Reports: Spaced ⁽³⁰³⁰⁾	137
Drawing Settings: Paths: Reports: Loci ⁽³⁰⁴⁰⁾	139
Drawing Settings: Paths: Reports: Envelope ⁽³⁰⁵⁰⁾	141
Drawing Settings: Paths: Reports: Offset Envelope 1	143
Drawing Settings: Paths: Reports: Profile ⁽³⁰⁶⁰⁾	145
Drawing Settings: Paths: Reports: Graph ⁽³⁰⁷⁰⁾	147
Drawing Settings: Paths: Animations (not Roads) ⁽²¹⁵⁰⁾	149

Templates 151

Generating turn templates.....	151
To generate a turn template.....	151
The Template Wizard.....	151
Template Wizard: Type ⁽⁶⁵⁰⁰⁾	152
Template Wizard: Vehicle ⁽⁶⁵¹⁰⁾	153
Template Wizard: Model Settings ⁽⁶⁵¹⁵⁾	154
Template Wizard: Turn Angles ⁽⁶⁵²⁰⁾	155
Template Wizard: Format ⁽⁶⁵³⁰⁾	156

Swept Paths: Creating paths 157

AutoDrive (Roads only)	158
To use AutoDrive in Arc mode	158

To drive forwards on an arc	159
To drive backwards on an arc	159
To use AutoDrive in Bearing mode	159
AutoDrive options ⁽⁵¹¹⁰⁾	161
Manual Drive (not Rail)	165
To use Manual Drive	165
To start driving (Control Overlay) ⁽⁶⁰²⁰⁾	166
To pause driving	167
To adjust the view	167
To undo part of the path	168
To redraw the path and update the reports	168
To show or hide the vehicle trail	168
To edit the path properties	168
To edit the path reports	168
To terminate the current path	168
Follow (not Rail)	169
To use Follow	169
Script (not Rail)	171
To create or edit an AutoTrack script ⁽⁶⁰⁵⁰⁾	171
To run an AutoTrack script	172
To save an AutoTrack script	172
To load an AutoTrack script	172
AutoTrack script commands	172
Guided Drive (Rail only)	176
To use Guided Drive	176
Vertical Clearance	178
To use Vertical Clearance	178
Park a Vehicle	180
To use Park a Vehicle	180
Selecting a vehicle to drive	181
To open a vehicle library	182
To select a vehicle from a loaded library	182
To close a vehicle library	182
To set a default vehicle	182
Default Vehicle dialog ⁽⁵¹⁰⁰⁾	183
Scale dialog ⁽⁵¹³⁰⁾	183
Changing your vehicle	184
To change the selected vehicle	184
Positioning a vehicle interactively	185
To change the position of the vehicle	185
To change the heading of the vehicle	185
To adjust the articulation	185
Positioning a vehicle (Position Vehicle dialog) ⁽⁶⁰⁰⁰⁾	186
To set or change the position of the vehicle	186
To set or change the heading of the entire vehicle	186
To set or change the starting steering angle	186
To set or change the starting orientation of a selected spine	186
To position the vehicle at the start of an existing path	187
To position the vehicle at the end of an existing path	187
To position the vehicle at a point on an existing path	187
To view the path properties	187
To view the model settings	187
To undo the last operation	187
To start driving	187
To adjust the view	187
Adjusting the view (View toolbar)	188
To reset any drawing rotation	188
To rotate the drawing to the left	188
To rotate the drawing to the right	188
To rotate the drawing automatically	188

To pan the image (e.g. if the vehicle is close to the edge of the window) ...	188
To zoom in	188
To zoom out	188
To show only the vehicle body	189
To show only the vehicle chassis	189
To show both the vehicle body and chassis	189

Swept Paths: Editing paths **191**

Adjusting the path alignment (Path toolbar)	191
To see the target points on the path	191
To see the steering pointer	192
To adjust the vehicle start position (not Rail)	192
To adjust the vehicle start heading (not Rail)	192
To adjust the vehicle start steering angle (not Rail)	192
To adjust the vehicle start spine angles (not Rail)	192
To move the path	192
To rotate the path	193
To copy the path	193
To explode the path entity (or cell)	193
To delete a path	193
To trim the start of the path	193
To trim the end of the path	194
To move target points (not Rail)	194
To insert a new target point (not Rail)	194
To remove intermediate target points (not Rail)	195
To delete the last target point (not Rail)	195
Adjusting the path alignment using grip editing	195
To enter grip editing mode	195
To see the target points on a path	196
To see the steering pointer	196
To adjust the vehicle start heading (not Rail)	196
To adjust the vehicle start steering angle (not Rail)	196
To adjust the vehicle start spine angles (not Rail)	197
To move a path	197
To move a target point (not Rail)	197
To stretch a section in a path (not Rail)	197
To adjust a bearing turn (not Rail)	198
To insert a new target point (not Rail)	198
To remove a target point (not Rail)	198
To trim the start of the path	198
To trim the end of the path	199
Undriveable Paths ⁽⁵⁰⁵⁰⁾	200
Extending or trimming a path	201
To extend a path	201
To trim the start of the path	201
To trim the end of the path	201
Editing path properties (Path Properties dialog)	202
Path Properties: Path Notes ⁽⁵⁰¹⁰⁾	203
Path Properties: Vehicle	203
Path Properties: Manoeuvres ⁽⁵⁰²⁰⁾	204
Path Properties: Reports	206
Adjusting model settings (Roads only)	206
To change the absolute steering limits	206
To change the absolute articulation limits	207
Adjusting speed settings	207
To change the design speed	207
Adjusting transition settings (not Rail)	207
To change the turn transition types	207
Adjusting the tracking point (not Rail)	208

To change the tracking point.....	208
Adjusting dynamics settings (not Rail)	209
To change dynamics settings	209
Vehicle details report.....	209
To insert a vehicle details report	209
To move a vehicle details report	209
To remove a vehicle details report.....	209
Placing discrete body outlines ⁽⁵¹⁴⁰⁾	210
To place discrete outlines	210
Extracting path data	211
To extract path data	211
Reading extracted data in Excel	211

Swept Paths: Creating and editing vehicles 213

AutoTrack vehicle libraries	213
Access to vehicle libraries.....	213
Access to vehicles in the Pool	214
Compatibility with previous versions	214
Loading AutoTrack 2.x vehicle libraries	214
Viewing a vehicle in a library or the pool (Library Explorer dialog) ⁽³⁵¹⁰⁾	215
Finding vehicles online (Online Vehicle Library Explorer) ³⁵⁸⁰	217
Customising the Library Explorer view (Library Explorer Columns dialog) ⁽³⁵¹⁵⁾	218
Vehicle Diagram dialog ⁽³⁵⁷⁰⁾	219
Creating a new library (Library Details dialog) ⁽³⁵²⁰⁾	221
Library Details: Library	221
Library Details: Users ⁽³⁵³⁰⁾	221
Saving a library	223
Sharing a library (Share Data dialog) ⁽³⁵⁹⁰⁾	224
Printing library or vehicle details (Print dialog) ⁽⁵⁰⁷⁰⁾	224
Copying vehicles and units using drag and drop	225
Building vehicles using drag and drop	225
Unlocking a library (Unlock Library dialog) ⁽³⁵⁵⁰⁾	226
Creating a new group.....	226
Vehicle Group dialog ⁽⁴⁰⁴⁰⁾	227
Viewing a vehicle used on a particular path.....	227
Viewing or editing an existing vehicle	227
Creating vehicles.....	228
To create a new vehicle	228
The Vehicle Wizard	229
Some tips for defining trams (Rail only)	229
Vehicle wizard: Name ⁽⁷⁰⁰⁰⁾	230
Vehicle wizard: Axles ⁽⁷⁰¹⁰⁾	231
Vehicle wizard: Wheelbase ⁽⁷⁰²⁰⁾	232
Vehicle wizard: Drawbar ⁽⁷⁰⁵⁰⁾	233
Vehicle wizard: Steering (not Rail) ⁽⁷⁰³⁰⁾	234
Vehicle wizard: Manoeuvrability ⁽⁷⁰⁴⁰⁾	235
Vehicle wizard: Couplings ⁽⁷⁰⁶⁰⁾	236
Vehicle wizard: Body ⁽⁷⁰⁷⁰⁾	237
Vehicle wizard: Tractor body ⁽⁷⁰⁷⁵⁾	238
Vehicle wizard: Tram body (trams only) ⁽⁷⁰⁸⁰⁾	239
Vehicle wizard: Aircraft wings (aircraft only) ⁽⁷⁰⁹⁰⁾	240
Vehicle wizard: Aircraft Tailplane (aircraft only) ⁽⁷¹⁰⁰⁾	241
Vehicle wizard: Aircraft Fuselage (aircraft only) ⁽⁷¹¹⁰⁾	242
Vehicle wizard: Pantograph (trams only) ⁽⁷¹²⁰⁾	243
Vehicle wizard: Finish ⁽⁷¹³⁰⁾	244
The Advanced Editor.....	245
Vehicle Details dialog ⁽⁴⁰⁵⁰⁾	245
Unit Details dialog ⁽⁴⁰⁶⁰⁾	246
Unit Details: Unit	247

Unit Details: Front Axles / Rear Axles ⁽⁴⁰⁷⁰⁾	249
Unit Details: Steering ⁽⁴¹⁵⁰⁾	256
Unit Details: Body / Outlines ⁽⁴¹²⁰⁾	258
Unit Details: Couplings ⁽⁴¹⁴⁰⁾	269
Units Details: Doors (Aircraft only) ⁽⁴¹²⁵⁾	270
Unit Details: Servicing (Aircraft only) ⁽⁴¹²⁵⁾	271

Parking: Creating and editing parking areas 273

Placing rows of bays	273
To place a row of bays freehand	273
To place a parallel row of bays	274
Unique parking standard names (Parking Standard Name dialog)	275
Placing access roads ⁽⁴⁴³⁰⁾	275
To place an access road freehand	275
To place an access road on a line	276
Parking Report ⁽⁴⁴¹⁰⁾	277
To display the parking report	277
To customise the parking report	277
To export a parking report	278
Editing rows (Parking Row Properties dialog) ⁽⁴⁴⁵⁰⁾	278
To edit a parking row	278
Editing individual bays (Parking Bay Properties dialog) ⁽⁴⁴⁴⁰⁾	280
To edit a parking bay	280
Editing islands (Parking Island Properties dialog) ⁽⁴⁴⁶⁰⁾	281
To edit a parking island	281
Editing parking row layout	282
To move a row of bays	282
To rotate a row of bays	282
To copy a row of bays	282
To explode a row of bays	282
To delete a row of bays	283
To join two rows of parking bays	283
To extend a row of parking bays	283
To add a vertex to a row of parking bays	283
To adjust a parking row	283

Parking: Creating and editing standards 285

AutoTrack parking standards	285
Access to parking standards	285
Access to parking standards in the Pool	286
Viewing a standard in a parking standard file or the pool (Parking Standard Explorer dialog) ⁽⁴⁴⁰⁰⁾	286
Creating a new parking standard file (Parking Standard File dialog)	287
Parking Standard File: Parking Standard File	287
Parking Standard File: Users	287
Saving a parking standard file	289
Sharing a parking standard (Share Data dialog)	289
Copying standards and units using drag and drop	290
Unlocking a parking standard file (Unlock Parking Standard File dialog) ⁽³⁵⁵⁵⁾	290
Creating a new group	291
Parking Standard Group dialog ⁽⁴⁶⁷⁰⁾	291
Selecting a Parking Standard	292
To set a default parking standard	292
Default Parking Standard dialog ⁽⁴⁶⁹⁰⁾	292
Viewing or editing parking standards	293
To edit a parking standard	293
Parking Standard: General ⁽⁴⁵⁰⁰⁾	294
Parking Standard: End Islands ⁽⁴⁴⁸⁰⁾	295
Parking Standard: Bend Islands ⁽⁴⁴⁷⁰⁾	296

Parking Standard: In Bay Numbering ⁽⁴⁵¹⁰⁾	297
Parking Standard: Kerbside Bay Numbering ⁽⁴⁵²⁰⁾	298
Parking Standard: Vehicle Classes ⁽⁴⁶⁴⁰⁾	299
Parking Standard: Service Types ⁽⁴⁵⁷⁰⁾	300
Parking Standard: Valid Bay Angles ⁽⁴⁶³⁰⁾	301
Parking Standard: Bay Dimensions ⁽⁴⁶⁰⁰⁾	302
Parking Standard: Parking Meters ⁽⁴⁵³⁰⁾	303
Parking Standard: Bay Markings ⁽⁴⁵⁸⁰⁾	304
Parking Standard: Bay Symbols ⁽⁴⁶²⁰⁾	306
Parking Standard: Safety Zones ⁽⁴⁵⁶⁰⁾	308
Parking Standard: Bay Styles ⁽⁴⁶¹⁰⁾	310
Parking Standard: Safety Posts ⁽⁴⁵⁵⁰⁾	312
Parking Standard: Privacy Posts ⁽⁴⁵⁴⁰⁾	313
Parking Standard: Wheel Stops ⁽⁴⁶⁵⁰⁾	314
Parking Standard: Construction Lines ⁽⁴⁴⁹⁰⁾	315
Attributes dialog	316
Review	317
Properties	317
Drawing Explorer ⁽³³⁰⁰⁾	317
Simple animations (Basic Animation dialog) ⁽⁸⁰⁰⁰⁾	320
Advanced animation options (Advanced Animation dialog) ⁽⁸⁰⁰⁵⁾	321
Path Animation dialog ⁽⁸⁰²⁰⁾	322
Animation Commands dialog ⁽⁸⁰⁴⁰⁾	323
Animations dialog ⁽⁸⁰¹⁰⁾	325
3D Animations (AutoCAD & MicroStation only)	325
Fly-By Camera control (AutoCAD & MicroStation only) ⁽⁸⁰⁶⁰⁾	326
Recording an animation as an AVI file ⁽⁸⁰⁵⁰⁾	327
Audit	329
Audit dialog ⁽⁸²¹⁰⁾	329
Audit dialog: Exception Details ⁽⁸²⁰⁰⁾	330
Print Audit Options dialog ⁽⁸²²⁰⁾	331
Managing AutoTrack data	331
Exporting AutoTrack data (Export AutoTrack Data dialog) ⁽⁵⁰⁹⁰⁾	331
Importing AutoTrack data (Import AutoTrack Data dialog) ⁽⁵⁰⁸⁰⁾	333
Using Export / Import for personal settings	333
Drawing file size	334
Recovering space in AutoCAD drawings	334
Recovering space in MicroStation drawings	334
Repair AutoTrack data	334
Purging AutoTrack data (Purge AutoTrack dialog) ⁽⁵⁰⁶⁰⁾	334
Glossary of Terms	337
Index	347

Installing AutoTrack

Although installation of AutoTrack is relatively easy we nevertheless recommend that it be undertaken only by suitably competent persons.

AutoTrack hardware lock

AutoTrack is protected from illegal use by a hardware lock or hardware lock, a small device that must be plugged into either the parallel port or the USB port of your computer (or, in the case of network licences, file server). Without this device AutoTrack will not run.

Parallel hardware locks

The parallel port hardware lock may be connected at either end of a parallel printer cable but must be located between the computer and the printer (or plotter, T-switch, buffer etc.). Since the hardware lock will not affect the operation of the parallel port it can be left installed when AutoTrack is not in use.

Whenever possible printers or plotters that are plugged into the same parallel port as the AutoTrack hardware lock should be switched on before the program is used and left on throughout its use.

Up to four Savoy and third party hardware locks, as well as a printer, can be plugged into the same parallel port. However, users should note that whilst all Savoy program hardware locks are compatible with one another, third party hardware locks may cause problems. Such problems can usually be resolved by rearranging the order in which the hardware locks are chained or by plugging them in different ports.

USB hardware locks

USB hardware locks are becoming the norm with the gradual phasing out of the parallel port. There are fewer problems with USB dongles since they cannot be stacked.

Important

Replacement Savoy hardware locks will only be issued to holders of current support and maintenance contracts on return of a damaged hardware lock. If the damaged hardware lock cannot be produced a replacement copy of AutoTrack will have to be purchased.

Authorisation code

In addition to the hardware lock you will be required to enable your copy of AutoTrack by entering an Authorisation Code. The Authorisation Code changes each time the software is updated so if you download an AutoTrack update from the web you will need to contact Savoy for a new code.

Licences

Depending upon your licence you may be able to run AutoTrack on more than one computer.

Single user licences

You may install the software on as many machines as you wish but will only be able to run it on computers running Windows 98, ME, NT, 2000 or XP with an AutoTrack hardware lock plugged into the parallel or USB port.

Network licences

You may install the software on as many machines as you wish but will only be able to run it on computers running Windows 98, ME, NT, 2000 or XP that have a network link to the server that has the hardware lock plugged into its parallel or USB port.

Trial copies

Trial copies of AutoTrack may be issued with a licence that has a limited life. Once the licence expires the protection system will prevent the program from operating.

To convert an evaluation copy to the full version or to extend the evaluation period, the software will need to be relicensed. Relicensing involves issuing a new hardware lock or authorisation code.

Demonstration copies

Demonstration copies do not require a hardware lock because they distort the vehicles randomly thereby rendering them useless for real work. You may install demo copies on as many computers as you wish.

Installing the software

AutoTrack can be installed with either a single user hardware lock, which should be plugged into the computer being used, or with a network hardware lock which may be plugged into a computer remote from the one in use.

Single user version

1. Switch on the computer.
2. **Do not plug the dongle in yet.** If you have already plugged it in then unplug it before proceeding.
3. Login to Windows making sure that you have **Administrator** rights and check that there is 90MB(max) free for the program files.
4. Insert the AutoTrack CD and when it starts select **Install / Update / Remove AutoTrack**.
5. When Setup starts follow the prompts to install AutoTrack, selecting the **Express** install option. See [Installing AutoTrack](#), later in this section, to perform a **Custom** install or for more details.
6. Shut down the PC, plug in the dongle and restart the computer.

USB dongles only

If you plugged in the dongle before installing the software it probably will not be installed correctly. Refer to [Removing a partially installed USB dongle](#) to remove and reinstall it.

Parallel dongles only

If you have a printer connected on the same port, switch that on first, and then the computer. If you have other hardware locks connected on the same port you may need to experiment with the order.

7. If you opted to configure your system manually then carry out any manual configuration (see [Configuring AutoCAD manually](#) or [Configuring MicroStation, Bentley PowerDraft, Bentley PowerCivil or Bentley MX manually](#) later in this section).
8. Repeat for any other computers on which you want to be able to run AutoTrack.

Removing a partially installed USB dongle

1. Unplug the USB dongle.
2. Run the Hardware Lock Wizard and if there is a driver installed, click the **Uninstall Driver** button.
3. Rerun the Hardware Lock Wizard and click the **Install Driver** button.
4. Plug the USB dongle in.
5. Click **Search for Savoy Hardware Locks** to check that the dongle can be found.

6. Close the Hardware Lock Wizard.

Network version

Warning

The installation of the network version of AutoTrack should be carried out by a network Administrator or system supervisor.

1. Decide which computer you will install the hardware lock on (the licence server) bearing in mind that this computer must be left switched on and possibly logged in at all times. We recommend that this is neither a file server nor an AutoTrack client and we do not recommend installing the network hardware lock on computers running Windows 98.
2. Login to Windows making sure that you have **Administrator** rights.
3. Install the NetHASP Licence Manager software (see [Installing the NetHASP Licence Manager software \(Network version only\)](#)).
4. **USB dongle**
Plug the hardware lock into the USB port.

Parallel dongle

Close down and switch off the computer. Plug the hardware lock into the parallel port and then restart it.

Note

If you have a printer connected then switch that on first and then the computer. If you have other hardware locks connected then you may need to experiment with the order.

5. The optional NetHASP Licence Monitor allows you to monitor licence usage and may be installed on any computer, including the server if you wish (see [Installing the NetHASP Licence Monitor software \(Network version only\)](#)).
 6. Go to first of the computers on which you wish to install AutoTrack, login to Windows making sure that you have **Administrator** rights, and check that there is approximately 90MB(max) free on the installation drive for the program files.
 7. Insert the AutoTrack CD and when it starts select **Install / Update / Remove AutoTrack**.
 8. When Setup starts follow the prompts to install AutoTrack, selecting the **Express** install option. See [Installing AutoTrack](#), later in this section, to perform a **Custom** install or for more details.
 9. If you opted to configure your system manually then carry out any manual configuration (see [Configuring AutoCAD manually](#) or [Configuring MicroStation, Bentley PowerDraft, Bentley PowerCivil or Bentley MX manually](#)).
 10. If you want to be able to monitor licence usage from this computer, install the NetHASP Licence Monitor (see [Installing the NetHASP Licence Monitor software \(Network version only\)](#)).
 11. Repeat steps 6 to 11 for any other computers on which you want to be able to run AutoTrack.
-

Installing the NetHASP Licence Manager software (Network version only)


The network licence manager can be installed on a Windows NT/2000/XP network or a Novell Netware network. We do not recommend that it be installed on a computer running Windows 98.

Warning

The installation of the hardware lock on a network server should be carried out by a network Administrator or system supervisor.


Installing the licence manager on a Windows NT/2000/XP server

1. Do not plug in the hardware lock until you have installed the licence manager.
2. Insert the CD in the CD ROM drive. The CD will start automatically if autorun is enabled and you can proceed to step 5. If the CD does not start automatically then proceed as follows:-
3. Click the **Start** button and select Run. The Run dialog will appear.

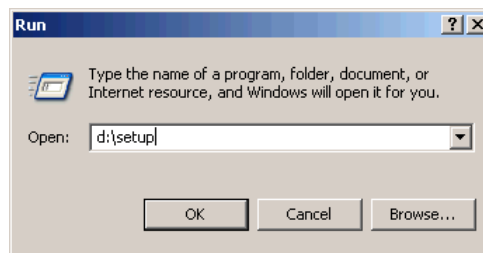

Windows 2002 Run dialogue

4. Type **d:setup** (change the drive letter to suit your CD) and click on **OK**.
5. The CD browser will appear.

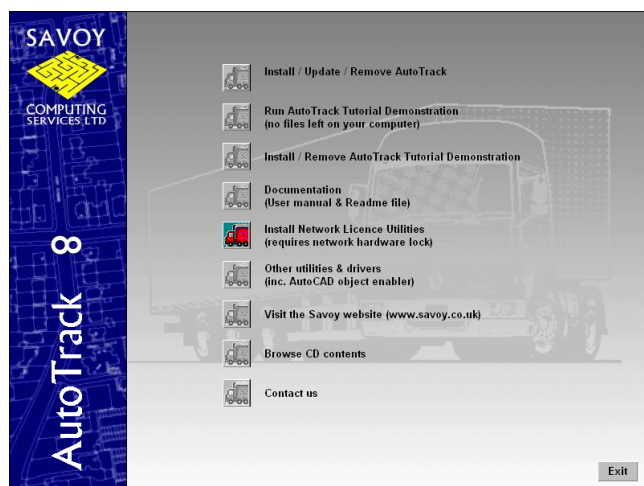

CD Browser


6. Click Install Network Utilities and then Install NetHASP Licence Manager on a Win32 computer.

7. The HASP Licence Manager Installation screen will appear.




NetHASP Licence Manager Installation dialog

8. Click **Next**. Accept the Aladdin licence agreement. The Installation Type dialog will appear.

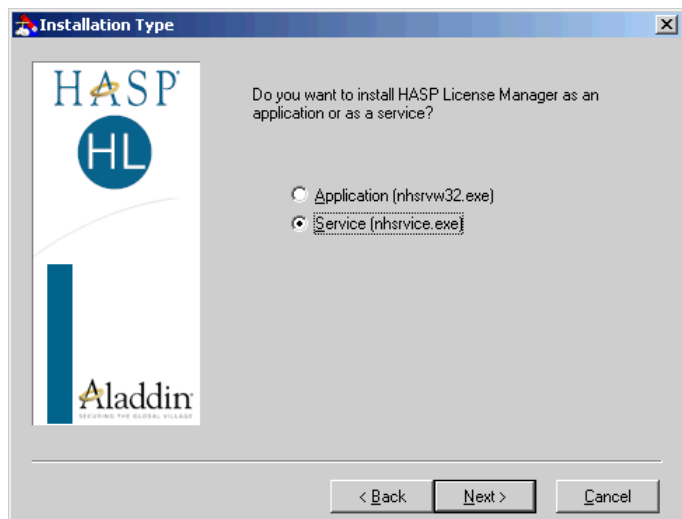


NetHASP Licence Manager Installation Type dialog

9. We recommend that you select the **Service** setup. This will install the Licence Manager as an NT service and mean there is no need to log in to the computer to use the Licence Manager. If your operating system does not allow you to install the Licence Manager as a service then select the **Application** setup.
10. Click **Next**. The Choose Destination Directory dialog will appear.

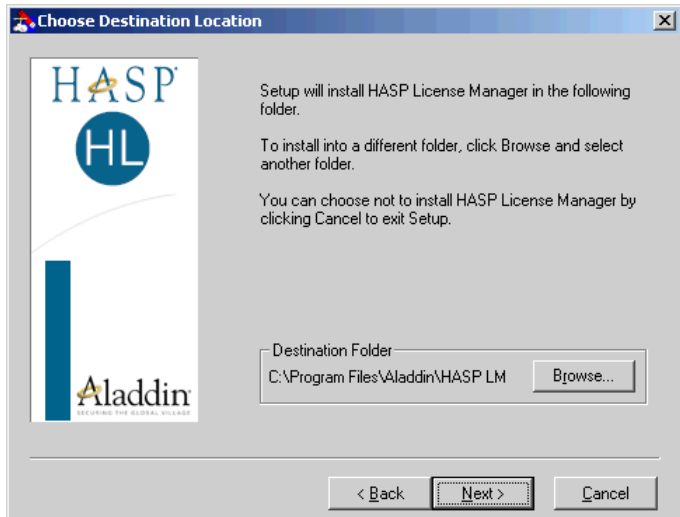


NetHASP Licence Manager Choose Destination Directory dialog

11. If you wish to change the default location then click **Browse** and select your preferred directory.
12. Click **Next**. The Select Program Manager Group dialog will appear.

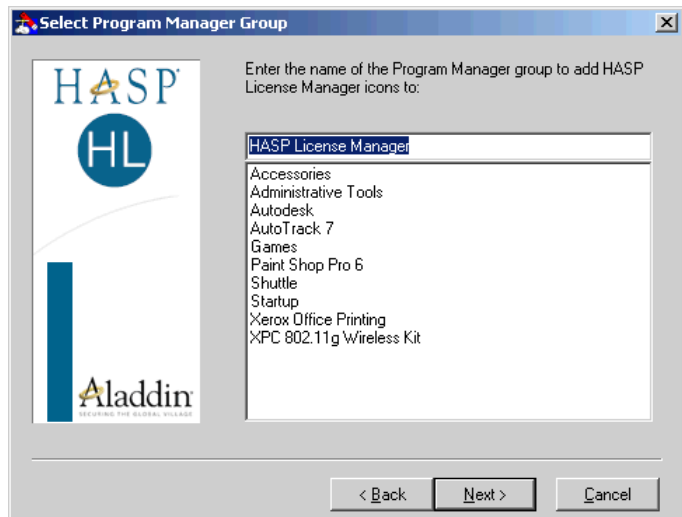


NetHASP Licence Manager Select Program Manager Group dialog

13. Select your preferred group.
14. Click **Next**. At this point, if you opted (contrary to our recommendation) to install the Licence Manager as an application, the Put Into Startup Folder dialog will appear.

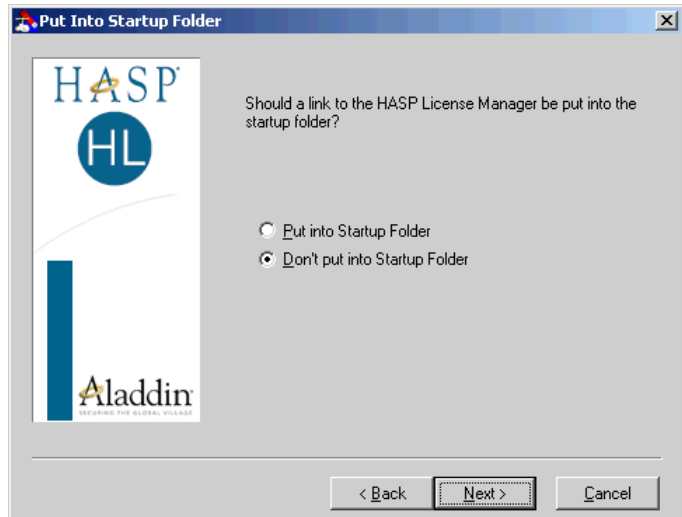


NetHASP Licence Manager Put Into Startup Folder dialog

15. Select **Put into Startup Folder** if you want the licence manager to start automatically when the computer is rebooted.
16. Click **Next**. If you have a firewall enabled that would stop the licence manager from working then the XP SP2 Firewall Settings dialog will appear.

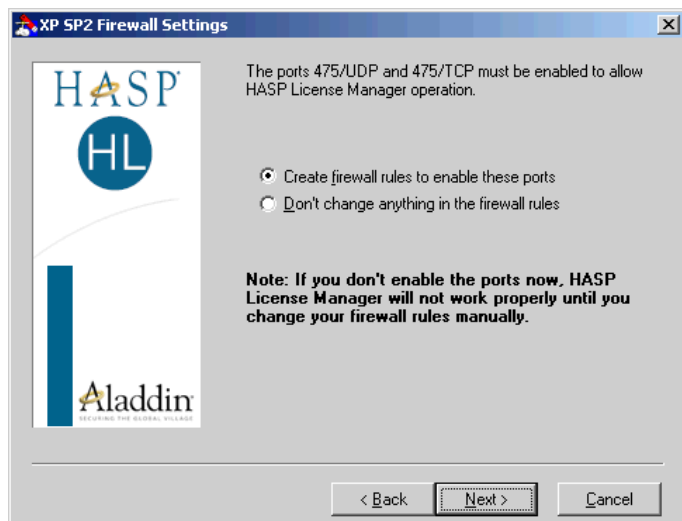


NetHASP Licence Manager XP SP2 Firewall Settings dialog

17. If you do not allow Setup to create the necessary firewall rules then you will have to set them up manually or AutoTrack will not work.
18. Click **Next**. The installation process will now start.
19. When the installation has finished the Device Driver Install dialog will appear (note that you may not see this screen if you already have a suitable device driver installed) and you will be given the opportunity to install the HASP device drivers.

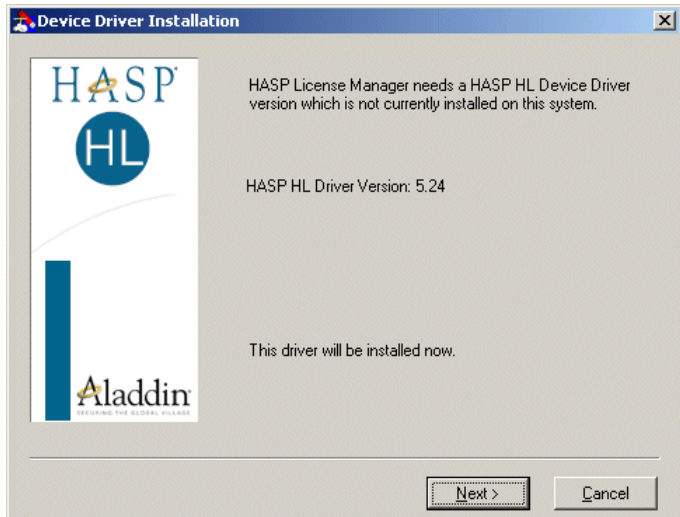

NetHASP Licence Manager Driver Install dialog

20. The HASP device driver must be installed before the system will work so we recommend that you click **Next** to install them now. You should see a message that the hardware lock drivers have been successfully installed.
21. Click **Next**. The Start Licence Manager dialog will appear.

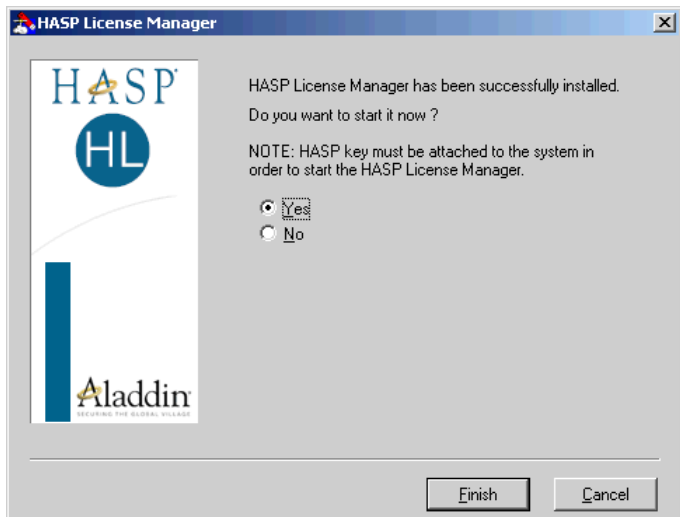

NetHASP Licence Manager Start Manager dialog

22. Make certain that the correct hardware lock is plugged in. The licence manager will not start unless the key is attached.
23. Select **Yes** to start the Licence Manager and then click **Finish**.
24. At this stage if you are using a USB dongle it should be glowing to indicate that it is working.

Installing the licence manager on a Novell Netware server

Warning

The Licence Manager will only work on servers which have IPX installed. You should use the Win32 Licence Manager for Netware IP installations.

1. Plug the hardware lock into the parallel port of your Novell Netware file server.
2. Copy the file `HASPSERVE.NLM` to the system directory of the file server.
3. To load the Licence Manager type
4. `load haspserv`
5. To remove the Licence Manager type
6. `unload haspserv`
7. To load the Licence Manager automatically, add the line
8. `load haspserv`
9. to the file `AUTOEXEC.NCF` in the `sys:system` directory.

Moving the NetHASP Licence Manager (Network version only)

If you wish to move the network hardware lock to a different server then proceed as follows:-


1. Uninstall or disable the NetHASP Licence Manager on the original server.
 2. Install the NetHASP Licence Manager software on the new server as described above.
 3. There is no need to enter a new authorisation keycode unless you have updated AutoTrack.
 4. If you have set up AutoTrack to look for the licence manager at a specific IP address, you will need to update these now.
-

Installing the NetHASP Licence Monitor software (Network version only)

The Licence Monitor can be installed on any computer on any computer on the network and allows users to see how many licences are currently available.

Installing the licence monitor on a Windows NT/2000/xp client computer

1. Insert the CD in the CD ROM drive of the chosen client computer. The CD will start automatically if autorun is enabled and you can proceed to step 4. If the CD does not start automatically then proceed as follows:-
2. Click the **Start** button and select Run. The Run dialog will appear.

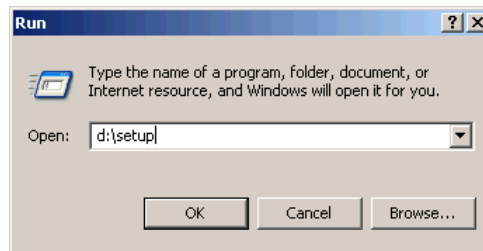


Windows 2002 Run dialogue

3. Type **d:\setup** (change the drive letter to suit your CD) and click on **OK**.
4. The CD browser will appear.




CD Browser

5. Click **Install Network Utilities** and then **Install NetHASP Licence Monitor** on a Win32 computer.
6. The **Welcome** dialog will appear.

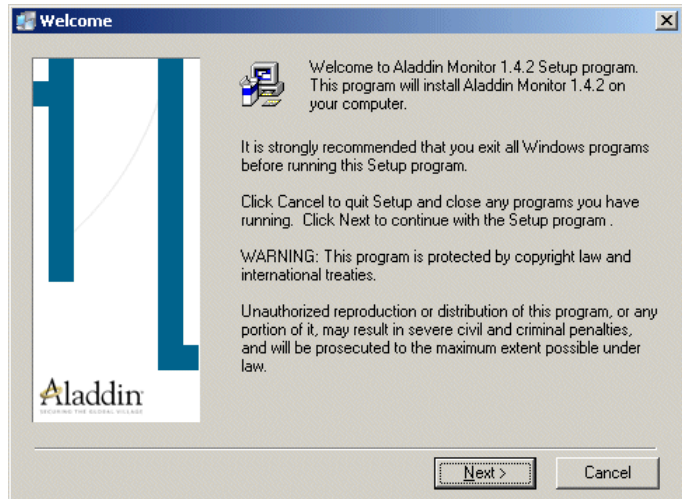


Welcome dialog

7. Click **Next**. Accept the Aladdin licence agreement and click **Next**. The Choose Destination Location dialog will appear.

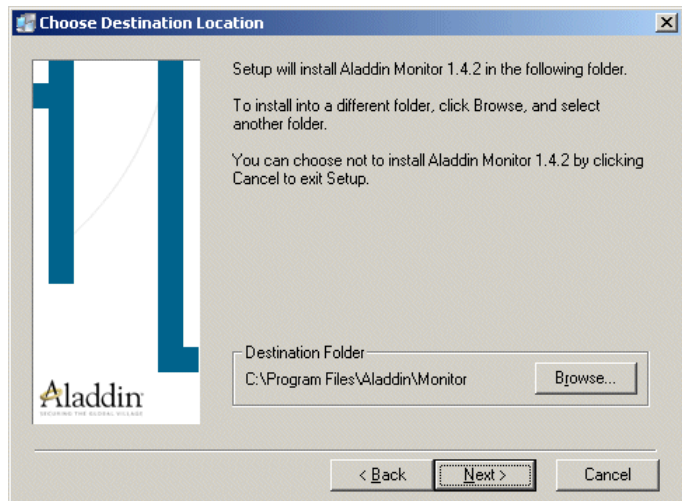


Choose Destination Location dialog

8. If you wish to change the default location then click **Browse** and select your preferred directory.
9. Click **Next**. The Backup Replaced Files dialog will appear.

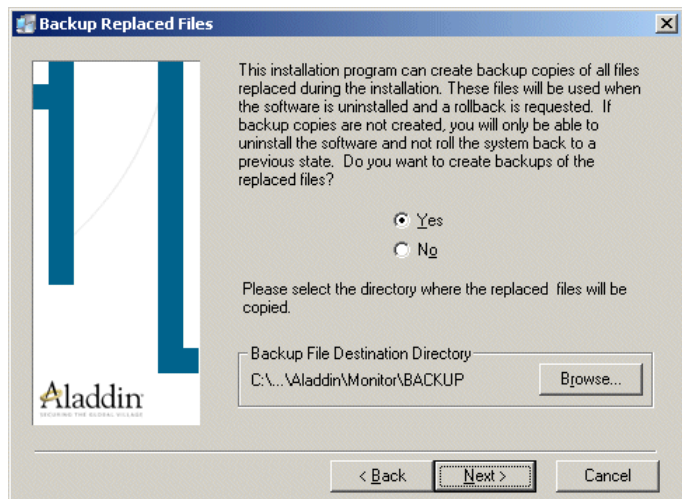

Backup Replaced Files dialog

10. We recommend that you opt to backup replaced files so that, in the event of a problem, you can reinstate your computer to the state it was revert to the prior to installing the software.
11. Click **Next**. The Start Installation dialog will appear.

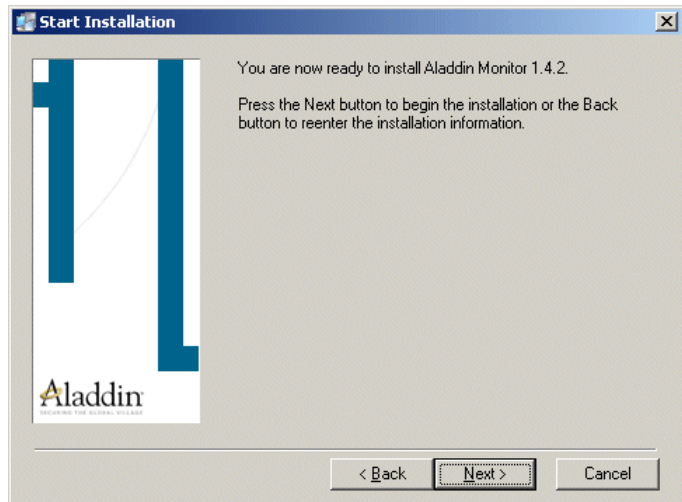

Start Installation dialog

12. Click **Next** to begin the installation.
13. Once installed the Monitor can be run by selecting **Start, Programs, Aladdin, Monitor, AKS Monitor**.


Installing AutoTrack

Run Windows as you normally would and follow the steps according to the media type.

Note


Windows NT users MUST be logged in with Administrator rights to install AutoTrack.

1. Insert the CD in the CD ROM drive. The CD will start automatically if autorun is enabled and you can proceed to step 4. If the CD does not start automatically then proceed as follows:-
2. Click the **Start** button and select **Run**. The Run dialog will appear.

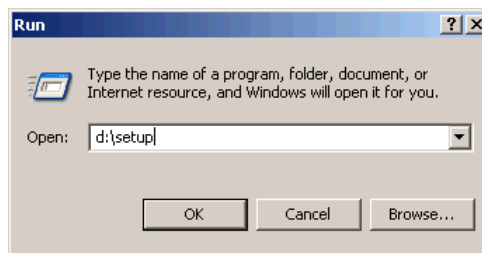

Windows XP Run dialogue

3. Type **d : set up** (change the drive letter to suit your CD) and click on **OK**.
4. The CD browser will appear.

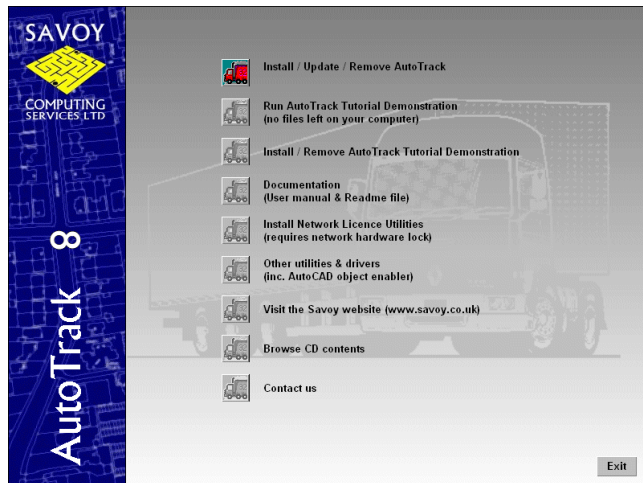

CD Browser

5. Click **Install / Update / Remove AutoTrack**.

Warning


If you have a newer version of AutoTrack installed, or the object enabler version these must be uninstalled manually before you can install standard AutoTrack.

6. On the Choose Setup Language dialog you can select your preferred installation language. Click **Next**.
 7. If you are installing AutoTrack for the first time on a computer the Welcome to the InstallShield Wizard for AutoTrack dialog
-

will appear. Go to the next step.

If instead you see the Welcome to the AutoTrack Setup Maintenance dialog then you already have this version of AutoTrack installed on your computer. Refer to [Modifying, repairing or removing AutoTrack](#).

If you are updating a previous version of AutoTrack then you will see the Earlier Version Found dialog.

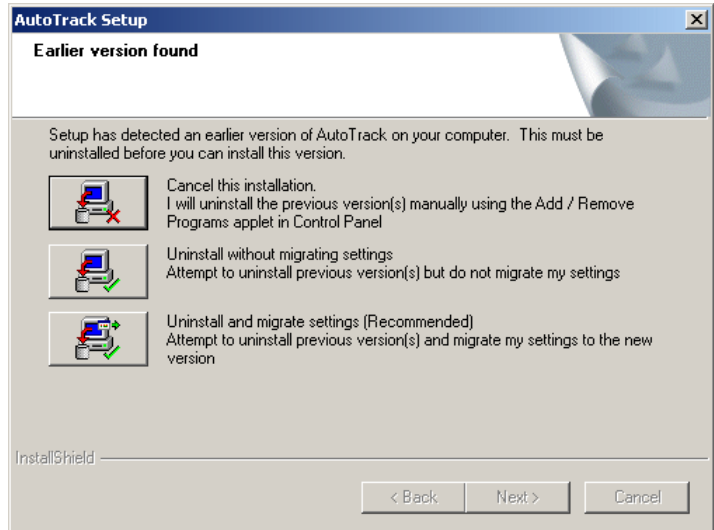


Earlier Version Found dialog

Before you can install a new version of AutoTrack any previous version must be uninstalled. You have three options:-

Select **Cancel this installation** if you don't want the previous version removed just yet or if you want to remove the previous version yourself. Setup will close.


Select **Uninstall but do not migrate settings** if you want Setup to remove the previous version for you but you do not want to transfer your settings and/or custom vehicle libraries to the new version. The previous version will be uninstalled and when it is finished you will see the Welcome to the Installshield Wizard for AutoTrack dialog.

Select **Uninstall and migrate settings** if you want Setup to remove the previous version for you and transfer your settings and/or custom vehicle libraries to the new version. This is the recommended option. The settings will be backed-up up to a folder on the desktop, then the previous version will be uninstalled and the settings when be reinstated in the new version. When it is finished you will see the Welcome to the Installshield Wizard for AutoTrack dialog.

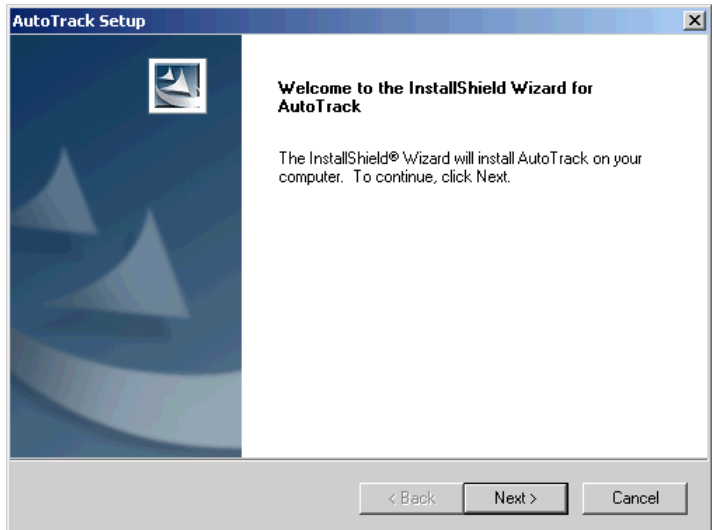


Welcome to the Installshield Wizard for AutoTrack dialog

8. Click **Next** to start the installation process. The Licence Agreement dialog will appear.

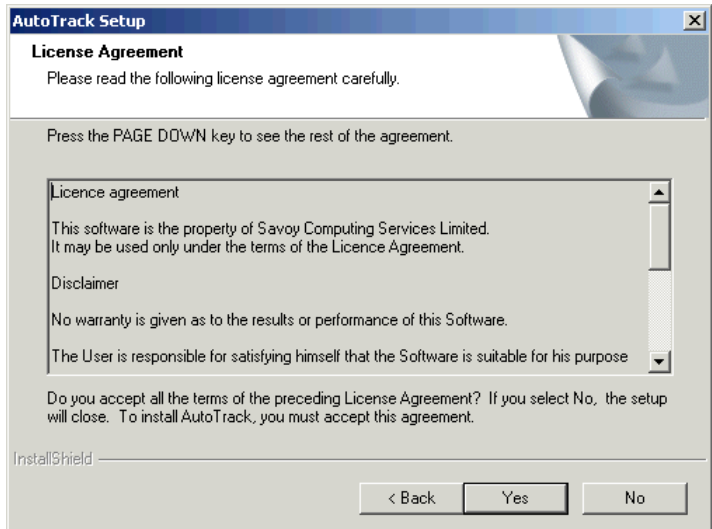


Licence Agreement dialog

9. Click **Yes** if you accept the terms of the licence agreement. The User Information dialog will appear.

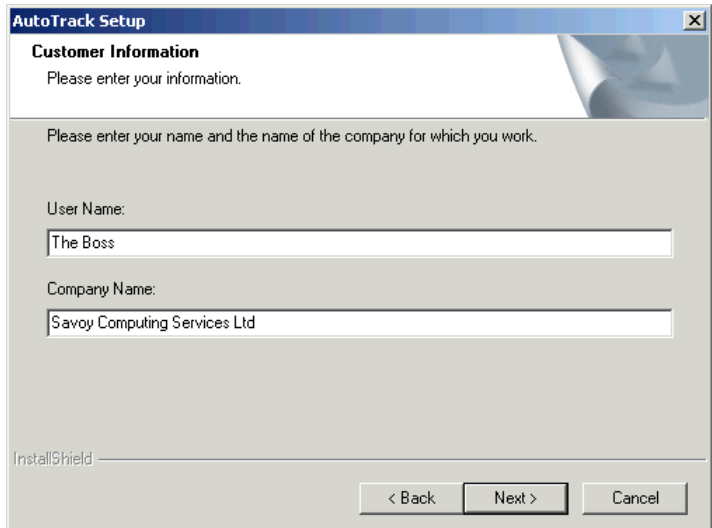

User Information dialog

10. Enter your details.
11. Click **Next**. The Setup Type dialog will appear.

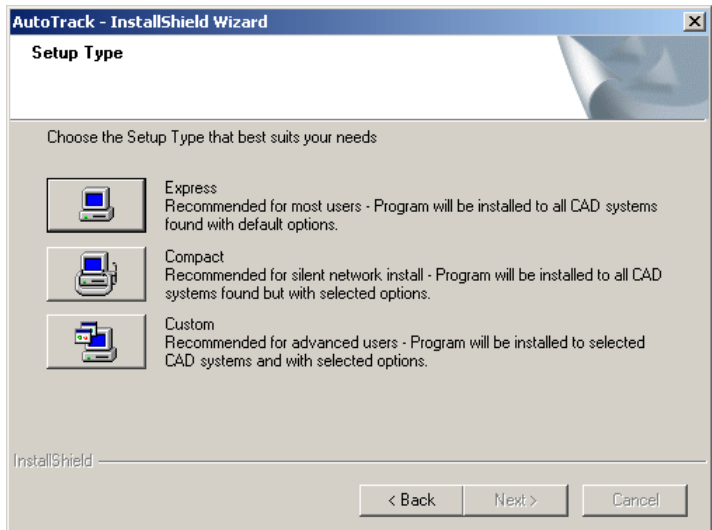


Setup Type dialog

12. Select **Express** to install a stand alone version of AutoTrack on all available platforms. On AutoCAD platforms AutoTrack will be installed on the AutoTrack profile (which will be created if necessary). Update checking will be enabled. The XviD compression codec will be installed. Adobe Acrobat Reader will be installed if necessary. Go to step 42.

Select **Compact** if you want to install the program to all CAD systems found but want to specify the options. This option is ideal for creating silent script installs. Go to step 20.


Select **Custom** to choose which platforms you want to install or to exclude certain options.

13. Click **Next**. The Stand-alone AutoTrack dialog will appear.

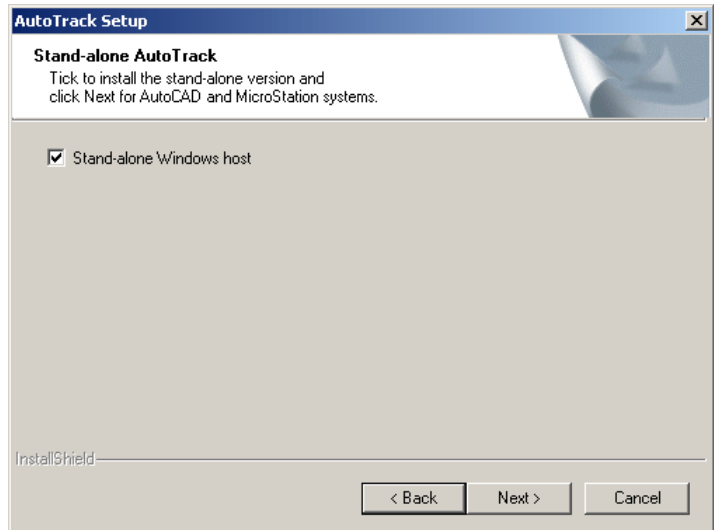


Stand-alone AutoTrack dialog

14. Tick the box if you want the stand-alone Windows host installed.
15. Click **Next**. The first of ten (or eleven if you are installing on a 64-bit platform) CAD system selection dialogs will appear. This one is for the AutoCAD R14 based CAD systems.

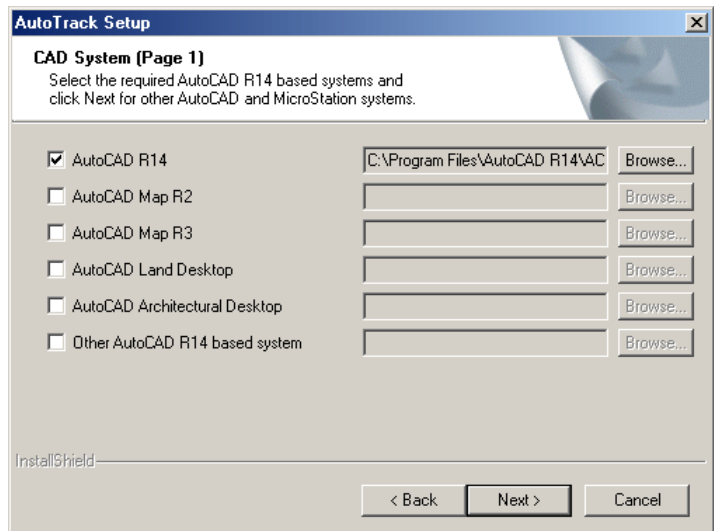


CAD System dialog (AutoCAD R14)

16. Select the AutoCAD R14 based systems on which you wish to run AutoTrack by ticking the appropriate boxes. Note that all CAD systems that Setup has found on your system will have the CAD program executable file in the edit box and will be selected by default. Setup can only fully install and configure AutoTrack for CAD systems that it can find.
17. If you wish to install support for a system that has no file listed then tick the option and click the appropriate **Browse** button. Now browse to the directory where Setup can find the required file. Any CAD system that you select that does not have a path listed will not be correctly installed.
18. Click **Next**. The AutoCAD 2000/2000i based system selection dialog will appear now followed by pages for AutoCAD 2002 to 2011, MicroStation systems and finally MicroStation PowerDraft systems.

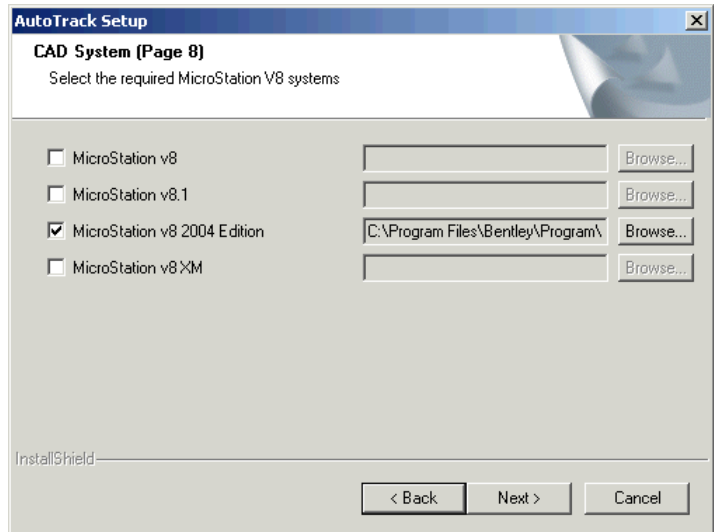


CAD System dialog (MicroStation V8)

19. Select the MicroStation based systems on which you wish to run AutoTrack by ticking the appropriate boxes. Note that all versions found on your computer are selected by default.
20. Click **Next**. The Choose Destination Location dialog will appear.

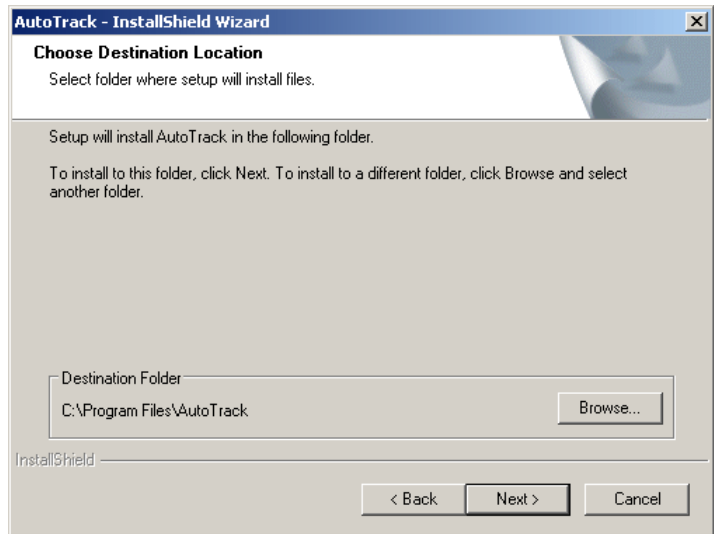


Choose Destination Location dialog

21. If you wish to change the default location then click **Browse** and select your preferred directory.
22. Click **Next**. If you selected the custom installation then the Select Components dialog will appear.

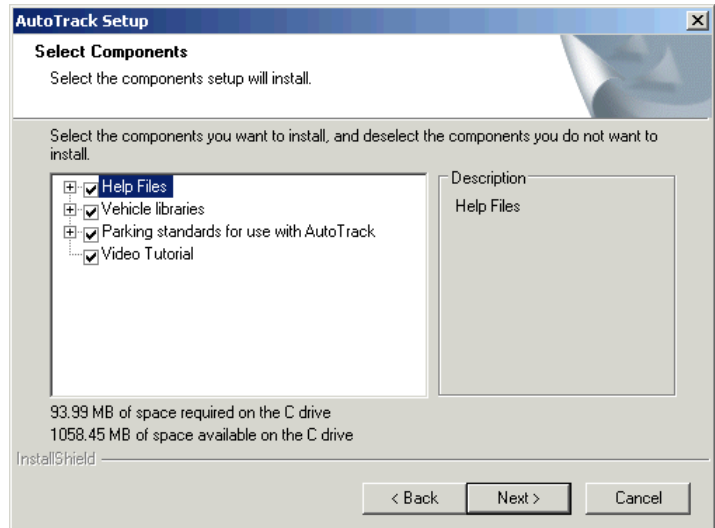


Select Components dialog

23. Select the components that you require by checking the boxes.
24. Click **Next**. The XviD Compression Codec dialog will appear.

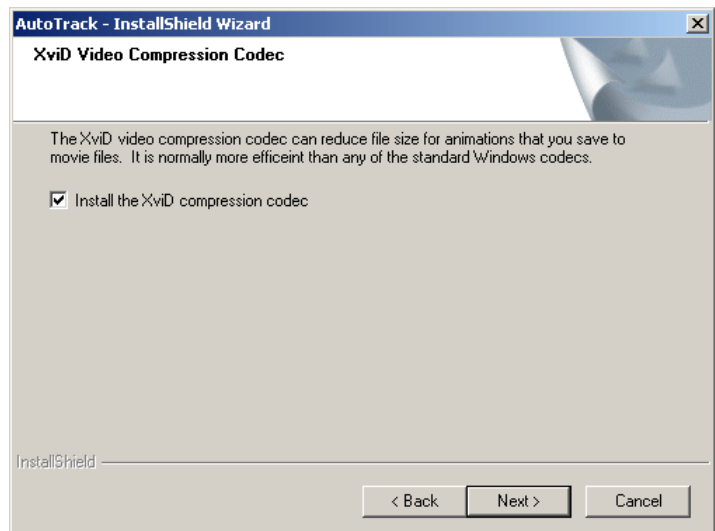


XviD Video Compression Codec dialog

25. If you create an AVI file of an animation you will probably need to use a video compression codec to reduce the file size to a manageable level. Various video compression codecs are installed with Windows as standard but we have found the XviD video compression codec to be better than these in terms of both compression level and quality.
26. Click **Next**. The Adobe Acrobat Reader dialog will appear.

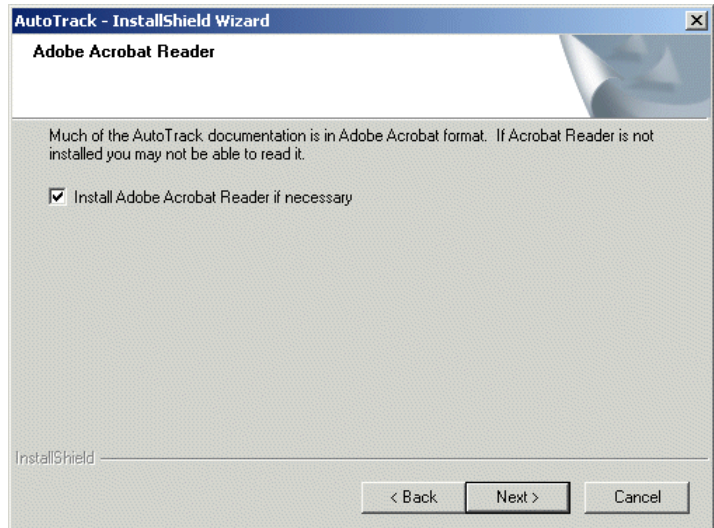


Adobe Acrobat Reader dialog

27. More than likely you already have Adobe Acrobat Reader installed on your computer but if you don't then you will not be able to read or print the AutoTrack documentation.
28. Click **Next**. The Network Licence Setup dialog will appear.

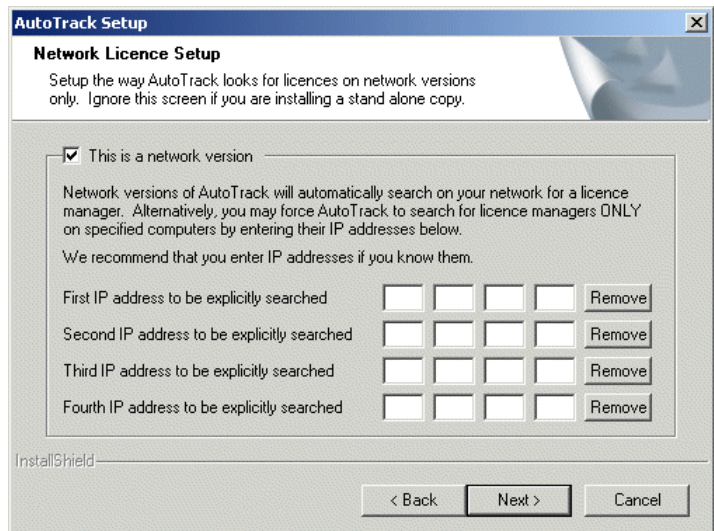


Network Licence Setup dialog

29. By default network versions of AutoTrack search for a network licence manager and maintain a search list automatically. We recommend that you use this default functionality. However, you may, if you wish, enter the IP addresses of up to four licence manager servers on this dialog. These addresses can also be maintained from AutoTrack.
30. Tick **Only install support for network licences** if you don't want the local dongle drivers installed. These are only required if you are likely to use stand-alone (as opposed to network) dongles.
31. Click **Next**. The Internet Access dialog will appear.

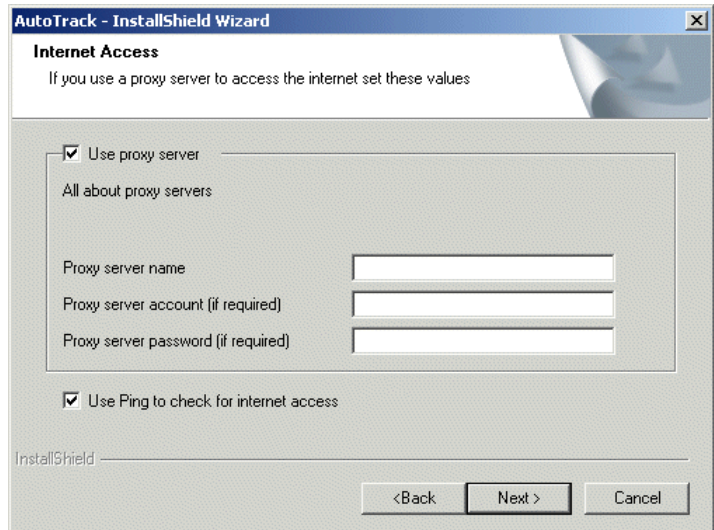


Internet Access dialog

32. If you use a proxy server then you should enter the details here. You may suffix the **Proxy server name** with the port number if required, e.g. www.savoy.co.uk:8080.
33. Click **Next**. The Shared Data Directory dialog will appear.

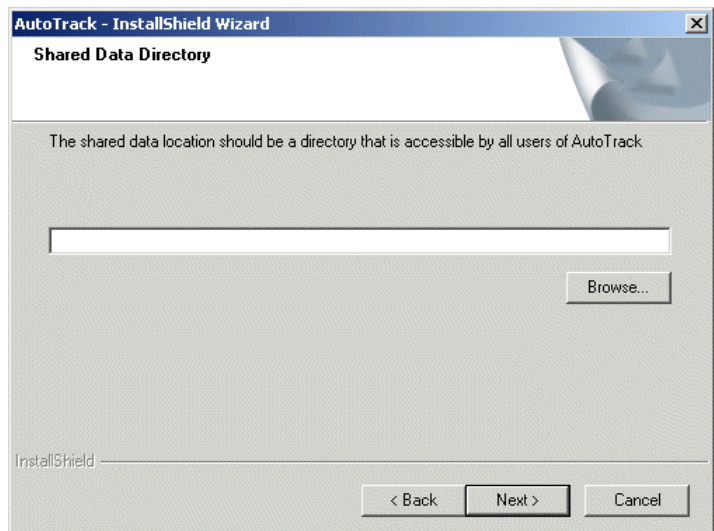


Shared Data Directory dialog

34. Enter the full path of the directory you wish to use to share data within your company or department.
35. Click **Next**. The Update Advice dialog will appear.

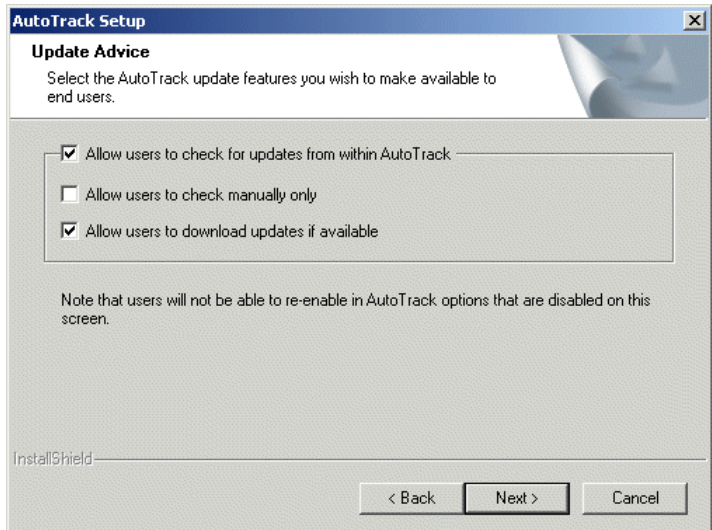


Update Advice dialog

36. By default end users have options to check for more recent versions of AutoTrack either automatically (at a specified time interval) or manually. If you wish to prevent users from checking for updates entirely then untick **Allow update checking**. If you wish to only allow them to perform manual checks then tick **Allow manual check only**. Finally, to allow them to check for updates but prevent them from downloading the file untick **Allow downloads**.
37. Click **Next**. The Configuration of CAD systems dialog will appear.

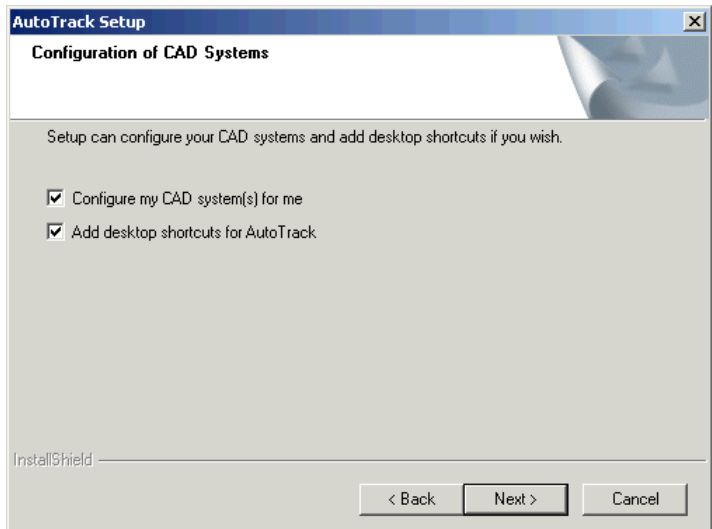


Configuration of CAD systems dialog

38. You may either allow Setup to configure your CAD systems now or leave it until the first time the software is run. We recommend that you allow Setup to configure your CAD system so that when subsequently uninstall the software all settings and registry changes are reinstated. If you tick **Add an AutoTrack desktop shortcut** Setup will add a shortcut icon for each platform that you have selected. Tick the options you require.
39. Click **Next**. If you have allowed Setup to configure your CAD systems then the AutoCAD Profiles dialog will appear.

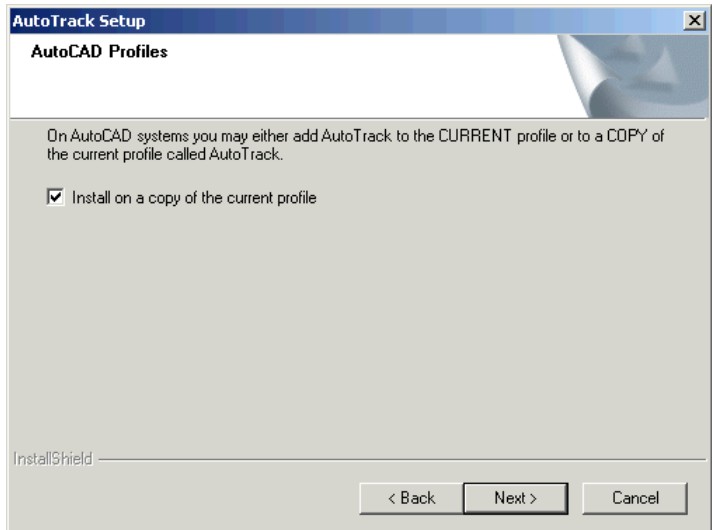


AutoCAD Profiles dialog

40. On AutoCAD you can opt to install AutoTrack onto a copy of the current profile called AutoTrack or directly onto the current profile. By default it is installed on a copy of the current profile. Untick **Install on profile AutoTrack** if you want to add AutoTrack to the current profile. If a profile called AutoTrack already exists, AutoTrack will be added to it. If you opted to manually configure your system then AutoTrack will be installed onto the current AutoCAD profile each time it is run if necessary.
41. Click **Next**. The Select Program Folder dialog will appear.

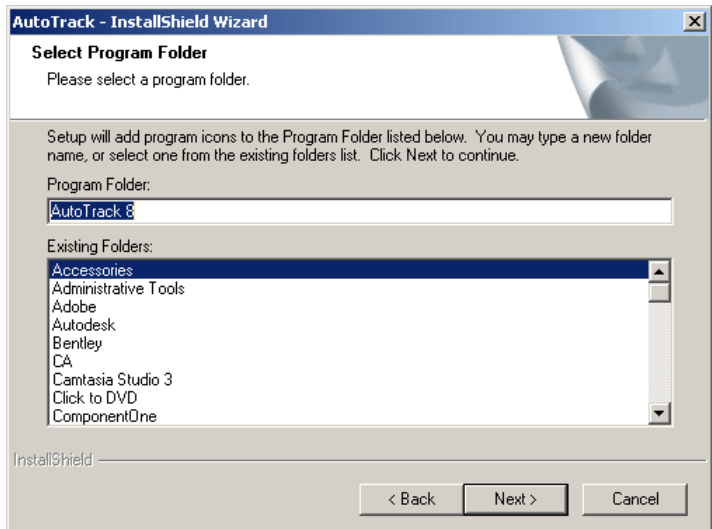


Select Program Folder dialog

42. By default Setup will install AutoTrack to the AutoTrack folder. Select an existing alternative or enter a new folder name if you wish. Note you will not see this dialog if you are modifying an installation.
43. Click **Next**. The Confirm Edits dialog will appear.

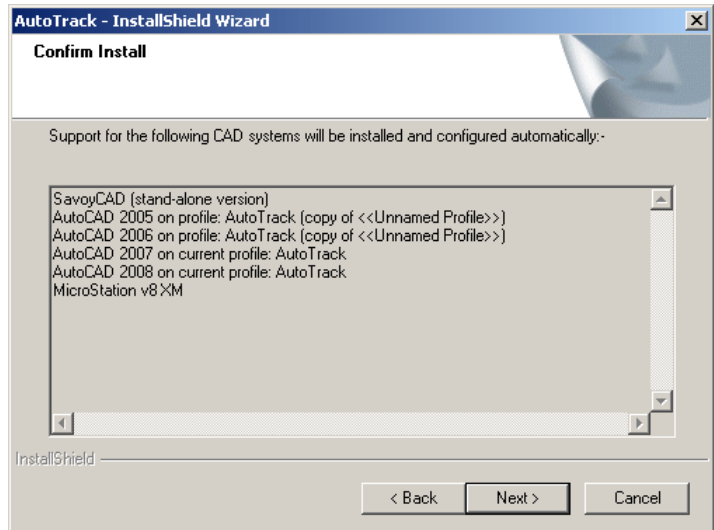


Confirm Edits dialog

44. Double check that you are installing the correct versions (and on the correct AutoCAD profiles) and click **Next**. The installation process will now start.
45. Once AutoTrack has been installed the XviD codec will be installed if required followed by Acrobat Reader if required. In both cases, follow the prompts and accept the default values.
46. Next the hardware lock driver will be installed. During driver installation the hardware lock must be removed. The hardware lock installer is designed to run with no user interaction and should not be interrupted. You will be prompted to reinsert the hardware lock as soon as it is safe to do so.
47. When file copying is finished the Copying Complete dialog will appear.

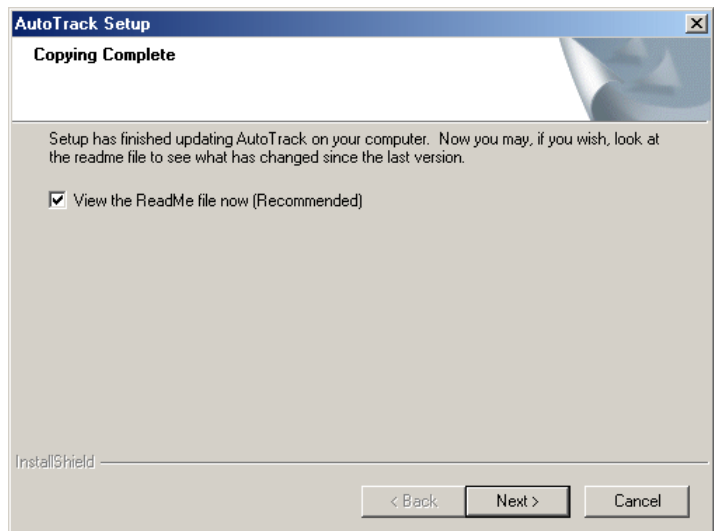

Copying Complete dialog

48. The readme file lists new features and bugs fixed in the new version.
49. Click **Next**. The Setup Complete dialog will appear.

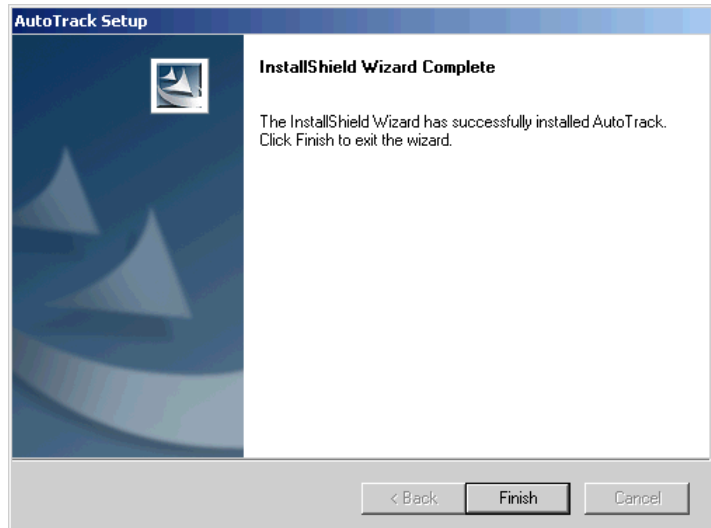

Setup Complete dialog

50. If it is necessary to restart your computer then you will be given the option to restart it now or later. Select your preference and click **Finish**.
51. If you chose to have Setup configure your CAD system for you then you should now be able to see AutoTrack on the top menu bar in AutoCAD or under the Applications menu on MicroStation.
52. If you chose not to allow Setup to configure your CAD system for you then refer to the section entitled [Configuring AutoCAD manually](#) or [Configuring MicroStation, Bentley PowerDraft, Bentley PowerCivil or Bentley MX manually](#) as appropriate.

Some final points to note

Windows NT based systems (NT4, 2000, XP, 2003, Vista, Windows 7, etc.)

Default location of application data files

By default the AutoTrack settings files, menus and other data files are stored in folders in the common application data directory. This is usually located as follows:-

On Windows XP or earlier it is C:\Documents and Settings\All Users\Application Data\AutoTrack,

On Windows Vista or later it is C:\Program Data\AutoTrack.

Storing application data files elsewhere

Where ever you choose to store your AutoTrack data files all users must be granted FULL access rights to this location.

If you wish to store the AutoTrack application data files in another location then create a file in the AutoTrack installation directory called SAVOY.INI containing the following lines:-

```
[SETTINGS]
```

```
ApplicationDataDir={Application Data Directory}
```

Where the text in brackets (and the brackets themselves) should be replaced with the full path (or the path relative to the program installation directory) of the preferred data file location. For example:-

```
[SETTINGS]
```

```
ApplicationDataDir=D:\Example\AutoTrackAppData
```

You should then grant all AutoTrack users FULL access rights to this location.

Storing application data with the program

If you would rather your settings, menus and other application data files were stored with the program then we recommend that you do not specify the installation directory itself but create a subdirectory. Create a file in the AutoTrack installation directory called SAVOY.INI containing the following lines (we recommend AppData as a directory name but anything will do):-

```
[SETTINGS]
```

```
ApplicationDataDir=.\AppData
```

Then create AppData (or whatever you have called it) as a subdirectory of the program installation directory and grant all users FULL access rights. So, if you installed AutoTrack to the default location you need to create a directory called C:\Program Files\AutoTrack\AppData.

Access rights

AutoTrack must be installed by someone with Administrator rights. Depending upon your security policy, before you can run the software as an end user you may need to make changes to the user profiles. Login as a normal user and if AutoTrack is on the menu and runs you do not need to make the following changes. If AutoTrack is not on the menu and/or does not run then make the following changes as appropriate:-

Grant all AutoTrack users FULL access rights to the common application data directory. This is usually located as follows:-

On Windows XP or earlier, in the C:\Documents and Settings\All Users\Application Data\AutoTrack subdirectory

On Windows Vista or later, in the C:\Program Data\AutoTrack directory.

If you have specified an alternative application data directory in the SAVOY.INI file then grant all AutoTrack users FULL access rights to this directory.

Copy the AutoTrack menu from the Administrator's Start Programs menu to each AutoTrack user's menu.

If you are using Roaming Profiles consult your IT Department for advice.


Modifying, repairing or removing AutoTrack

Run Windows as you normally would and follow the steps according to the media type.

Note


Windows NT users MUST be logged in with Administrator rights to install AutoTrack.

1. Insert the CD in the CD ROM drive. The CD will start automatically if autorun is enabled and you can proceed to step 5. If the CD does not start automatically then proceed as follows:-
2. Click the **Start** button and select **Run**. The Run dialog will appear.

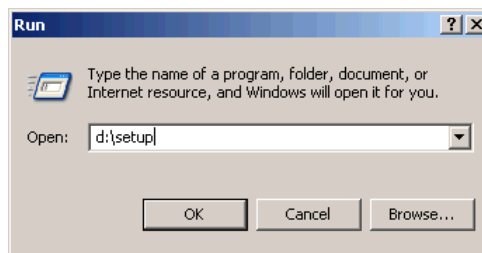

Windows XP Run dialogue

3. Type **d : set up** (change the drive letter to suit your CD) and click on **OK**.
4. The CD browser will appear.

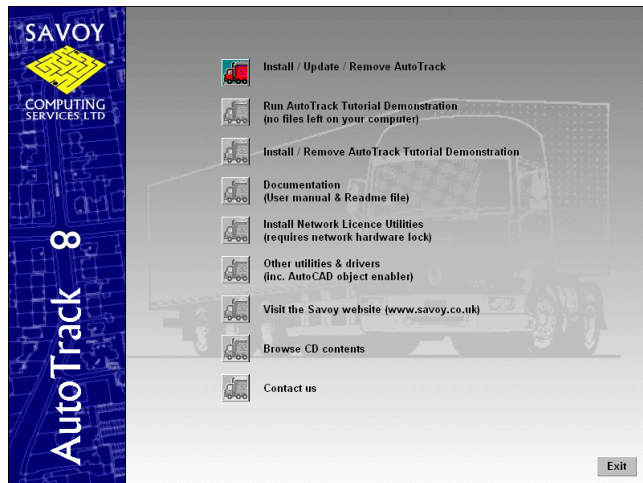

CD Browser

5. Click **Install / Update / Remove AutoTrack**.


Note

If you have other applications running you may get a warning to close these applications so that shared files may be updated.

6. If you see the Welcome to AutoTrack Setup dialog then you do not have a copy of AutoTrack installed on your computer. Refer to [Installing AutoTrack](#).

If you see the Earlier Version Found dialog then you are installing a new version. Refer to [Installing AutoTrack](#).


If you have installed new CAD systems since you installed AutoTrack, or if you did not originally install AutoTrack on all CAD systems on your computer, the Unsupported CAD Systems Found dialog will appear.

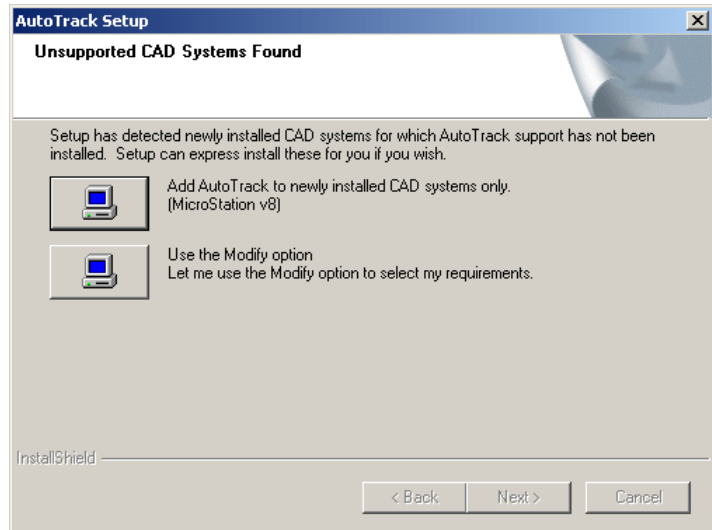

Unsupported CAD Systems Found Dialog

Depending upon your particular circumstances you may **Add AutoTrack to newly installed CAD systems only** or **Add AutoTrack to all unsupported CAD systems**. Setup will update your system and close when it has finished. You may also opt to **Use the Modify option** (see below).

If none of these apply, or if you opted to use the Modify option, the Welcome to the AutoTrack Setup Maintenance dialog will appear.

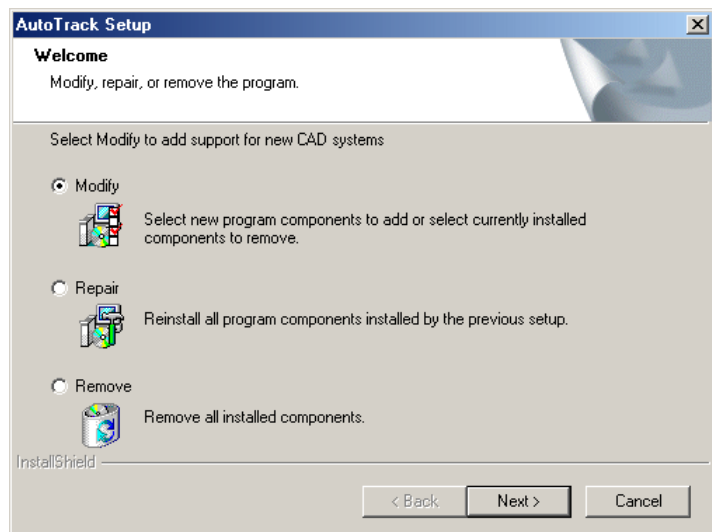

Welcome to the AutoTrack Setup Maintenance dialog

7. If you wish to add or remove support for a CAD system or to add or remove other program files (e.g. the on-line manual) select **Modify**. Refer to step 7 onwards in [Installing AutoTrack](#).

If you have reason to believe that a file is missing or has become corrupted then select **Repair**. This will reinstall all the files installed by the previous setup to the same location.

If you wish to remove AutoTrack from your computer select **Remove**. You will be asked to confirm and then AutoTrack will be removed and Setup will close.

Installing AutoTrack from the web

All AutoTrack versions are released on the Savoy web site before they are available on CD. In addition, minor updates are only available to existing users from the web site, CD's only being issued on request.

All AutoTrack products are supplied in a single self-extracting executable with a file name of the form **ATRxxx.EXE** where **xxx** is the version number, e.g. **ATR800.EXE**. Note that the file is the full product and will install a full copy or update and existing copy.

You can configure AutoTrack to warn you when updates become available. If you download these updates they are placed in the **My Documents\My AutoTrack Data\Updates** folder. If you obtain updates by visiting the web site we recommend that you place these files in the same area.

To install the software

1. To install the software click the **Start** button on the Windows taskbar and select **Run**.
2. Browse to the file you have downloaded and click **Open** followed by **Run**.
3. AutoTrack Setup will run exactly as the CD version. For full details refer to either [Installing AutoTrack](#) or [Modifying, repairing or removing AutoTrack](#) depending upon whether you are installing or updating.

To extract the software

1. To extract the cabinet setup files to the target machine and not run setup type `-extract_all:<path>` after the filename in the Run dialog. Where `<path>` is the target folder. For example:-

```
atr800.exe -extract_all:c:\setupfiles
```

AutoCAD object enabler

In the AutoCAD version of AutoTrack the path entity is a custom object that is calculated and drawn by AutoTrack. Systems must therefore have AutoTrack installed in order to update and maintain these objects. Proxy graphics allow non-AutoTrack users to see the data (see [Viewing AutoTrack paths in AutoCAD if you don't have AutoTrack](#)) but the functionality is very limited, e.g. you cannot snap to an AutoTrack path.

The object enabler is designed to give non-AutoTrack users limited functionality over AutoTrack data, allowing them, for example, to move reports or snap to a path to measure a distance. It also allows selection and playback of animations contained within a drawing.

The AutoTrack object enabler is free to download and is also available on the AutoTrack CD. It may be freely emailed to non-AutoTrack recipients of AutoTrack drawings. It cannot be installed with standard AutoTrack (there would be little point anyway).

This issue does not arise in the MicroStation or stand-alone versions that use different techniques.

Important

Use of the object enabler does not in any way diminish our recommendation that you save proxy graphics with your drawing. Furthermore, you should note that if you make a change using the object enabler proxy graphics will only be resaved if you have the appropriate system variables set (see [Viewing AutoTrack paths in AutoCAD if you don't have AutoTrack](#)).

To install the object enabler version from CD

1. First make sure that you do not have AutoTrack, either a demo or a full copy, installed.
2. Then insert the AutoTrack CD and when the CD menu appears, select **Other Utilities**. The installer will start.
3. Select **Install Object Enabler version**. Select **Express** to install the object enabler on all versions of AutoCAD found.

To install the software from the web

1. Download the object enabler version. It will have a filename of the form **ATRxxxO.EXE**, where **xxx** is the filename, e.g. **ATR800O.EXE**.
 2. To install the software click the **Start** button on the Windows taskbar and select **Run**.
 3. Browse to the file you have downloaded and click **Open** followed by **Run**. The installer will start.
 4. Select **Install Object Enabler version**. Select **Express** to install the object enabler on all versions of AutoCAD found.
-

Scripted 'silent' installations

AutoTrack Setup is fully MSI and ZENworks compatible allowing the full version (i.e. not the demo version) to be installed centrally and distributed on demand over a network with no user prompts.

The following instructions assume that you plan to install the software onto one or more client computers from a central source (file server).

Apart from obvious criteria such as adequate disk space, a successful silent installation requires that:-

- the install source files are mapped to the same location for all client PC's, and
- you either specify a Compact install or that all client computers have the selected CAD system(s) installed in the same location and run at least once.

Adobe Acrobat Reader and the XviD compression codec are third party applications and their installers require some user interaction. If you would rather users did not have to interact with the install process you should select Custom install and deselect these two options. Both items are installed if you perform an Express install.

Creating the install script

You must create the installation script on a client computer that is set up exactly as the other computers on which it will be installed silently.

1. Copy the **ATRACK** directory from the AutoTrack CD to a suitable location on your file server's hard disk.
2. Now go to one of the client computers. To create the silent install script you need to run Setup from the **ATRACK** directory on the server hard disk with a **-x** switch. The easiest way to do this is to create a shortcut on the desktop.
3. Browse to the **ATRACK** directory, right click on the file **setup.exe** and select **Create Shortcut**.
4. Move the shortcut to the desktop.
5. Right click on the new desktop shortcut, select **Properties** and add **-x** to the end of the **Target** field. The Target field should now read something like:-

```
f:\{source location}\atrack\setup.exe -x
```

6. Click **OK** to close the properties dialog.
7. Double click on this shortcut to start the AutoTrack installation and follow the prompts to install AutoTrack in the normal way.
8. Your selections and values will be stored in a file called **setup.iss** in the Windows directory. We recommend that you do not tick the options on the Finish dialog to view the readme file and to run the hardware lock wizard.

Note

*If you intend to deploy AutoTrack while users are not logged in then perform a Custom install and deselect the option **Configure my CAD systems for me**.*

Running a silent install

1. Working from a client computer, move the file setup.iss from the Windows directory back to the **ATRACK** directory on the server's hard disk.
2. Now use windows explorer to browse to the file setup.exe in the **ATRACK** directory on the server.
3. Right click on the file and select **Create Shortcut**.
4. Move the shortcut to a suitable location accessible by all potential users (probably in a public area on the server).
5. Right click on the new desktop shortcut, select Properties and add the **-s** switch to the Target field. The Target field should now read something like:-

```
f:\{source location}\atrack\setup.exe -s
```

6. Click **OK** to close the properties dialog.
7. Double click on the desktop shortcut to start the silent install.
8. If you want to store the setup.iss file in another location use the additional switch **-f1** to show Setup where to find it. For example (no space between the **f1** and the path):-

```
-f1{iss file path}\setup.iss
```

You may wish to create different iss files for installing, removing and maintaining AutoTrack each named appropriately (e.g. **install.iss**, **remove.iss** or **maintain.iss**) and referenced as described above. Note however that the silent setup operation will fail if you run it out of sequence, e.g. if you try to remove a copy of AutoTrack that has not been installed it will fail. The error log file (setup.log) is created in the same directory as the iss file. If the last entry in the file, under the heading **[ResponseResult]**, is **ResultCode = 0** then the operation was successful; otherwise, it failed.

Note that even a silent install will fail with an error if certain criteria are not met. These include the following:-

- inadequate disk space,
 - previous version installed,
 - no CAD system selected,
 - CAD system still running,
 - the CAD system not having been run,
 - not running with administrator rights,
 - not having the required level of service pack,
 - both AutoCAD 2000 and AutoCAD 2002 installed (not allowed by Autodesk),
 - failure to perform an automatic edit,
 - failure to create the program folder, or
 - failure to migrate settings.
-

Adding files to an installation

Setup can run a batch file or other executable after it has finished installing AutoTrack if you supply the name of the file you wish to execute as a command line switch in the following format:-

```
f:\{source location}\atrack\setup.exe -s -batch={batch filename}
```

For example:-

```
c:\atrack\setup.exe -s -batch=c:\atrack\setup.bat
```

Note, you can use the `-batch` switch with the `-f1` switch.

Uninstalling AutoTrack

You can uninstall AutoTrack without going to Control Panel run Setup with a `-uninst` switch:-

```
f:\{source location}\atrack\setup.exe -uninst
```

However, this switch will still display a confirmation prompt.

To uninstall AutoTrack silently you will need to create an uninstall script. To do this go to a client computer that has AutoTrack installed and follow the steps in [Creating the install script](#) to create an uninstall script.

Updating AutoTrack

To perform a silent update of AutoTrack, we recommend that you run two scripts, one to uninstall the old version and a second to install the new version. This will require two `.iss` files referenced using the `-f1` switch. For example you might run:-

```
c:\atrack\setup.exe -s -f1c:\atrack\remove.iss
```

Followed by:-

```
c:\atrack\setup.exe -s -f1c:\atrack\install.iss
```

These two commands could be run from a single batch file. However, if you do this you should use the `-sms` switch to ensure that the first instance of setup has finished before the second one starts. Hence your batch file would look something like this:-

```
c:\atrack\setup.exe -s -sms -f1c:\atrack\remove.iss  
c:\atrack\setup.exe -s -sms -f1c:\atrack\install.iss
```

Configuring AutoCAD manually

Note

Registry changes made by either of the following 'manual' methods will not be removed when you uninstall the product and hence we recommend that you allow Setup to configure your AutoCAD system for you.

If you chose not to allow Setup to configure your copy of AutoCAD then proceed as follows...

Run AutoTrack from the Start Programs menu which will load AutoCAD and AutoTrack. This will configure your system and you should then be able to see AutoTrack on your AutoCAD menu bar. Henceforth, however you run AutoCAD, AutoTrack should appear on the menu bar.

Alternatively...

1. Run AutoCAD as you normally do.
2. Type `APpload` at the command line.
3. If necessary change the **Files of type** box to include `*.ARX`.
4. Click the **File** button and browse to the AutoTrack directory (Normally `C:\PROGRAM FILES\AUTOTRACK`).
5. Highlight the program file appropriate to your CAD system as follows:-

For **AutoCAD R14**, Map R2, Map R3, Architectural Desktop, Land Development Desktop and other derivative products load the file `ATRA140.ARX`.

For **AutoCAD 2000**, 2000i, Map 2000, Map 2000i, Architectural Desktop 2i, Land Development Desktop 2i and other derivative products load the file `ATRA150.ARX`.

For **AutoCAD 2002**, Map 5, Map 6, Architectural Desktop 3, Architectural Desktop 3.3, Land Desktop 3 and other derivative products load the file `ATRA1506.ARX`.

For **AutoCAD 2004**, Map 2004, Architectural Desktop 2004, Land Desktop 2004 and other derivative products load the file `ATRA160.ARX`.

For **AutoCAD 2005**, Map 2005, Architectural Desktop 2005, Land Desktop 2005 and other derivative products load the file `ATRA161.ARX`.

For **AutoCAD 2006**, Map 2006, Architectural Desktop 2006, Land Desktop 2006, Civil 3D 2006 and other derivative products load the file `ATRA162.ARX`.

For **AutoCAD 2007**, Map 2007, Architectural Desktop 2007, Land Desktop 2007, Civil 3D 2007 and other derivative products load the file `ATRA170.ARX`.

For **AutoCAD 2008**, Map 2008, Architecture 2008, Land Desktop 2008, Civil 3D 2008 and other derivative products load the file `ATRA171.ARX`.

For **AutoCAD 2009**, Map 2009, Architecture 2009, Land Desktop 2009, Civil 3D 2009 and other derivative products load the file `ATRA172.ARX`.

For **64-bit versions of AutoCAD 2009 based products**, load the file `ATRA17264.ARX`.

For **AutoCAD 2010**, Map 2010, Architecture 2010, Land

Desktop 2010, Civil 3D 2010 and other derivative products load the file `ATRA180.ARX`.

For **64-bit versions of AutoCAD 2010 based products**, load the file `ATRA18064.ARX`.

For **AutoCAD 2011**, Map 2011, Architecture 2011, Land Desktop 2011, Civil 3D 2011 and other derivative products load the file `ATRA181.ARX`.

For **64-bit versions of AutoCAD 2011 based products**, load the file `ATRA18164.ARX`.

6. Click **Open**.
7. Back in the Load/Unload Applications dialog click the **Load** button and then close the Load/Unload Applications dialog.
8. If you use profiles then make the required profile current.
9. Type `AUTOTRACK` on the command line. AutoTrack will be loaded and your CAD system will be configured for use.
10. Repeat steps 7 and 8 for other profiles as required.

Configuring MicroStation, Bentley PowerDraft, Bentley PowerCivil or Bentley MX manually

Setup configures all Bentley CAD variants except MX (or MXROAD) to run AutoTrack when run from the AutoTrack for [Bentley product] desktop shortcut or menu item. AutoTrack can (and must for Bentley MX) also be loaded manually via the MDL Applications dialog. However, Setup no longer creates a new workspace and no longer adds AutoTrack to the list of Available Applications in other workspaces. If you want to do this then proceed as follows...

1. Run your Bentley CAD system as you normally would.
2. Select the User or Workspace you want to configure.
3. Create or open a file.
4. Select **Configuration** from the **Workspace** menu.
5. Select the category **Primary Search Paths**.
6. **To make AutoTrack run in this workspace...**
Click on **MDL Applications** from the edit box at the top right and then click the **Select** button. Browse to the `LOADERV8` subdirectory of the AutoTrack installation directory and click **Add** to add it to the list. For example, if you installed AutoTrack to the default directory you should browse to `C:\PROGRAM FILES\AUTOTRACK\LOADERV8\ (LOADER\` on versions prior to V8) and click **Add**.

Important

*If you enter the path manually using the **Edit** button, then note the backslash at the end of the path. This is critical.*

7. Click **Done** to close the box. This will ensure that AutoTrack will run in MicroStation but it will not be listed in **Available Applications**.
8. **To make AutoTrack available in this workspace...**
Click on **Visible MDL Applications** from the edit box at the top right and click the **Select** button. Browse to the `LOADERV8` subdirectory of the AutoTrack installation directory (`LOADER\` on versions prior to V8) and click **Add** to add it to the list. For example, if you installed AutoTrack to the default directory on MicroStation V8 you should browse to `C:\PROGRAM FILES\AUTOTRACK\LOADERV8\` and click **Add**.

Important

*If you enter the path manually using the **Edit** button, then note the backslash at the end of the path. This is critical.*

9. Click **Done** to close the box. This will make AutoTrack visible to you while running MicroStation but will not load it automatically.
 10. Click **OK** to close the Configuration dialog and allow the system to recognise the new search directories.
 11. Now reopen the Configuration dialog by selecting **Configuration** from the **Workspace** menu.
 12. Select the category **Design Applications**.
-

13. **To make AutoTrack autoload in this workspace...**
Look for ATRACK in the list of **Available Applications**. Highlight the entry and click the **Add** button to add it to the list of **Applications to Load**. This will make AutoTrack load automatically when you start MicroStation with this workspace.
14. Click **OK** to close the Configuration dialog.
15. Restart MicroStation with this user and **AutoTrack** should be on the **Applications** menu and the toolbar should be visible.
16. Repeat the above to configure other workspaces as required.

Resolving hardware lock problems

The **Hardware Lock Wizard** starts automatically to attempt to resolve hardware lock problems detected whilst running AutoTrack. The wizard should be self-explanatory but in the unlikely event that it is unable to solve the problem please contact Savoy Computing Services for assistance.


The **Hardware Lock Manager** may be run independently of AutoTrack from the Start, Programs, AutoTrack program folder. This may be necessary if you are installing an update or if you just wish to check the status of your hardware locks.

Running the Licence Manager on the same computer as AutoTrack

AutoTrack can now safely be run on the same computer as the Licence Manager. However, you might need to add the "loopback" IP address to the list of IP addresses to search. This is because machines listening out for broadcast messages sometimes do not respond if the request is local.

To add the "loopback" address

1. Select **Hardware Lock Manager** from the Start, Programs, AutoTrack menu. The Hardware Lock Manager will appear.
2. Click the **Configure Network Settings** button. The Network Settings screen will appear.

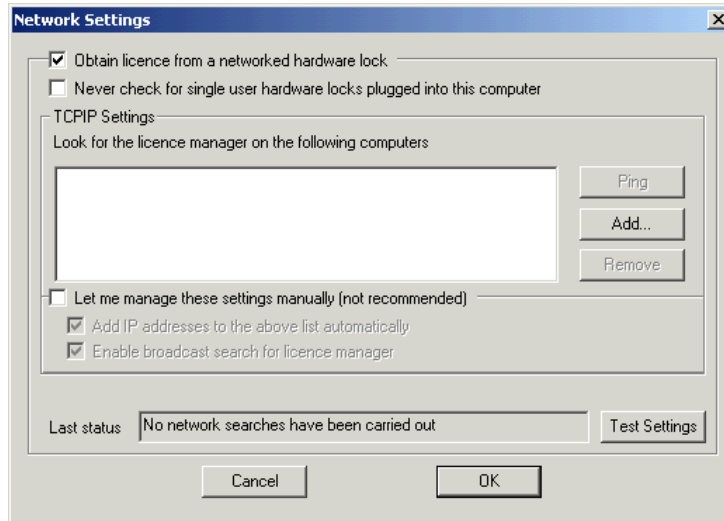

Network Settings dialog

3. Click **Configure Network Settings** and add 127.0.0.1 to the list of searched IP addresses.
 4. Click the **Test Settings** button to check that all is well. If not then refer to [Identifying and resolving problems](#).
-

Running the Licence Manager on a remote computer

AutoTrack may report one of two errors when it runs:-


17. No Free Licences Found.
18. No Licence Manager Found.

Message 1 means that there is not a problem, the licence manager has been found BUT there are no available licences, try again later.

Message 2 means that there is a problem. Refer to the next section, [Identifying and resolving problems](#) to fix it.

Identifying and resolving problems

1. Select **Hardware Lock Manager** from the Start, Programs, AutoTrack menu. The Hardware Lock Manager will appear.
2. Click the **Configure Network Settings** button. The Network Settings screen will appear.

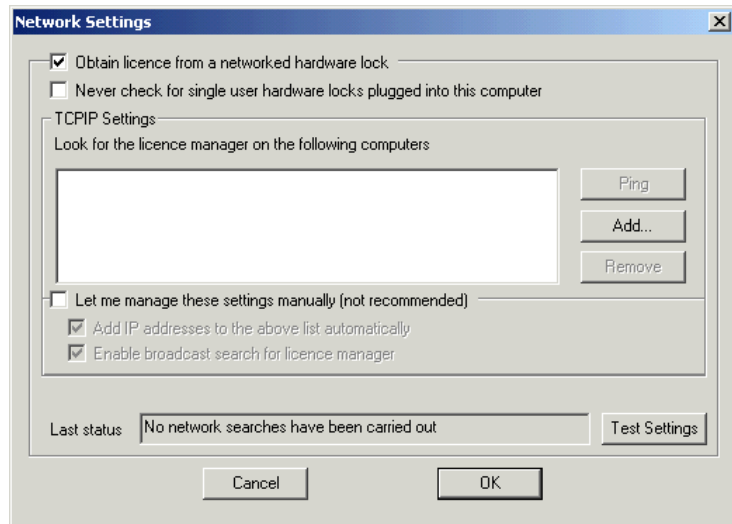

Network Settings dialog

3. The **Last Satus** field should indicate the problem. Likely values include:-

15 - No Active NetHASP licence Manager was found

This message means that the licence manager could not be found. To fix this, click the **Add** button and add the IP address of the licence manager computer. This should only be needed if the licence manager is running on a different subnet to the application, i.e. a WAN copy. Having added the IP address, click the **Test Settings** button to check that it now works.

If after adding the IP address, the computer is still unable to find the licence manager, then you may have a firewall preventing the system from working. To verify this we suggest that you temporarily disable the firewall and click on the **Test Settings** button again.

155 - LM old version was found

This message means that the licence manager has been found

BUT that it is an old version and needs upgrading. To fix this, download the latest version of the licence manager (v8.31.5.24 at the time of writing) from our web site (www.savoy.co.uk). Go to the **Downloads** page and select **3rd party software and links**. Uninstall the current version from the licence manager machine and install the new version **as a service**. Note that upgrading the licence manager will NOT stop older versions of AutoTrack from running. Note also that during the upgrade process the licence manager machine may need to be re-booted.

129 - NetHASP key is not connected to the NetHASP Licence Manager

This message means that the only licence manager found does not have a AutoTrack key attached. To fix this, make sure that the key is attached and then carry out the steps to add the IP address of the actual server outlined in the solution to error 15 about.

133 - Number of stations exceeded

This message means that the licence manager has been found but all the licences are in use. Try again later, or use the Licence Monitor to see who is using the licences and get someone to logout.

Technical Support

You may telephone Savoy Computing Services anytime during normal UK working hours on +44(0)1580 720 011. Alternatively you may fax us on +44(0)1580 720 022.

Normal working hours are 9am to 5.30pm GMT, Monday to Friday, except Bank and National Holidays.

If it's out of office hours then you might like to try our web site on which we post details of any known problems and how to work around them. The site can be accessed at www.savoy.co.uk and you can email us at support@savoy.co.uk. Both of these are available from the AutoTrack drop down menu.

Finally, you can contact us by post at Savoy Computing Services Ltd., Clermont House, High Street, Cranbrook, Kent, TN17 3DN, England.

Starting AutoTrack

AutoTrack can be run from within an AutoCAD or MicroStation session, from the taskbar **Start, Programs** menu or from a desktop icon. In future, when this manual refers to AutoTrack it is using the generic term and what each user will see depends on what version they are licenced to use.

Running stand-alone AutoTrack




Start button

1. Click on the **Start** button on the Taskbar and select **AutoTrack for SavoyCAD** from the Programs, AutoTrack menu or click on the desktop icon **AutoTrack for SavoyCAD**.
2. The first time the software is run, if AutoTrack cannot find a valid licence, the Welcome dialog will appear with options to run a full, rental or demo version. Select the required version.
3. If you are licenced only to use the Templates Standard version or have chosen to evaluate this product then you will see the first page of the Template Wizard.

In all other versions you will be placed in the SavoyCAD editor. AutoTrack should be visible on the top menu bar and the toolbar should also be visible.

Welcome dialog ⁽¹⁷⁰⁰⁾

The Welcome dialog appears whenever AutoTrack fails to find a valid licence or following a master reset.

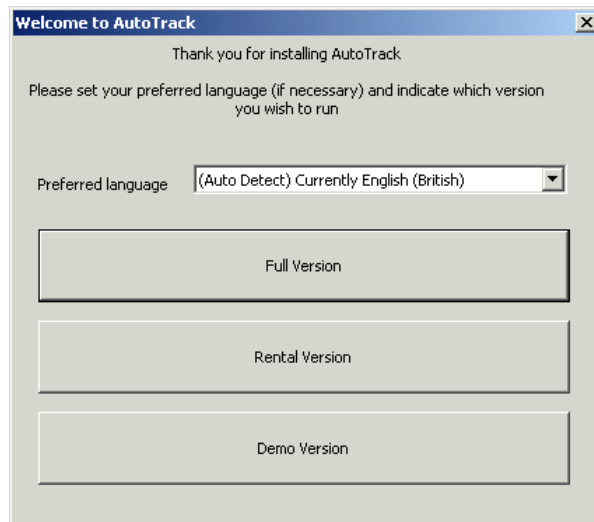


Welcome dialog

1. By default, the language is detected automatically based upon your computer settings. However, if you would prefer to use a different language select it from the **Preferred Language** drop down list.
 19. If you have just purchased AutoTrack and have a dongle then simply plug it in and click **Full Version**.
 20. If you want to rent a copy of AutoTrack or receive a rental licence from a colleague, click **Rental Version**. The Rental Version dialog will appear.
 21. If you simply want to try out the software click **Demo Version**. The [Demonstration Version dialog ^{\(1800\)}](#) will appear.
-

Demonstration Version dialog ⁽¹⁸⁰⁰⁾

This dialog only appears if you have opted to run a demonstration copy of AutoTrack. It allows you to select and change the product you wish to evaluate.

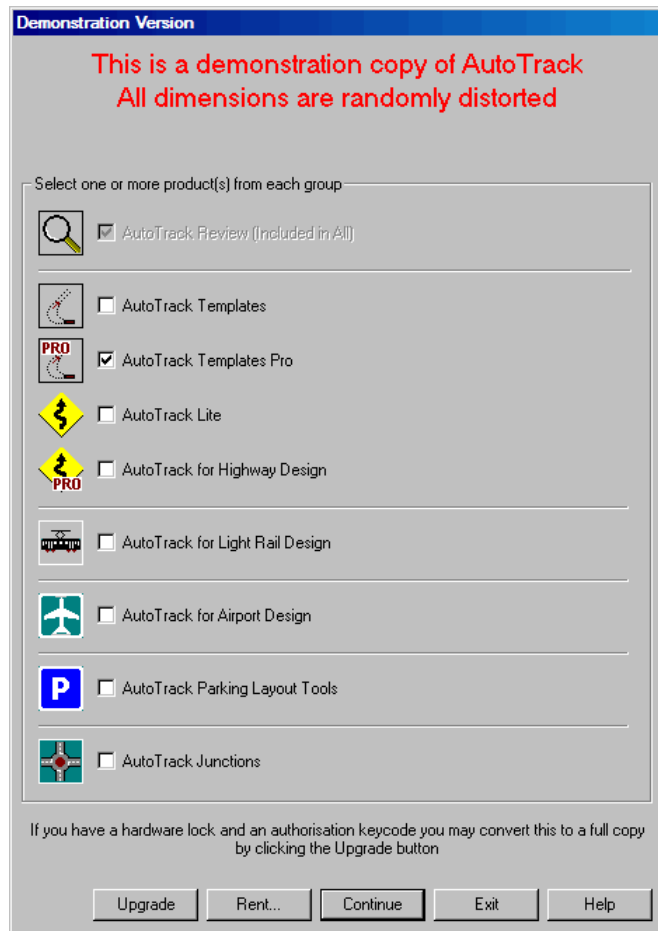


Demonstration Version dialog

1. Select the product(s) that you wish to evaluate.
22. To evaluate the selected product(s) click **Continue**.
23. If you want to rent a copy click **Rent**. This will display the [Rental Version dialog ^{\(1820\)}](#), if this is available in your region, and allow you to purchase time in weekly blocks.
24. If you have already purchased a copy and want to activate a supplied hardware lock then click **Upgrade**.
25. If you want to buy a copy then click **Upgrade**. This will either display the online purchasing dialog, if this is available in your region, or details of how to order.

Rental Version dialog ⁽¹⁸²⁰⁾


This dialog only appears if you are using a rented copy of AutoTrack. Rental copies are managed by a licence and the text at the top indicates the status of that licence. The licence is installed on and applies to only one computer at a time but can be moved between computers as often as you wish.

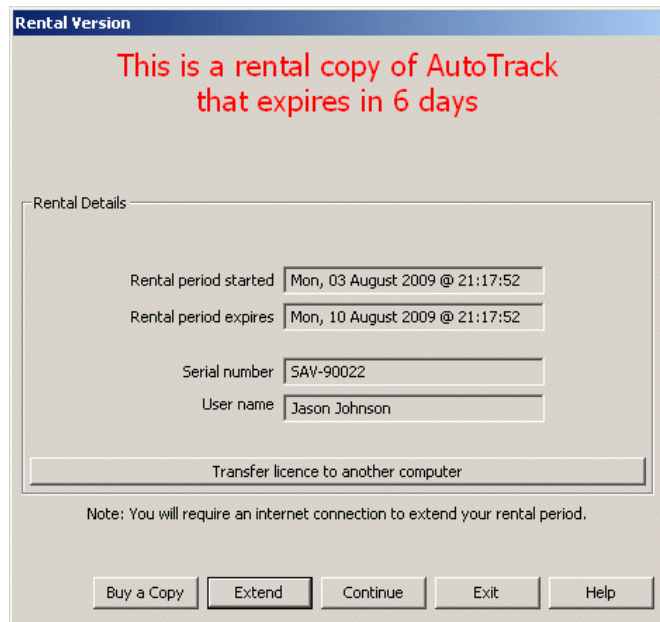

Rental Version dialog

1. If the licence is valid then click **Continue** to use the software.
 26. To buy time click **Rent**. If you already have a rental licence this button will show as **Extend**. This will display the Online Rental dialog and allow you to buy or extend your rental period.
 27. To buy a copy of AutoTrack click **Upgrade**. This will either display the online purchasing dialog, if this is available in your region, or details of how to order.
 28. If you have a rental licence on your computer then you may move the rental licence to another computer by clicking **Transfer licence to another computer**. The [Transfer Rental Licence dialog ^{\(1850\)}](#) will appear.
 29. If you do not currently have a rental licence on your computer you can retrieve and activate a transferred licence by clicking **Retrieve licence**. The [Retrieve Rental Licence dialog ^{\(1840\)}](#) will appear.
-


Transfer Rental Licence dialog (1850)

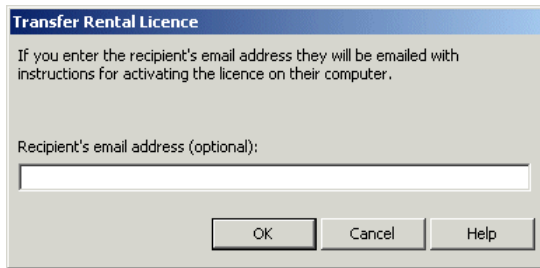

Transfer Rental Licence dialog

1. If you would like us to email the recipient(s) with details of how to retrieve the licence then enter their email address here. You may enter several email addresses separated by semi-colons (;). Click **OK**.
30. Your serial number and a passkey will be displayed; use these to activate the licence on any other computer.

Retrieve Rental Licence dialog (1840)

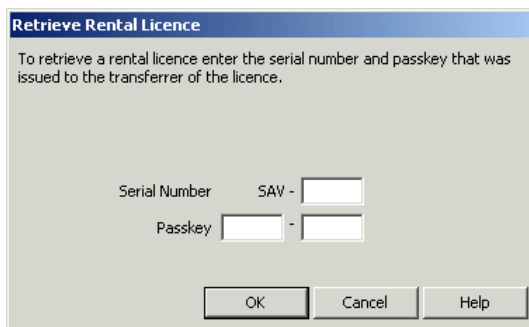

Retrieve Rental Licence dialog

1. Enter the serial number and passkey provided by the person transferring the licence. Click **OK**.

Note

The original purchaser and anybody who extends the licence period will be emailed each time the licence is transferred. This is for information only and helps ensure that they are able to locate the licence.


Running AutoTrack in AutoCAD

AutoTrack can either be run from within an AutoCAD session or from the Taskbar Start Programs menu.

To run AutoTrack from the Taskbar Start Programs Menu




Start button

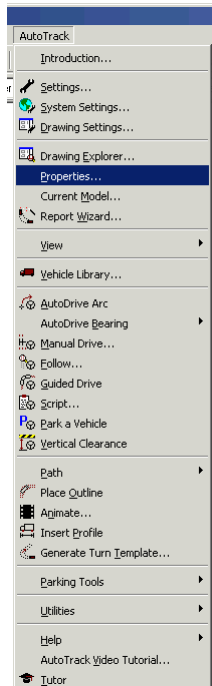

AutoTrack menu

1. Click on the **Start** button on the Taskbar and select **AutoTrack for AutoCAD 2011** (or your alternative CAD system) from the Programs, AutoTrack menu or click on the desktop icon **AutoTrack for AutoCAD 2011**.
2. The first time the software is run, if AutoTrack cannot find a valid licence, the Welcome dialog will appear with options to run a full, rental or demo version. Select the required version.
3. If you are running a demo copy then you will see the [Demonstration Version dialog](#) ⁽¹⁸⁰⁰⁾. Select which product you wish to evaluate and click **Continue**. If necessary your menus will be reconfigured.
4. AutoTrack paths are only visible to non-AutoTrack users if proxy graphics have been saved with the drawing (for more information, refer to [Viewing AutoTrack paths in AutoCAD if you don't have AutoTrack](#)). In order for these proxy graphics to be saved, several AutoCAD system variables need to be set correctly. If they are incorrect when you start AutoTrack they will be changed and you will be advised on the command line.
5. You will now be placed in the AutoCAD drawing editor. And the AutoTrack menu and toolbar should be visible.

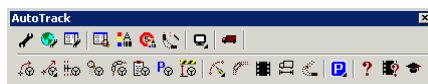

AutoTrack toolbar (appearance varies)

6. If the toolbar is not visible select **Show Toolbar** from the AutoTrack drop down menu.

To run AutoTrack from within AutoCAD


1. Run AutoCAD as you normally would.
31. If your system has been set up correctly AutoTrack should be on the top menu bar. AutoTrack is not yet loaded but will be as soon as you select an AutoTrack command. If the toolbar is not visible then you can select **Show Toolbar** from the AutoTrack drop down menu to display it.
32. Click any AutoTrack button to load AutoTrack. If you are running a network version for the first time, you may get a Hardware Lock warning. Just confirm that you are running a network version and proceed. If AutoTrack fails to find the hardware lock, edit your Network Settings and enter the IP address of the Licence Server.

Note

By default only the main AutoTrack toolbar is enabled with the other functions available as flyouts. If you prefer to work with the flyouts permanently displayed then click the relevant main toolbar buttons to display them and leave them open when you close AutoCAD. Alternatively on versions of AutoCAD prior to 2006 you may go to View, Toolbars and check the AutoTrack toolbars that you require.

To load and run AutoTrack for AutoCAD manually

1. Run AutoCAD as you normally would.
2. Select **Load Application** from the **Tools** menu in AutoCAD or type **APPLOAD** at the command line. The Load Application dialog will appear. The dialog shown is for AutoCAD 2002 but other platforms are similar.

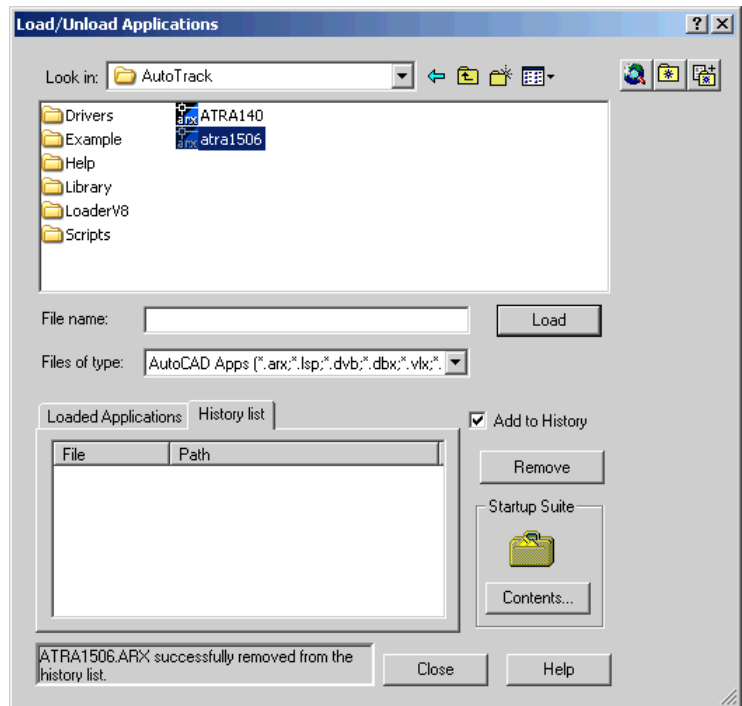

Load Application dialog (AutoCAD 2002)

3. Browse to the AutoTrack application directory and select the ARX file appropriate to your CAD system as follows:-
 - AutoCAD R14 and derivatives use `ATRA140 .ARX`
 - AutoCAD 2000/2000i and derivatives use `ATRA150 .ARX`
 - AutoCAD 2002 and derivatives use `ATRA1506 .ARX`
 - AutoCAD 2004 and derivatives use `ATRA160 .ARX`
 - AutoCAD 2005 and derivatives use `ATRA161 .ATX`
 - AutoCAD 2006 and derivatives use `ATRA162 .ATX`
 - AutoCAD 2007 and derivatives use `ATRA170 .ATX`
 - AutoCAD 2008 (32-bit) and derivatives use `ATRA171 .ATX`
 - AutoCAD 2008 (64-bit) and derivatives use `ATRA17164 .ATX`
 - AutoCAD 2009 (32-bit) and derivatives use `ATRA172 .ATX`
 - AutoCAD 2009 (64-bit) and derivatives use `ATRA17264 .ATX`

AutoCAD 2010 (32-bit) and derivatives use `ATRA180.ATX`

AutoCAD 2010 (64-bit) and derivatives use `ATRA18064.ATX`

AutoCAD 2011 (32-bit) and derivatives use `ATRA181.ATX`

AutoCAD 2011 (64-bit) and derivatives use `ATRA18164.ATX`

4. Click the **Load** button. AutoTrack will load.
5. Now type **AUTOTRACK** on the command line.
6. If you have installed a demo copy then you will see the [Demonstration Version dialog](#) ⁽¹⁸⁰⁰⁾. Select which product you wish to evaluate and click **Continue**. If necessary your menus will be reconfigured.
7. AutoTrack should now be visible on the top menu and the toolbar should also be visible. If the toolbar is not visible then you can select **Show Toolbar** from the AutoTrack drop down menu to display it.
8. Click any AutoTrack button to load AutoTrack. If you are running a network version for the first time, you may get a Hardware Lock warning. Just confirm that you are running a network version and proceed. If AutoTrack fails to find the hardware lock edit your Network Settings and enter the IP address of the Licence Server.

Note

By default only the main AutoTrack toolbar is enabled with the other functions available as flyouts. If you prefer to work with the flyouts permanently displayed then click the relevant main toolbar buttons to display them and leave them open when you close AutoCAD. Alternatively on versions of AutoCAD prior to 2006 you may go to View, Toolbars and check the AutoTrack toolbars that you require.

Viewing AutoTrack paths in AutoCAD if you don't have AutoTrack

In the AutoCAD version of AutoTrack the path entity is a custom object that is calculated and drawn by AutoTrack. Systems must therefore have AutoTrack installed in order to update and maintain these objects.

AutoCAD caters for drawings that contain custom objects without their authoring application being present using a system called proxy graphics. Proxy graphics are similar to an anonymous block containing an exploded version of the custom object. However, the proxy graphics will only be visible if certain system variables are set correctly on both the authoring and receiving systems.

Authoring system

- In order for proxy graphics to be saved with the drawing the authoring system must have the system variable `PROXYGRAPHICS` set to 1 and `INDEXCTRL` set to 3. When you start AutoTrack these are set along with `PROXYSHOW` set to 1 and `DEMANDLOAD` set to 3.

Receiving system

- If the receiving system has AutoTrack installed and the startup system setting **Load AutoTrack when opening drawing containing AutoTrack data** is switched on, AutoTrack data will be visible just like any other entity. Likewise, if the [AutoCAD object enabler](#) is installed then any AutoTrack data will be visible. For more details of the object enabler refer to [AutoCAD object enabler](#).
 - If the receiving system either does not have AutoTrack installed, or has AutoTrack installed but **Load AutoTrack when opening drawing containing AutoTrack data** is switched off, AutoCAD will report the missing application only if the system variable `PROXYNOTICE` is set to 1. This prompt may give the user options **Show proxy graphics** and/or **Do not show proxy graphics**. Note however that if proxy graphics have not been saved with the drawing (see above) then even opting to **Show proxy graphics** will not make them visible. Note also that if the default was **Do not show proxy graphics** and you select **Show proxy graphics** then you will need to issue a `REGEN` in order to see the objects.
 - If you decide not to show the proxy graphics at the start then setting `PROXYSHOW` to 1 will make them visible after the next `REGEN` if they are saved in the drawing.
-


Running AutoTrack in MicroStation

AutoTrack can either be run from within a MicroStation session or from the Taskbar Start Programs menu.

To run AutoTrack from the Taskbar Start Programs menu...




Start button

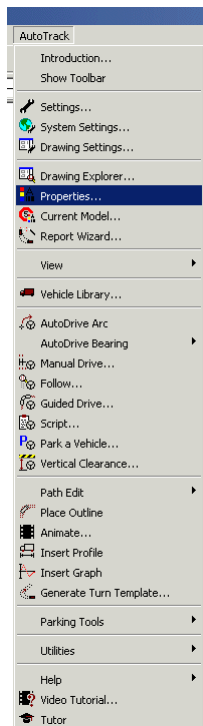

AutoTrack menu

1. Click on the Start button on the Taskbar and select **AutoTrack for MicroStation V8i** (or your alternative CAD system) from the Programs, AutoTrack menu or double-click on the desktop icon **AutoTrack for MicroStation V8i**.
2. Create and/or open a drawing.
3. The first time the software is run, if AutoTrack cannot find a valid licence, the Welcome dialog will appear with options to run a full, rental or demo version. Select the required version.
4. If you have installed a demo copy then you will see the [Demonstration Version dialog](#) ⁽¹⁸⁰⁰⁾. Select which product you wish to evaluate and click **Continue**. If necessary your menus will be reconfigured.
5. You will be placed in the MicroStation drawing editor. AutoTrack should be on the Applications menu and the tool frame should also be visible docked on the left.

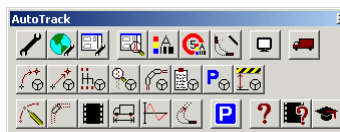

AutoTrack toolframe (Appearance varies)

6. Click any AutoTrack button to load AutoTrack. If you are running a network version for the first time, you may get a Hardware Lock warning. Just confirm that you are running a network version and proceed. If AutoTrack fails to find the hardware lock edit your Network Settings and enter the IP address of the Licence Server.

To run AutoTrack from within MicroStation...

1. Run MicroStation as you normally would.
2. Create and/or open a drawing.
3. If you have installed a demo copy then you will see the [Demonstration Version dialog](#) ⁽¹⁸⁰⁰⁾. Select which product you wish to evaluate and click **Continue**. If necessary your menus will be reconfigured.
4. If your system has been set up correctly AutoTrack should be on the **Applications** menu. The AutoTrack tool frame may also be visible. AutoTrack is not yet loaded but will be as soon as you select an AutoTrack command.
5. Click any AutoTrack button to load AutoTrack. If you are running a network version for the first time, you may get a Hardware Lock warning. Just confirm that you are running a network version and proceed. If AutoTrack fails to find the hardware lock edit your Network Settings and enter the IP address of the Licence Server.

Note

By default only the main AutoTrack tool frame is enabled with the other functions available as flyouts. If you prefer to work with the flyouts permanently displayed then go to Tools, Toolboxes and check the AutoTrack toolbars that you require.

To load and run AutoTrack for MicroStation manually...


1. Run MicroStation as you normally would.
2. Select MDL Applications from the Utilities menu.
3. Look for **ATRACK** in the list of Available Applications.
4. If the application is listed then highlight it and click **Load**. Close the MDL Applications dialog.
5. If the application is not listed then click the **Browse** button and look in the `LOADER` subdirectory (`LOADERV8` on MicroStation V8) of the AutoTrack installation directory for the file `ATRACK.MA`. Highlight the file and click **OK** followed by **Load**.
6. If you have installed a demo copy then you will see the [Demonstration Version dialog](#)⁽¹⁸⁰⁰⁾. Select which product you wish to evaluate and click **Continue**. If necessary your menus will be reconfigured.
7. AutoTrack should now be visible on the top menu and the toolbar should also be visible.
8. Click any AutoTrack button to load AutoTrack. If you are running a network version for the first time, you may get a Hardware Lock warning. Just confirm that you are running a network version and proceed. If AutoTrack fails to find the hardware lock edit your Network Settings and enter the IP address of the Licence Server.

Note

By default only the main AutoTrack tool frame is enabled with the other functions available as flyouts. If you prefer to work with the flyouts permanently displayed then go to Tools, Toolboxes and check the AutoTrack toolbars that you require.

The New Features dialog (1975)

If you have an internet connection then you will see the New Features dialog when you run AutoTrack. If you do not see the dialog then it may be because it has been switched off. In this case select **Show New Features** from the AutoTrack, Help drop down menu.

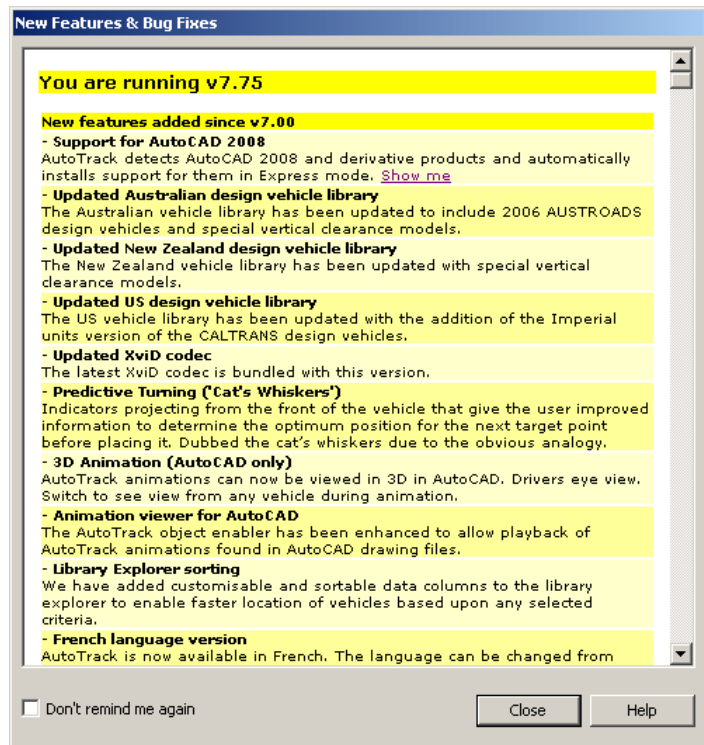


New Features dialog

1. If you are installing AutoTrack for the first time the main window lists the new features add to this major release, e.g. if you are installing v8.9 it will list all new features from version 8.0.
2. If you have just updated from an earlier version the main window lists the new features available since the last version you used. Thus if you update from version 7.0 it will list all new features from that version.
3. If you don't want to be reminded of new features again then tick **Don't remind me again**. You can always see check the list again by selecting **Show New Features** from the AutoTrack, Help drop down menu.
4. Some of the items may include links to video clips. To view these simply click the **Show me** link.

The Getting Started dialog (not AutoTrack Templates) (1900)

For those who use AutoTrack infrequently we have created the Getting Started dialog. By default this appears when you first run the program from the desktop icon.

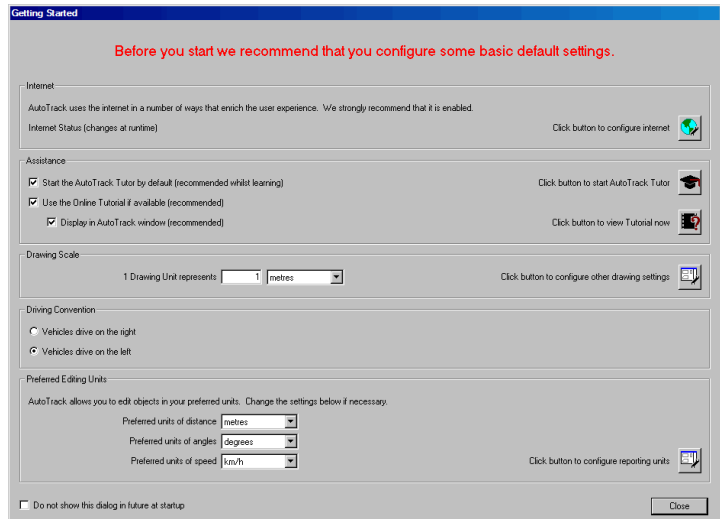

Getting Started dialog

1. At the top of the screen is the Internet status. AutoTrack provides extra functionality via the internet and we strongly recommend that it is enabled. If the status indicates that there is a problem then click on the **System Settings** button to make changes.
2. Below that is the Assistance section. The AutoTrack Tutor is not new but now you can have it run at startup; tick **Start the AutoTrack Tutor by default**. There is a static tutorial provided with the product but for the most up to date information and advice we recommend that you access the online tutorial by ticking **Use the Online Tutorial if available**. If you tick **Display in AutoTrack Window**, the tutorial will appear in a dialog frame, otherwise it will run in your preferred browser. Click on the **Tutor** button or **Video Tutorial** button to start these features.
3. Below that is possibly the single most important settings, **Drawing Scale**. Enter your preferred scale or click the **Drawing Settings** button to configure other drawing settings.
4. The **Driving Convention** is set based upon your regional settings. You may change it if it is wrong.
5. The **Preferred Editing Units** control the units in which data is displayed. If you also wish to view or change the Reporting Units then click the **Drawing Settings** button.
6. When you become proficient with AutoTrack you may wish to disable the Getting Started dialog by ticking the box **Do not show this dialog in future at startup**. You can always display it again by selecting **Getting Started** from the AutoTrack drop down menu.



System Settings button



Tutor button



Video Tutorial button



Drawing Settings button

A few do's and don'ts

We have designed AutoTrack to support and interact appropriately with as many of the features of the host CAD system. However, there are a few recommended do's and don'ts that you should bear in mind.

AutoCAD version

- **Do not** save only exploded AutoTrack paths if you are likely to need to edit them in the future.

MicroStation version

- **Do not** save only exploded AutoTrack paths if you are likely to need to edit them in the future.
 - **Do not** unlock or edit the AutoTrack cells using other than AutoTrack. Each AutoTrack path is held in one or more specially named locked cells (belonging to the same graphic group) to prevent it being manipulated such that the results are inconsistent with the vehicles capabilities. Unlocking or editing cells will have unpredictable results.
 - **Do not** try to edit AutoTrack data in reference drawings - AutoTrack can only access data in the master drawing.
-

Introduction

AutoTrack's power and range of features has grown over the years and it is now no longer a single program but a suite of vehicle swept path prediction programs. It was originally developed to meet the need for a means of accurately predicting the space needed to manoeuvre large articulated vehicles. Nowadays, the program can model almost any conceivable vehicle type including vehicles with complex steering arrangements, aircraft and now, following the recent integration of AutoTram, light rail vehicles.

What AutoTrack can and can't do

Capabilities

AutoTrack integrates completely with your CAD system adding functions that allow you to model vehicle behaviour. You simply select from a wide variety of predefined vehicles and 'drive' them through required manoeuvres on-screen. If the required vehicle is not already defined then facilities are provided to define the vehicle and add it into one of the existing libraries for future use.

Note

If you are a new AutoTrack user, or have migrated from a previous version, we strongly recommend that you view the demonstration video supplied on the AutoTrack CD to gain an overview of the product. Then, for a hands-on introduction to using the program refer to the section entitled Worked Example.

Features

A number of features have been incorporated to simplify the user's task in "driving" a vehicle in this manner without the benefit of the more direct sensory feedback that would be experienced driving the vehicle for real.

It should be noted that the aim of the program is to provide accurate swept path predictions for different types of vehicles and not precise simulations of driving conditions for those vehicles. Thus, the controls have been designed with the emphasis on ease of use rather than realism.

Limitations

Like any engineering design program, AutoTrack has limitations. In fact, the list of factors that AutoTrack ignores is extensive and includes

dynamic effects, wind effects, acceleration and deceleration, sloping road surfaces and slippery road surfaces.

Whilst these factors are by no means irrelevant, if we asked you to supply a weather report, details of the condition of each tyre, a road friction coefficient and full details of the suspension you would probably give up and go back to using templates!

The fact is that AutoTrack is just like any other engineering program in which you design for idealised situations and apply safety factors to allow for real life variations.

This is exactly the way we recommend you use AutoTrack. Use the most onerous vehicles likely in a particular situation and then allow a margin for error on the results. The acceptable margin for error is something for you to assess - if you are lucky it may be the subject of local design guidelines.

Do not expect that just because a particular vehicle in the AutoTrack library can perform a given manoeuvre on your desktop you will be able to replicate it precisely in reality.

Do not assume that any of the AutoTrack defaults are recommendations and if you have a reliable source of data, use it.

It all boils down to USE YOUR ENGINEERING JUDGEMENT.

Migrating from WinTrack

Due to restrictions imposed by Windows Vista support AutoTrack can no longer read WinTrack files directly. If you need to migrate WinTrack files for use with AutoTrack you should install version 7.60 or earlier, open the file and save it. The resulting file supports almost all WinTrack features. Features not supported include:-

- Speed, hands-off and stationery steering reports (planned for a later release)
- Full thickness tyre tread report (although tyre tread reports are read in as normal outer face wheel tracks if there is no outer face report defined)
- Alternative direction symbol shapes (only the chevron shape)
- Automatic grid spacing (however grid spacing may be specified)
- Origin symbol (replaced by axes symbol at bottom left of screen)

Reading pre-v5 AutoTrack libraries

Due to restrictions imposed by Windows Vista support AutoTrack can no longer read library files created using version of AutoTrack prior to version 5. If you need to convert an earlier format library file you should install version 7.60 or earlier, open the file and save it. The resulting file can be read in all versions of AutoTrack.

How to use AutoTrack

AutoTrack is really very simple to use; in most cases you will simply specify your settings, select a vehicle from one of the many provided, position and orient it on your drawing and then drive it through your drawing on-screen. If you need a vehicle that is not listed then you can

create it, add it to your own vehicle library and use it just like those provided.

Each of these is described in detail in the following chapters.

Settings

How you use AutoTrack depends to a large extent upon what you want to do with it. The system is set up with default settings appropriate for a “typical” use. You will need to decide whether these are appropriate for your needs and change them if necessary.

The way a vehicle behaves is controlled partly by the vehicle parameters and partly by the environment in which it is driven. Vehicles once defined should normally be regarded as fixed. The environment settings however can and should be modified to suit your particular situation.

There are various drive modes available each of which can be used interchangeably. Each is appropriate for a particular use and you will need to decide which is best for your needs and indeed this may come down to a simple preference. All but one of the drive modes also have settings that control the way they work.

One of the most frequent causes of problems is that AutoTrack is working in one set of units (say, metres) while your CAD system is working in another (say, millimetres); so before you start work make sure that you set the AutoTrack scale to match your drawing (Refer to Drawing Settings: Scale).

AutoTrack calculates swept paths to a high degree of accuracy based upon the stated algorithms. However, you may wish to allow for the driver error or real world imperfections by modelling a safety or clearance envelope (Refer to Drawing Settings: Reports: Offset Envelope 1).

Modelling rigid vehicles

All drive modes are well suited to modelling rigid vehicles but AutoDrive is likely to give the quickest and best results.

Modelling articulated semi-trailer vehicles

Articulated lorries are best modelled using AutoDrive. Existing users may prefer Manual Drive which requires a degree of skill when reversing. Follow and Script may be appropriate if you are only modelling forwards manoeuvres. If you want to model reverse manoeuvres Script is unlikely to be of much use since it has no intelligence to deal with the over-articulation that will rapidly develop.

Modelling drawbar and multi-trailer vehicles

Multi-trailer vehicles that have more than one articulation point are inherently very unstable when reversing and for this reason they are rarely reversed. We do not encourage the use of AutoTrack to analyse multi-trailer vehicles performing reversing manoeuvres since it can give a false impression of the suitability of the design. Within AutoTrack, AutoDrive will give you good results.

Modelling aircraft

Taxiing aircraft are best modelled using either AutoDrive or Follow. Script may also be appropriate if you want to create templates of well-defined simple manoeuvres.

Follow will be appropriate if you want to model an aircraft following existing apron markings. If you want pilot's eye tracking then you will need to change the Forwards Path Point to Pilot / Driver (Refer to Drawing Settings: Tracking Point). This must be done **before** you start driving. If your vehicle fails to negotiate a turn then you could try lengthening the segment length (Refer to System Settings: Follow Drive). The further the pilot is offset from the effective front axle the greater this value may need to be.

AutoDrive may be more appropriate if you are trying to determine the position of the apron markings. You will probably use the Forwards Arc option in AutoDrive which tries to drive with the minimum turn arcs and only use Forwards Bearing for long straight sections.

Modelling combination steered vehicles

Linkages have little effect on the most appropriate drive mode. However, rear steered vehicles do not have the benefit of Hands-Off in Manual Drive mode or Forwards Bearing in AutoDrive.

It is only possible to link entire axle groups so the best way to model a single linked axle in a multi-axle group is as a self-steered axle. Set the axle group type to **Fixed** and check the **Self-Steered** box on the axle that is linked. By default, with a self steered friction factor of 0.0, the effective axle position will be calculated on the basis of the remaining fixed axles and the wheels on the self-steered axle will turn about the centre of turn of these axles.

Modelling vehicles with pushing tractors

All vehicles must have a single tractor unit but it may be at the front, at the back or indeed, in the middle. In essence the behaviour of such a vehicle travelling forwards is equivalent to the reverse of the vehicle going backwards.

Modelling vehicles with steerable couplings

Some vehicles, notably certain quarrying trucks, have no steerable axles but instead are steered by changing the articulation angle of a coupling. These vehicles can be modelled using the active steerable coupling type.

Modelling Active Hitches

Warehouse vehicles sometimes make use of vehicles with active hitches. Active hitch refers to a rear drawbar axle which is linked to the front axle or coupling. Vehicles that use this type of axle can only be reversed using Manual Drive.

Development & planning scenarios

AutoTrack may be used not only to test scenarios but also to develop alignments from scratch. Used in this way you may find the need to limit the steering angle. This can be done in several ways but arguably the most useful in a development situation is by turn radius. For example, if

you were to adopt a standard curve radius for a residential development; this radius can then be set as the limiting inner wheel radius for all turns and all vehicles.

During the early planning stages of projects you may find that the good old turn template comes into its own. You could use the template wizard to generate templates for important vehicles such as refuse trucks and emergency vehicles and use them to form the basis of your road layouts. As you refine your design you can then use more sophisticated tools to test critical locations. You should bear in mind that turns generated using Script can be edited whereas those generated using the template wizard cannot.

Modelling the effects of super elevation and side friction

AutoTrack now allows you to restrict the turning radius according to super elevation and side friction. This, in conjunction with design speed, means that you can now more accurately predict higher speed paths through junctions or roundabouts. We do however urge caution before modelling high speed manoeuvres using AutoTrack; the dynamics of vehicle motion are too complex for a program of this type to fully model so the fact that AutoTrack can generate a theoretical path does not necessarily mean that it can be driven safely. USE YOUR ENGINEERING JUDGEMENT.

Modelling trams and light rail vehicles

You can only model fully rail guided vehicles such as trams using Guided Drive which is available in the light rail version. Generally speaking because the path of the tram is well defined there are fewer options. However because most new tram networks use new tram designs (albeit often heavily based upon existing trams) it is more likely that you will need to define your own vehicles.

Modelling conveyor systems

The Rail version can also be used to model certain types of conveyor systems such as are found in vehicle assembly plants.

Fastest line through roundabouts

Follow can be used to check the fastest line through roundabouts. Define the path through the roundabout as a AutoCAD spline, pline or MicroStation complex chain. Set the design speed to the highest permitted and use Follow to generate a non-editable path. AutoTrack will reduce the speed to the maximum possible. The current version does not take into account acceleration and deceleration but it does allow for dynamic effects.

Checking vertical clearances

The Vertical Clearance drive mode may be used to check ground clearance and / or impacts with overhead features such as bridges. Multiple axles are modelled assuming suspension movement. However, the results should be regarded as approximate since the effects of variations in suspension and loading can have a significant effect.

What's new in version 8?

Version 8 is the first 64 bit version of AutoTrack and is designed to run on 64 bit AutoCAD 2008, 2009 & 2010 and 64 bit Windows XP and Windows Vista. In addition we have managed to add a number of new features listed below. All files created with previous versions are fully upwardly compatible.

Mouse wheel controlled secondary steering (Wishlist item)

Control secondary steering at drive time using the mouse wheel.

Driver controlled secondary steering angle (Wishlist item)

Now you can control the secondary steering angle (not just the linkage) at drive time.

Rent AutoTrack online

You can now rent AutoTrack online in weekly periods.

Italian and Portugese versions

AutoTrack is now available in two new languages, Italian and Portuguese.

Improved grips with grip tips

All CAD hosts now have custom grip shapes for different operations. All grips have optional grip tips.

Ability to share data

A new single click option lets you share vehicle libraries or parking standards with others on your network.

Improved AutoLoad options

A new AutoLoad settings dialog lets you specify automatically loaded data by type, Savoy, Shared, Public, Personal and Other.

Directories settings dialog

A new Directories settings dialog lets you see where your data is being saved and specify the shared directory.

Internet settings dialog

A new Internet settings dialog lets you control how your system accesses the internet.

Significant speed improvements

Many features have been speeded up including library loading.

3D animation in Microstation

3D animation is now available in MicroStation.

Improved path editing in MicroStation

The path editing functionality in MS has been improved and now matches the grip editing capabilities available in AutoCAD.

Support for Bentley PowerCivil v8i

AutoTrack detects Bentley PowerCivil v8i and automatically installs support for it in Express mode.

Optional printing of construction lines (Wishlist request)

A new View settings option lets you prevent the plotting of construction lines. This feature does not apply to MicroStation which has its own construction line plotting support.

Updated vehicle libraries

The two Spancrete bridge beam carriers in the Specialist vehicle library have been updated to include manual secondary steering.

More 3D vehicles have been added to the 3D Presentation Vehicle library. These include a school bus, a panel van, a rigid truck, a Hummer, a single deck bus and a VW Beetle.

Support for Bentley PowerCivil XM

AutoTrack detects Bentley PowerCivil XM and automatically installs support for it in Express mode.

Online vehicle libraries

Access hundreds more vehicles stored in our online database from the Library Explorer.

Optional use of 3D blocks

You can now control when AutoTrack uses 3D blocks (if available). Options are **Always**, **Never** and **When Recording**.

Support for AutoCAD 2010 & all derivatives

AutoTrack detects AutoCAD 2010 and all verticals and automatically installs support for them in Express mode.

Improved use of program file and data areas

Settings and menus are now stored in the application data folder instead of the program files folder.

Resizable dialogs

The Updates, New Features & Drawing Explorer dialogs are now resizable.

Support for MicroStation V8i

AutoTrack detects Microstation V8i and automatically installs support for it in Express mode.

Support for Microstation PowerDraft (Wishlist item)

AutoTrack detects Microstation PowerDraft 7.1 to V8i and automatically installs support for it in Express mode.

Support for Bentley MX ROADS

AutoTrack detects Bentley MX ROADS XM and automatically installs support for it in Express mode.

Driver controlled variable ratio steering linkages (Wishlist prize winner)

The linkage ratio can be adjusted at each target point.

Support for multi-axle tandem bogies (Wishlist item)

You can now model units with identical or non-identical multi-axled tandem bogies. Each independent bogie has its own user-definable pivot offset.

Enhanced Turn on the Spot (Wishlist item)

It's now easier to disable turn transitions for the current step only – one button press. New Transition settings to ignore all turn transitions and automatically set the optimum turning angle at the start of a path and/or at changes of direction.

Improved control over library auto-loading

You can now switch off library auto-loading without having to remove the files and directories from the list.

Enhanced jet exhaust report

Aircraft jet exhaust contours may be shown individually, each with their own colour and line type attributes. They may also be filled in the AutoCAD version.

Enhanced servicing point report

Servicing points can be shown individually.

New path stretch function

Paths can now be stretched so that, instead of each target point moving independently of the others, now all target points prior to or following the current point can be moved together.

German language version

AutoTrack is now available in German. The language can be changed from within the software.

Spanish language version

AutoTrack is now available in Spanish. The language can be changed from within the software.

Rounded corners on body shapes

You can now define a radius for the front, rear and corners of the rectangle shape and for the front and corners of the tractor body shape.

Improved library explorer vehicle copy/move (Wishlist item)

The vehicle copy/move action in the Library Explorer has been changed to match that used in Windows Explorer. Also the copy naming has been revised so that only the top level copied object has the words "copy of" added.

Library explorer search function

A single click library search function with history. Search the vehicle name, description, source and notes.

French design vehicle library

The design vehicles recommended by Centre d'Etude sur les Reseaux, les Transports, l'Urbanisme et les construction publiques (CERTU) have been added.

Vehicle library updates (Wishlist item)

The Alberta design vehicles in the Canadian Design Vehicle library have been updated with rounded corners.

The European vehicle library has more mobile cranes.

New Realistic vehicle library

We have added a new library of vehicles with detailed 2D (plan view) and 3D outlines for use in presentations.

New US vehicle library (Wishlist item)

We have added a library of real (as opposed to design) US vehicles. Amongst other vehicle types the library includes fire trucks and refuse trucks.

Improved hatching (Wishlist item)

In order to help clarify forwards and reverse envelopes you can now specify cross hatching for reverse sections of a manoeuvre.

Updated XviD codec

The latest XviD codec (v1.2.1) is bundled with this version.

64-bit compatible

AutoTrack 8 is fully compatible with the 64 bit versions of both Windows Vista and Windows XP.

AutoCAD 2008 & 2009 compatible

The new version is natively compatible with both the 32 and 64-bit versions of AutoCAD 2008 & 2009. AutoTrack detects AutoCAD 2008 & 2009 and derivative products and automatically installs support for them in Express mode.

Play animations backwards

You can now play animations backwards as well as forwards.

Ackerman stub axles

Ackerman stub axles can now be modelled.

Driving convention

There has been a minor change to the way in which we specify the driver position. We used to specify which side of the vehicle the steering wheel was on and now we specify which side of the road you drive on.

Option to fix driver position

An option has been added to allow or prevent the driver or pilot from being moved to the opposite side of a vehicle in accordance with the prevailing driving convention.

Driver shown on vehicle diagram

The driver or pilot is now shown on the vehicle diagram when the **Show Datum** button is depressed.

Pilot location added to library explorer columns

The driver or pilot location can now be viewed as a data column in the Library Explorer.

Default values highlighted in Library Explorer

Where a data column value displayed in the Library Explorer has not been explicitly defined it is shown in red.

Vehicle library updates

The refuse vehicles in the European Vehicle library have been updated and several fire vehicles have been added. There have also been minor changes to the Specialist Vehicle library and the Airport library.

AutoTrack menu icons in SavoyCAD

The AutoTrack menus in SavoyCAD now have icons.

Improved silent install

The silent install now makes no changes to the user area of the registry if you opt to manually configure the software. This allows the software to be deployed when the users are not logged in.

AutoDrive Bearing alignment picking

If you don't know the angle you want to turn through when making a turn with AutoDrive Bearing you can pick a line on the drawing you want the vehicle to end up parallel or perpendicular to.

Cockpit tracking point

An alternative to the pilot's eye tracking point, the cockpit tracking point is always located on the centreline of the aircraft.

Animation acceleration & deceleration (Wishlist prize winner)

An option has been added for vehicles to slow down and speed up realistically at stops or changes in speed. Acceleration and deceleration rates may be changed.

Interchangeable camera angles

The 3D animation camera position can be changed during an animation between previously stored camera positions and/or driver's eye cameras on different paths.

Wing mirrors (Wishlist item)

You can now add default sized wing mirrors to a vehicle by ticking a single box. The dimensions and position can then be edited if required. The wing mirror location takes into account the driver position if one is specified.

Steering linkages by effective wheelbase

Specify linked steered axles by effective wheelbase as a function of articulation angle, steering angle and/or speed. Also allows you to specify different effective wheelbases for forwards and reverse manoeuvres.

Self steering direction

Specify self steered wheels for forward manoeuvres only, reverse manoeuvres only or in both directions.

Self steering tyre friction factor

Specify the friction contribution of self-steered axles. There is some evidence that, contrary to previous thinking, self steered axles do have an effect on the position of the cut in point. This feature allows you to specify their effect.

New features reminder

In response to a number of cases in which users were unsure of the new features added in an upgrade we have added a reminder dialog based upon user login names.

Tractor body shape

A new body shape has been added to better model the rather unique shape of articulated vehicle tractor units.

Driver / pilot

You can now add a driver at a default location by ticking a single box. The position can then be edited if required. The driver location takes account of the left/right driving convention.

Jet exhaust contour shape

A new shape has been added for jet exhaust contours. The shape allows exhaust temperature and velocity contours to be added by specifying just length and width of the shape.

Full width tyre tracks

An option has been added to show full width tyre tracks (instead of just the loci of the outer faces) for the outermost wheel of each axle. This is to help with modelling guided vehicles.

Steering graph added to report wizard

The steering and articulation graph report options have been added to the report wizard.

Improved Drawing Explorer

A **Replace All** button on the Drawing Explorer now allows you to copy properties to all paths at once.

User definable 3D animation colours

It is now possible to change the colours of individual vehicles in 3D animation.

Different default colours for forward and reverse (Wishlist item)

The forward and reverse reports now have different **default** colours making it easier to understand the manoeuvre.

GripTips in SavoyCAD version

GripTips, similar to ToolTips now appear as you hover over grips on AutoTrack entities in SavoyCAD. The tips list the coordinates of the grip, its type and the entity type.

Improved setup

A **Compact** setup type has been added to the existing **Express** and **Custom**. The new setup type allows you to auto-select the CAD systems but specify user defined options; very useful in silent remote installations.

Additions to aircraft library

The Bombardier DH Dash8 100 & 200 and nine Lektro aircraft tugs have been added to the aircraft library.

Animation single step back

You can now single step backwards as well as forwards through animations.

Updated Adobe Acrobat Reader

Adobe Acrobat Reader 8 is bundled with this version.

Support for AutoCAD 2011 & all derivatives

AutoTrack detects AutoCAD 2011 and all verticals and automatically installs support for them in Express mode.

AutoCAD Civil 3D 2011 specific features

Options added to project paths onto surfaces, generate vertical clearance paths on profile views directly and animate vehicles over surfaces in full 3D.

AutoCAD Ribbon (Wishlist item)

An AutoTrack Ribbon is included on all AutoCAD 2009, 2010 and 2011 based versions.

New Audit command

A new command that highlights possible inconsistencies in AutoTrack data and allows the designers to provide justification and explanatory comment.

AutoTrack Review

Some existing commands have been grouped with the new Audit command to create the AutoTrack Review feature set. Useful for validating AutoTrack work.

Danish design vehicle library

The design vehicles recommended by "Byernes trafikarealer, Haefte 1, Forudsætninger for den geometriske udførelse", published in 2000 by Vejdirektoratet have been added.

Finnish design vehicle library

The design vehicles recommended by "Tasoliittymät" published in 2001 by Tiehallinto have been added.

Czech design vehicle library

The design vehicles recommended by "Vlečné krivky pro overovani průjezdnosti prvku pozemních komunikací" published in 2004 by Centrum Dopravního Vyzkumu have been added.

Support for custom actions in install process (Wishlist item)

A switch has been added which allows users to run a named batch or executable file after the main install has finished. This has been provided mainly for use when deploying AutoTrack silently.

Custom layer naming conventions (Wishlist item)

You can now specify a user-defined base layer name for Savoy layering conventions.

Improved memory handling (Wishlist item)

AutoTrack now uses between 50% and 75% less memory, leading to improved performance on all platforms and particularly on the memory hungry AutoCAD Civil 3D 2010.

Fly-by camera control

A new fly-by camera control lets you view animations from any angle in real time.

Wing mirror views

Drivers eye animations optionally show the wing mirror view of the inside of the turn when reversing.

Drivers eye follows road

Drivers eye animations optionally have the driver focusing either on a point a specified distance in front of the vehicle or straight ahead.

Text on side of vehicle

Add your sponsors name to your animations.

Animation in AutoCAD improved

Animation in all AutoCAD versions has been considerably improved and is now much smoother.

Additional render modes (Wishlist item)

Three new render modes have been added. These are Realistic, Conceptual and Basic.

PDF vehicle data filename (Wishlist item)

The default filename for AutoTrack vehicle data printed to PDF file where the data relates to a single vehicle now includes the vehicle name.

Improved aircraft servicing points & vehicles

The aircraft version has a new tab on the unit details listing servicing points and servicing vehicles. This data is not available for all aircraft.

Aircraft safety zone report

The aircraft version has a safety zone report with customisable wing, fuselage and tail offsets.

Aircraft doors

The aircraft version has a new tab on the unit details listing passenger, cargo and service doors. This data is not available for all aircraft.

Helicopters

The aircraft library now contains a range of helicopters.

Manual layout

If the theory and algorithms used in AutoTrack are new to you then you may wish to read the section entitled Theory before using the program. Thereafter, the remaining sections cover day-to-day use of the program. We do however strongly recommend that you read the section entitled Worked Example which will give you a fast introduction to the program and get you productive as quickly as possible.

The troubleshooting section deals with some of the more common problems.

Notation conventions

Throughout this manual key depressions are shown enclosed by angle brackets thus enter <F> means type the letter F and <OR> means type the letters O and R.

Menu options or commands are printed in a **bold** font.

Messages displayed by AutoTrack are printed in *italics*.

Text that you should type and filenames are shown in a `courier` font.

All screen images and functionality descriptions are for AutoTrack running on Windows XP. The screen image may vary slightly on other platforms. If functionality is different for other platforms the variations are noted.

Mouse conventions

Windows allows mouse button functionality to be reversed for left handed users. AutoTrack features a similar option. Rather than repeatedly catering for all possible configurations we have adopted the convention of using the default functionality. Thus if you have configured your mouse for left handed use then for left mouse button read right mouse button and vice versa.

Default values

Throughout the program default values are displayed in red and have an asterisk alongside them. Enter any non-zero value to overwrite the default. Enter zero to reset them to the default.

Getting help

If the user manual is not available try one of the alternatives.

Context sensitive on-line help

The extensive context sensitive on-line help mirrors the manual, but has the powerful windows search facilities. To get help click the **Help** button on any dialog or press **F1**.

Help is also available from the drop down menus:-

Select **Help, AutoTrack Help** to get a structured breakdown of the help text.

Select **Help, About AutoTrack** to check the program module versions.

On-line assistance

If you find what you think is a bug and wish to email support for assistance select **Email Savoy Computing for assistance** from the **Help** menu.

You can check for updates by selecting **Check website for AutoTrack updates** from the **Help** menu.

Help tutor

The AutoTrack Tutor is an AutoTrack help window that is displayed permanently in a convenient location on your desktop. The text updates as you move through the program. You can enable the help tutor at any time by clicking the Tutor button on the AutoTrack toolbar. We recommend that you set it to remain in the foreground at all times.



Tutor button

Video tutorial

The AutoTrack video tutorial is a multi-media presentation designed to get you started with AutoTrack quickly. Video clips show you how to use AutoTrack to perform various tasks. It may be viewed as a continuous presentation or you may use the navigation buttons to view selected clips. We recommend that you use the online tutorial if you can.



Video Tutorial button

Settings

There are two types of settings, system and drawing. System settings apply to all drawings and are saved on the computer. Drawing settings apply within a drawing are saved with the drawing.

Settings Wizard


The Settings Wizard is design to help new and infrequent users to configure AutoTrack correctly. The wizard does not allow you to edit all settings but on every page there is an **Advanced** button that takes you to the Settings tabbed dialog.

Also on every page is a **Finish** button. This applies any changes made so far for the current session only. If you want to make the changes apply to future sessions then click **Next** until you get to the Finish page.



Settings button

1. Select **Settings** from the AutoTrack drop down menu or click the **Settings** button on the AutoTrack toolbar or type `ATRASETTINGS` on the command line. The Settings Wizard will appear.

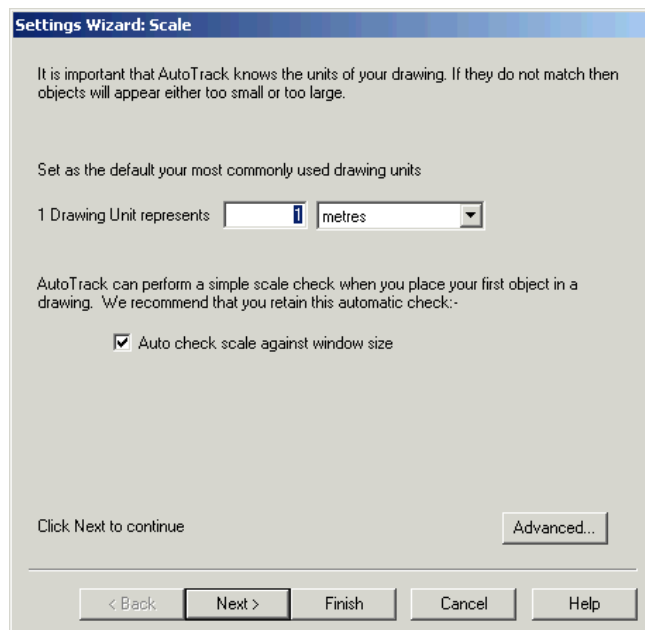

Settings Wizard: Scale

2. Click the **Advanced** button to go directly to the advanced settings dialog.
3. Click **Next** to move to the next page.

Settings Wizard: Scale (2400)

Settings Wizard: Scale

It is important that AutoTrack knows the units of your drawing. If they do not match then objects will appear either too small or too large.

Set as the default your most commonly used drawing units

1 Drawing Unit represents metres

AutoTrack can perform a simple scale check when you place your first object in a drawing. We recommend that you retain this automatic check:-

Auto check scale against window size


Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Settings Wizard: Scale

1. Set the drawing units.
2. We recommend that you tick **Auto check scale against window size** since this will warn you if your scale appears to be wrong.
3. Click **Next** to move to the next page.

Settings Wizard: Editing Units ⁽²⁴¹⁰⁾

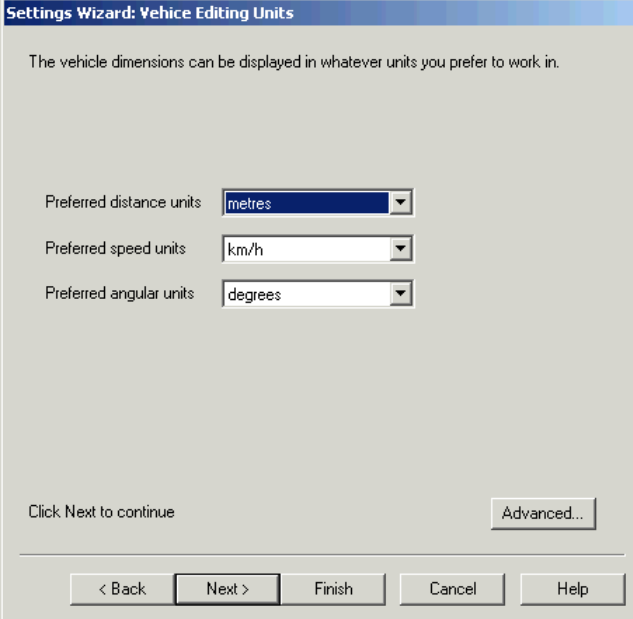


The screenshot shows a dialog box titled "Settings Wizard: Vehicle Editing Units". The main text reads: "The vehicle dimensions can be displayed in whatever units you prefer to work in." Below this, there are three dropdown menus: "Preferred distance units" set to "metres", "Preferred speed units" set to "km/h", and "Preferred angular units" set to "degrees". At the bottom left, it says "Click Next to continue". At the bottom right, there is an "Advanced..." button. The bottom of the dialog features a row of five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

Settings Wizard: Editing Units

1. The editing units determine the units used to display data.
2. Use the drop down list boxes to set your preferred units for distance, speed and angles.
3. Click **Next** to move to the next page.


Settings Wizard: Layers (2420)

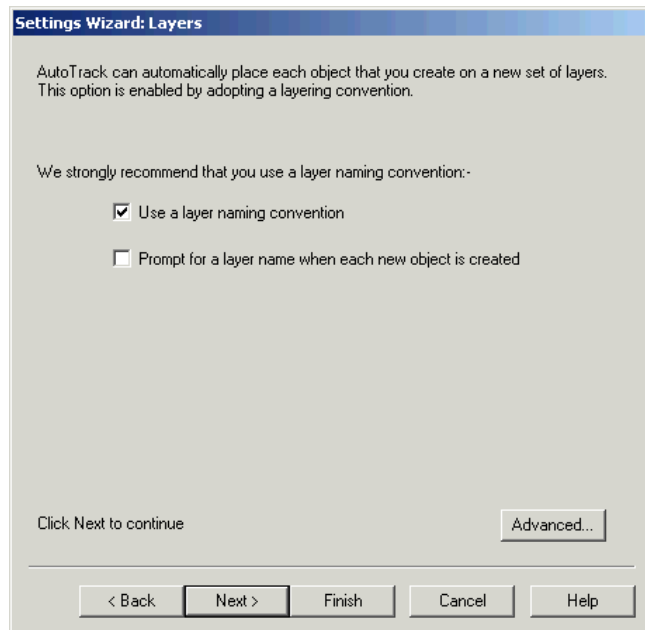

Settings Wizard: Layers

1. If you are using a CAD system that does not support layer naming then you will not see this page.
33. We recommend that you tick **Use a layer naming convention** so that objects you create are placed on separate named layers. Note that if you tick this option in the wizard it will set the Savoy Basic naming convention. If you want to set another convention click on the **Advanced** button and do so in the advanced **Layers** settings dialog.
34. Tick **Prompt for a layer name** to be offered the opportunity to change the layer name before the object is placed.
35. Click **Next** to move to the next page.

Settings Wizard: Turn Transitions (2440)

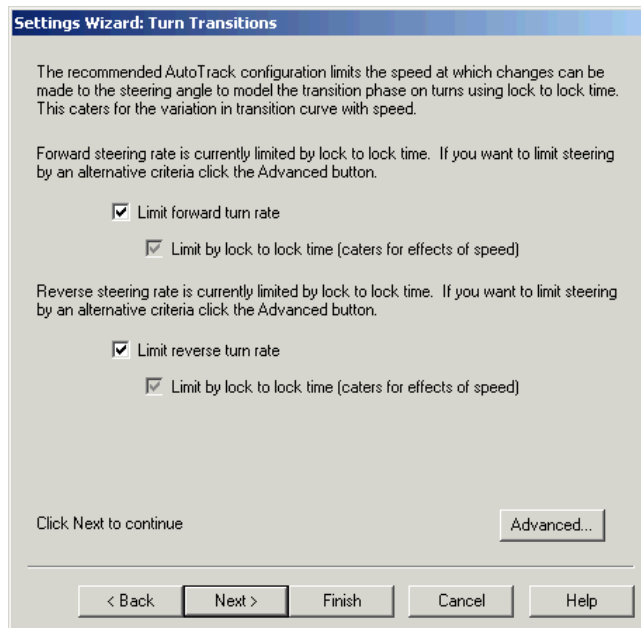

Settings Wizard: Turn Transitions

1. In reality it is not good driving practice to turn the steered wheels whilst the vehicle is stationary. We therefore recommend that you limit turn rates. To do this tick **Limit forward turn rate** or **Limit reverse turn rate**.
2. The most realistic way to limit turn rates is by lock to lock time. So if, for example, you tick Limit forward turn rate then the steering rate criteria is automatically set to **Limit by lock to lock time**. Likewise for Limit reverse turn rate.
3. You can remove steering rate limits by unticking Limit forward turn rate but if you want to adopt different limiting criteria click the **Advanced** button and do so in the advanced **Transitions** settings dialog.
4. Click **Next** to move to the next page.

Settings Wizard: Design Speed ⁽²⁴³⁰⁾

Settings Wizard: Design Speed

Depending upon the selected turn transition criteria, the design speed may affect how tightly the vehicle can turn. It will always affect the real-time animation.

You have chosen to limit turning by lock to lock time in one or both directions. The design speed therefore affects how tightly the vehicle can turn. The lower the speed the tighter the vehicle can turn.

Forwards design speed km/h

Reverse design speed km/h

Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Settings Wizard: Design Speed

1. The design speed can affect the turning capabilities of the vehicle if you have limited turning by lock to lock time.
2. Even if you have not selected speed related turn transitions the design speed will affect the animation speed.
3. Click **Next** to move to the next page.

Settings Wizard: Steering Limits ⁽²⁴⁵⁰⁾

Settings Wizard: Steering Limits

AutoTrack models the behaviour of vehicles as accurately as possible. It incorporates no safety factors or margins of any kind.

Steering is currently not limited. You may enable as many or as few of the following limits as you wish.

Limit steering to percent %

Limit steering to angle deg

Limit steering to radius m

Click Next to continue

Settings Wizard: Steering Limits


1. You can limit the steering in three ways mutually inclusive ways, i.e. you can switch them all on and AutoTrack will determine the most onerous case and use that.
2. Tick **Limit steering to percentage** and edit the value to prevent the steering from exceeded the stated percentage of its maximum lock capability.

Note

This is the only way to limit the steering lock in a vehicle independent way.

3. Tick **Limit steering to angle** and edit the value to prevent the steering lock exceeding a specified angle (in either direction).
 4. Tick **Limit steering to radius** and edit the value to prevent the steering lock exceeding a value that would cause the vehicle to turn tighter than the specified radius. Note that you can specify where the radius is measured, Inner wheel, Inner body, etc.
 5. Click the **Advanced** button to set these values in the Model Settings dialog (see [Drawing Settings: Model \(not Rail\)](#)).
1. Click **Next** to move to the next page.

Settings Wizard: Articulation Limits (2455)

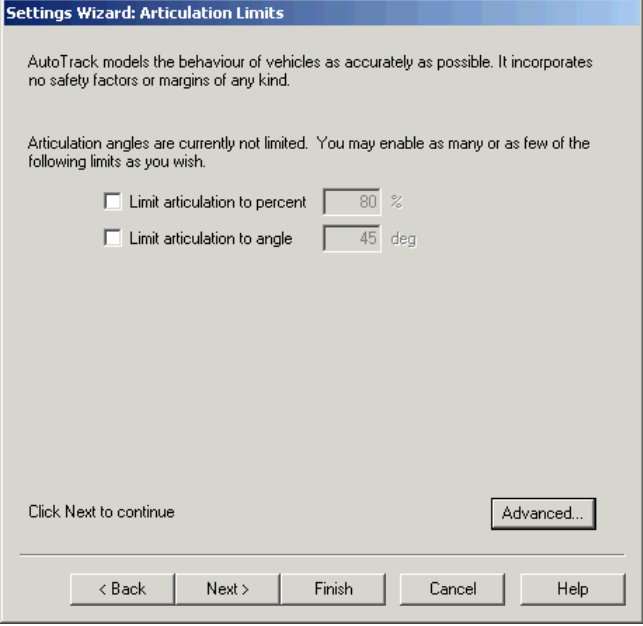

The screenshot shows a dialog box titled "Settings Wizard: Articulation Limits". The text inside reads: "AutoTrack models the behaviour of vehicles as accurately as possible. It incorporates no safety factors or margins of any kind." Below this, it says: "Articulation angles are currently not limited. You may enable as many or as few of the following limits as you wish." There are two options, both with unchecked checkboxes: "Limit articulation to percent" with a text box containing "80" and a "%" symbol, and "Limit articulation to angle" with a text box containing "45" and a "deg" symbol. At the bottom right, there is an "Advanced..." button. At the very bottom, there is a row of five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

Settings Wizard: Articulation Limits

1. You can limit the articulation angles in two ways mutually inclusive ways, i.e. you can switch them all on and AutoTrack will determine the most onerous case and use that.
2. Tick **Limit articulation to percentage** and edit the value to prevent the articulation angles from exceeding the stated percentage of their maximum capability.

Note

This is the only way to limit the articulation angles in a vehicle independent way.

3. Tick **Limit articulation to angle** and edit the value to prevent the articulation angles exceeding a specified angle (in either direction).
4. Click the **Advanced** button to set these values in the Model Settings dialog (see [Drawing Settings: Model \(not Rail\)](#)).
5. Click **Next** to move to the next page.

Settings Wizard: Dynamics (2460)

Settings Wizard: Dynamics

Your current design speed is high enough to cause discomfort to the occupants of a vehicle if it turns at it's geometric minimum radius.

Under these circumstances we recommend that you limit the turn radius based upon the road design and vehicle speed:-

Limit turning for dynamic effects

Use recommendations from: AASHTO Handbook 2004

Design context: Low speed urban streets [Exhibit 3-16](M)

Click Next to continue


Advanced...

< Back Next > Finish Cancel Help

Settings Wizard: Dynamics

1. If you are modelling turns at faster than about 15kph dynamic effects become significant. When you make a turn at higher speed the limiting criteria may be driver comfort rather than vehicle geometry. We recommend that you tick **Limit turning for dynamic effects** when modelling higher speed turns.
2. The wizard only allows you to select from published criteria, if you want to define your own criteria click the **Advanced** button and do so on the advanced **Dynamics** settings dialog.
3. Click **Next** to move to the next page.

Settings Wizard: Updates (2470)

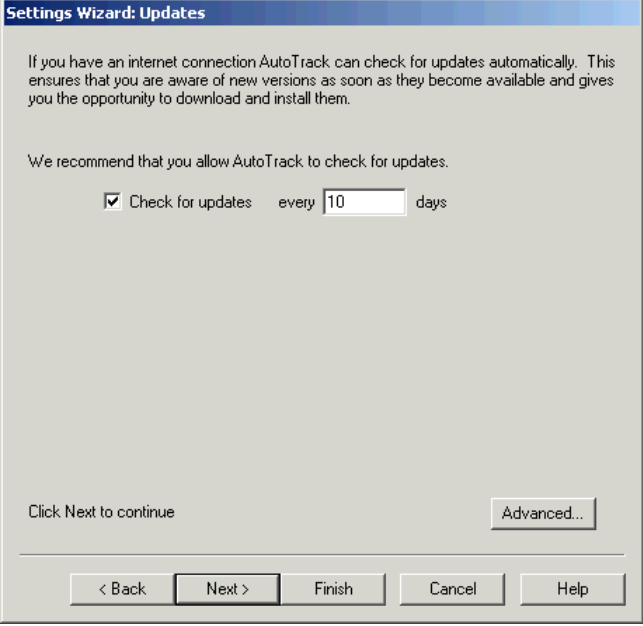


The screenshot shows a dialog box titled "Settings Wizard: Updates". The text inside reads: "If you have an internet connection AutoTrack can check for updates automatically. This ensures that you are aware of new versions as soon as they become available and gives you the opportunity to download and install them." Below this, it says "We recommend that you allow AutoTrack to check for updates." There is a checked checkbox labeled "Check for updates" followed by the text "every" and a text input field containing the number "10", followed by the text "days". At the bottom left, it says "Click Next to continue". At the bottom right, there is an "Advanced..." button. At the very bottom, there is a row of five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

Settings Wizard: Updates

1. If you have an internet connection AutoTrack can check for updates for you. Tick **Check for updates** to enable this feature and enter the frequency of checking. If you enter zero AutoTrack will check for updates every time it is run.
2. Click **Next** to move to the next page.

Settings Wizard: Finish (2480)

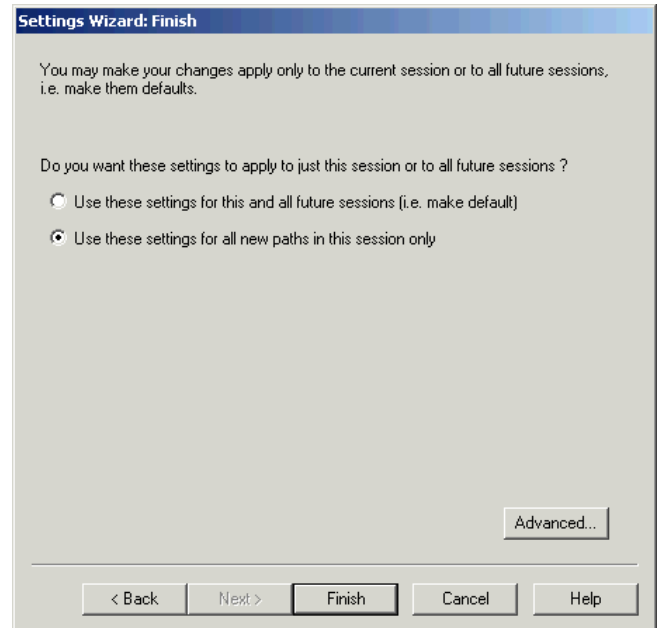

Settings Wizard: Finish

1. If you don't want to have to keep changing these settings every time you run AutoTrack then select **Use these settings for this and all future sessions**. Otherwise, select **Use these settings for all new paths in this session only**.
2. Click **Finish** to confirm your selection.

Report Wizard

The Report Wizard is design to help you to setup your AutoTrack reports correctly. It can actually be used to create or edit either your default reports or reports associated with existing paths.

The wizard does not allow you to edit all settings but on every page there is an **Advanced** button that takes you to the Reports tabbed dialog.

Also on every page is a **Finish** button. This applies any changes made so far for the current session only. If you want to make the changes apply to future sessions you should click **Next** until you get to the Finish page.



Report Wizard button


1. Select **Report Wizard** from the AutoTrack drop down menu or click the **Report Wizard** button on the AutoTrack toolbar or type `ATRAREPORTWIZARD` on the command line. The Report Wizard will appear.

A screenshot of the 'Report Wizard: Start' dialog box. The title bar reads 'Report Wizard: Start'. The main text says: 'This wizard allows you to create new reports or edit existing reports. It also allows you to quickly show and hide reports. Currently you have 4 reports defined, of which 1 is/are visible. I want to edit the following report which is currently Visible:-'. Below this is a dropdown menu showing 'Report 0001 Body and Chassis Envelopes Visible' and a 'New' button. There are two checkboxes: 'Report visible' (checked) and 'Exclusively (i.e. hide all other reports)' (unchecked). Below that is another checkbox: 'Construction lines visible' (checked). A note says: 'Construction lines help you while you are creating the path but you may want to hide them when you've finished. Colours may be edited at the end of this wizard.' At the bottom, it says 'To show or hide other report combinations click the Advanced button' and 'Click Next to continue'. There are buttons for '< Back', 'Next >', 'Finish', 'Advanced...', 'Cancel', and 'Help'.

Report Wizard: Start

2. Click the **Advanced** button to go directly to the [Drawing Settings: Reports](#) dialog.
 3. Click **Next** to move to the next page.
-

Report Wizard: Start ⁽³⁷⁰⁰⁾

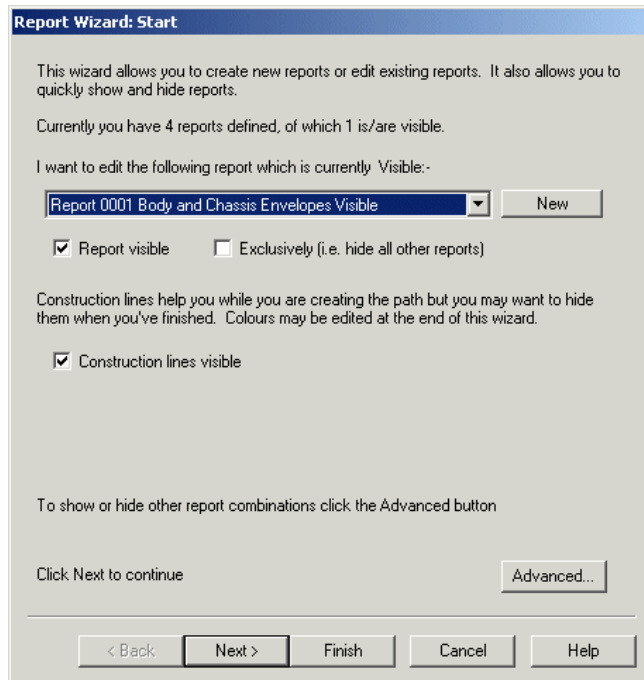

Report Wizard: Start

1. The wizard only allows you to edit one report at a time. If you have more than one report defined they will be listed in a drop down list box and you must select which report you want to change.
2. The current visibility is displayed under the drop down list.

If the report is not currently visible:-

Tick **Report visible** to make the report visible. If you want to hide all the other reports then tick **Exclusively**. This is the quickest way to switch between reports.

If the report is currently visible:-

Untick **Report visible** to hide the report. This will not affect any other reports listed so you may then want to select another report to show.

3. Click the **New** button to add a report to the list. The new report will be selected and you should then use the wizard to set it up as you require.
4. When you have finished your manoeuvre you may want to untick **Construction lines** to reduce the clutter. If you want to change which construction lines are displayed or their colour, either continue through the wizard to the relevant page or click the **Advanced** button and use the [Drawing Settings: Reports](#) dialog.
5. If you want to enable other combinations of reports click the **Advanced** button.
6. Click **Next** to move to the next page.

Report Wizard: Graphical sub-reports ⁽³⁷¹⁰⁾

Report Wizard: Body Outlines [Report 0001 Body and Chassis Envelopes]

You may want to enable elements of this report if buildings, walls or other high objects restrict the movement of the vehicle.

I want to display Body Outlines as follows:-

At the following discrete positions

At the start of the path

At the end of the path

At model changes (e.g. changes of speed)

At changes of direction Forward Reverse

At all target points [Blue Line] [Blue Line]

At spacing of 1.5 Lengths [] []

Enveloped Hatched [Green Line] [Green Line]

Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Report Wizard: Body Outlines
(other graphical sub-reports are similar)

1. Select where you want this element using the tick boxes.
2. All pages except Body Outlines have a further option, **At all body positions**, to display them at all positions at which a body outline is drawn.
3. The attributes buttons on the right show the line colour and style. Click on the button to change these in the [Report Attributes dialog ^{\(3820\)}](#).
4. If the page has an envelope option and you want to set the hatch spacing or angle or if you want to define an offset envelope click the **Advanced** button.
5. Click **Next** to move to the next page.

Report Wizard: Path Annotation ⁽³⁷⁹⁰⁾

Report Wizard: Path Annotation [Report 0001 Body and Chassis Envelopes]

This report allows you to annotate the path with the vehicle name at discrete positions and/or the path number at regular intervals. If you want to change the text click the Advanced button.

I want to display Annotation as follows:-

At the following discrete positions

At the start of the path At all discrete body positions

At the end of the path

At model changes (e.g. changes of speed)

At changes of direction Forward Reverse

At all target points [] []

At spacing of [] []

Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Report Wizard: Path Annotation

1. Select where you want this element using the tick boxes.
2. The vehicle name is displayed at all discrete locations selected and the the path number is displayed at a regular spacing if selected.
3. The attributes buttons on the right show the line colour and style. Click on the button to change these in the [Report Attributes dialog ^{\(3820\)}](#).
4. If you want to set display something other than the vehicle name or the path number click the **Advanced** button.
5. Click **Next** to move to the next page.

Report Wizard: Profile ⁽³⁸⁰⁵⁾

Report Wizard: Profile [Report 0001 Body and Chassis Envelopes]

A side or plan view of the vehicle which can optionally be dimensioned.

I want to display a diagram as follows:-

Show plan view of vehicle

Offset from start of path X Y

Show dimensions and vehicle details

Dimensions font height Units

Vehicle details font height Units

Click Next to continue

Report Wizard: Profile

1. Select the elements you wish to see by ticking the appropriate boxes.
36. By default a side view of the vehicle is displayed, if you would rather a plan view then tick **Show plan view of vehicle**.
37. The edit fields let you adjust the position of the diagram and the font size.
38. The attributes buttons on the right show the line colour and style. Click on the button to change these in the [Attributes dialog](#) ⁽³⁸³⁰⁾.
39. To change other aspects of the steering graph click the **Advanced** button.
40. Click **Next** to move to the next page.

Report Wizard: Steering & Articulation Graph (3795)

Report Wizard: Steering & Articulation Graph [Report 0001 Body and Chassis E...]

A graph showing how the steering and articulation angles change along a path can often highlight potential problems.

I want to display a steering & articulation angles graph as follows:-

<input checked="" type="checkbox"/> Show grid lines		<input type="text"/>
<input checked="" type="checkbox"/> Show axes	<input checked="" type="checkbox"/> Show origin	<input type="text"/>
<input checked="" type="checkbox"/> Show bounding box	<input checked="" type="checkbox"/> Show leader line	<input type="text"/>
<input checked="" type="checkbox"/> Show steering	<input checked="" type="checkbox"/> Show max angle	<input type="text"/>
<input checked="" type="checkbox"/> Show secondary steering	<input checked="" type="checkbox"/> Show max angle	<input type="text"/>
<input checked="" type="checkbox"/> Show linked steering		<input type="text"/>
<input checked="" type="checkbox"/> Show articulation	<input checked="" type="checkbox"/> Show max angle	<input type="text"/>
<input checked="" type="checkbox"/> Show section lines	<input checked="" type="checkbox"/> Show speed	<input type="text"/>
<input checked="" type="checkbox"/> Show discrete bodies	<input type="checkbox"/> Show leader line	<input type="text"/>
<input checked="" type="checkbox"/> Label peaks	<input checked="" type="checkbox"/> Show % of max angles	

Click Next to continue

Report Wizard: Steering & Articulation Graph

1. Select the elements you wish to see by ticking the appropriate boxes.
2. The attributes buttons on the right show the line colour and style. Click on the button to change these in the [Attributes dialog \(3830\)](#).
3. To change other aspects of the steering graph click the **Advanced** button.
4. Click **Next** to move to the next page.

Report Wizard: Construction Lines ⁽³⁸⁰⁰⁾

Report Wizard: Construction Lines [All reports]

Construction lines are often useful while designing a scheme but tend to clutter the final presentation.

I want to display the following construction lines

	Forward	Reverse
<input checked="" type="checkbox"/> Path	<input type="text"/>	<input type="text"/>
<input checked="" type="checkbox"/> Errored Path	<input type="text"/>	<input type="text"/>
<input checked="" type="checkbox"/> Model Changes	<input type="text"/>	<input type="text"/>
<input checked="" type="checkbox"/> Target Points	<input type="text"/>	<input type="text"/>
<input checked="" type="checkbox"/> Drag Lines	<input type="text"/>	<input type="text"/>
<input checked="" type="checkbox"/> Steering Pointer	<input type="text"/>	<input type="text"/>

Click Next to continue

Report Wizard: Construction Lines


1. Tick the construction line that you want to see.

Note

Construction lines tend to clutter the finished drawing so we normally suggest that you switch them off.

2. The attributes buttons on the right show the line colour and style. Click on the button to change these in the [Report Attributes dialog](#) ⁽³⁸²⁰⁾.
3. To switch off all construction lines untick **I want to display the following construction lines**.
4. Click **Next** to move to the Finish page.

Report Attributes dialog ⁽³⁸²⁰⁾

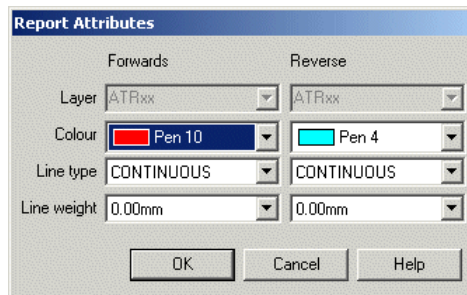


Report Attributes dialog

1. Select the **Colour** from the drop down list of 254 pens. To set a custom colour select {custom} and click on the colour swatch.
2. Select the **Line type** from the drop down list. The line types listed are those currently available in your CAD system. If you wish to add a line type you should cancel this dialog and create the line type in your host CAD system.
3. Select the **Line weight** from the drop down list.

Note

Line weights are real world dimensions so if you select a line weight of 2mm the object will be drawn with 2mm thick lines.

Attributes dialog ⁽³⁸³⁰⁾

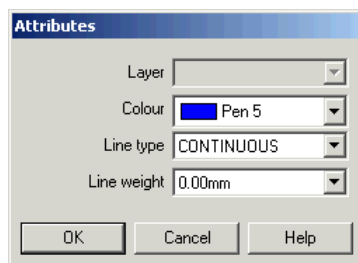


Attributes dialog

1. Select the **Colour** from the drop down list of 254 pens. To set a custom colour select {custom} and click on the colour swatch.
2. Select the **Line type** from the drop down list. The line types listed are those currently available in your CAD system. If you wish to add a line type you should cancel this dialog and create the line type in your host CAD system.
3. Select the **Line weight** from the drop down list.

Note

Line weights are real world dimensions so if you select a line weight of 2mm the object will be drawn with 2mm thick lines.

Report Wizard: Finish (3810)

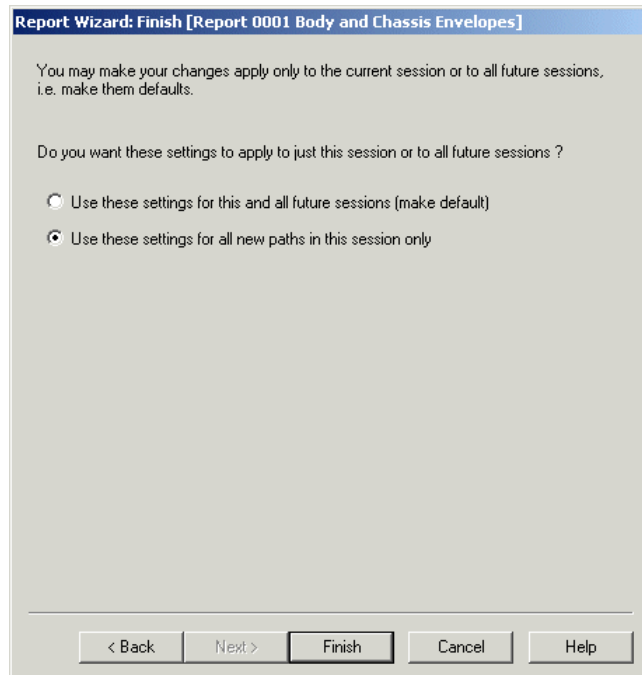

Report Wizard: Finish

1. If you don't want to have to keep changing these settings every time you run AutoTrack then select **Use these settings for this and all future sessions**. Otherwise, select **Use these settings for all new paths in this session only**.
 2. If you have a path selected then a third option will be displayed, **Use these settings for the selected path only**. This allows you to quickly change the report properties for the selected path.
 3. Click **Finish** to confirm your selection.
-


System Settings

The AutoTrack System Settings control the default behaviour of AutoTrack in all drawings on the CAD system. The settings are displayed all at once on a single tabbed dialog.



System Settings button

1. Select System Settings from the AutoTrack drop down menu or click the **System Settings** button on the AutoTrack toolbar or type `ATRASYSYSTEMSETTINGS` at the command line. The System Settings dialog will appear.

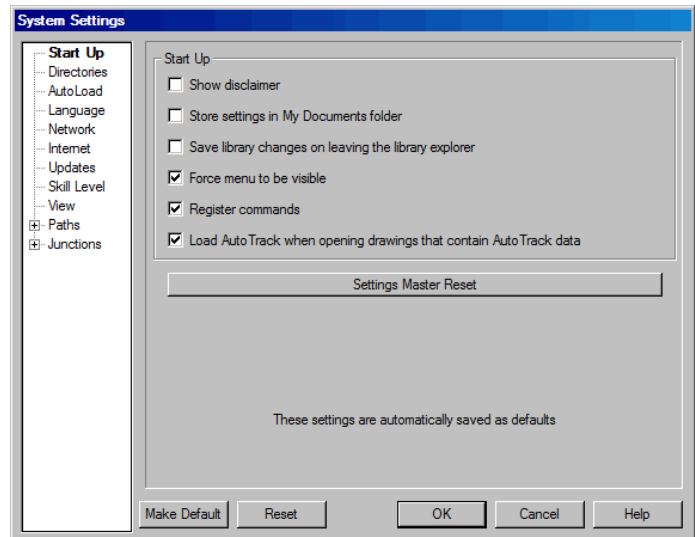


System Settings dialog

2. Click the appropriate tab to edit or view the settings.
3. Edit the data as required and click **OK** to confirm when you are satisfied. Click **Cancel** to abort all changes and close the System Settings dialog.
4. Click **Make Default** to save the displayed settings as defaults for the next session. Click **Reset** to restore your last saved default settings following changes.

System Settings: Start Up (2000)

1. Click on the **Start-Up** tab.

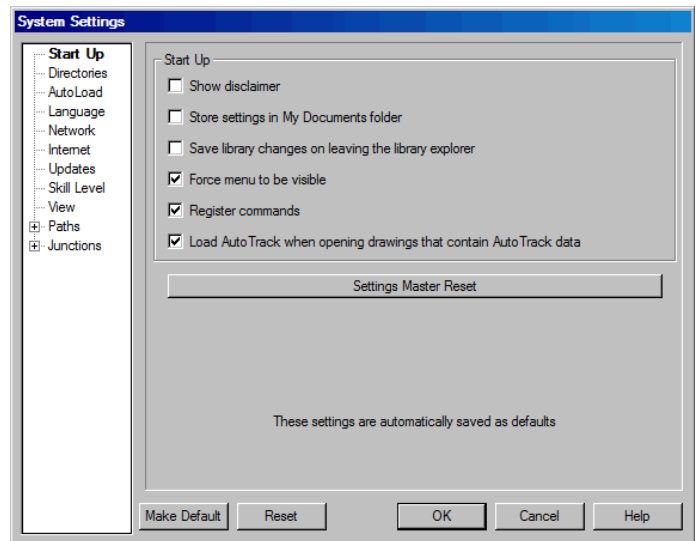

System Settings dialog: Start Up tab

2. Tick **Show disclaimer** to display the disclaimer at the start of each session.
3. By default all settings are stored in the Settings subdirectory of the application data directory. This means that changes made by one user affect all others. To instead store the program settings in each users My Documents data folder, tick **Store settings in "My Documents" folder**.

Note


Your computer may still be configured so that the My Documents folder is a common area.

4. Should you wish to apply common settings for all users but wish to disallow write access to the application tree you can edit the file SAVOY.INI in the AutoTrack installation directory. Open the file in a text editor and find the line [SETTINGS]. If this line does not exist add it at the bottom of the file. Then add or edit the line `ApplicationDataDir={Application Data Directory}` to point to the required directory (see [Some final points to note](#) for more details).
5. Tick **Save library changes on leaving library explorer** if you want AutoTrack to automatically update the library files with any changes when you leave the library explorer. If you do not tick this box you will be asked if you want to update the library file every time you close the library explorer.
6. Tick **Force menu to be visible** to load the AutoTrack menu at start-up. If you do not check this box, and the AutoTrack menu is unloaded, you will need to load AutoTrack (which includes the menus) manually by typing AUTOTRACK (or ATRACK) on the command line.

7. Tick **Register commands** to ensure that AutoTrack commands are recognised by your CAD system. We strongly recommend that you leave this box ticked. If this box is not ticked you will need to load the AutoTrack executable manually using the Load Application command in AutoCAD (see [Configuring AutoCAD manually](#)).
8. By default AutoTrack is initialised if you load a drawing that contains AutoTrack entities. If you do not want this to happen untick **Load AutoTrack when opening drawings that contain AutoTrack data**.
9. The **Settings Master Reset** button allows you to reset all the settings (including reports) for all versions of AutoTrack to the AutoTrack built-in defaults. It will display the Master Reset dialog (see [Master Reset dialog](#) ⁽²³¹⁰⁾) which allows you to confirm and override selected settings. The existing settings directory is renamed with a date and time stamp. If you need to restore previous settings then simply replace the Settings directory with the appropriate archived directory. Note that the new settings only take effect when the software is restarted.

Master Reset dialog ⁽²³¹⁰⁾

1. The Master Reset dialog appears when you invoke a Master Reset and allows you to prevent certain key settings from being reset.

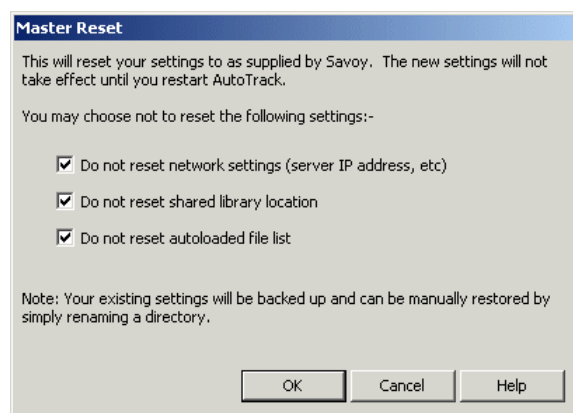


Master Reset dialog

2. Tick those items that you do not want reset. Options are network settings, shared data location (if defined) and the autoloaded data list. If you wish to reset any or all of these settings then you should untick the relevant check boxes.
3. When you restart AutoTrack following a Master Reset the [Welcome dialog](#) ⁽¹⁷⁰⁰⁾ will be displayed.

System Settings: Directories (2200)

1. Click on the **Directories** tab.

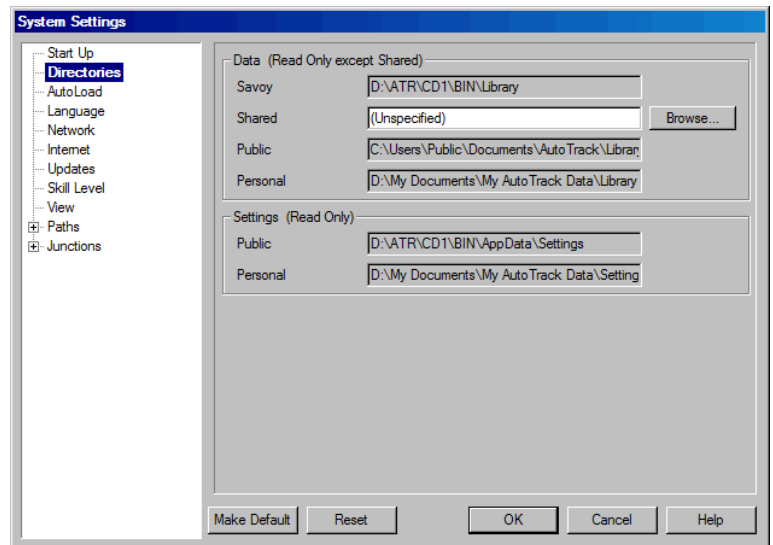

System Settings dialog: Directories tab


2. The various incarnations of Windows each store data in slightly different locations. This dialog tells you where the various program and data directories are on your version of Windows.
3. The **Savoy** data directory is used for data used by AutoTrack which is not editable by the end-user.
4. The **Public** data directory is used for data shared between users on this computer.
5. The **Personal** data directory is used for data created by individuals. This is the default location for most new data and it is for the user to share it as required. We suggest that good practice would be to create and verify new data in personal area and share it only when it has been checked.
6. The only editable field is the **Shared** data directory. This is the directory used to share data within your organization or department and to be effective must be chosen with care and use consistently on all computers.
7. The Public settings directory is used for all settings files unless the user has opted to save their settings in their Personal area by ticking **Store settings in My Documents folder** on the Startup settings tab.
8. The Personal settings directory is where settings data is stored if the user has ticked **Store settings in My Documents folder** on the Startup settings tab.

Note

Your computer may still be configured so that the My Documents folder is a common area.

System Settings: AutoLoad (2005)

1. Click on the **AutoLoad** tab.

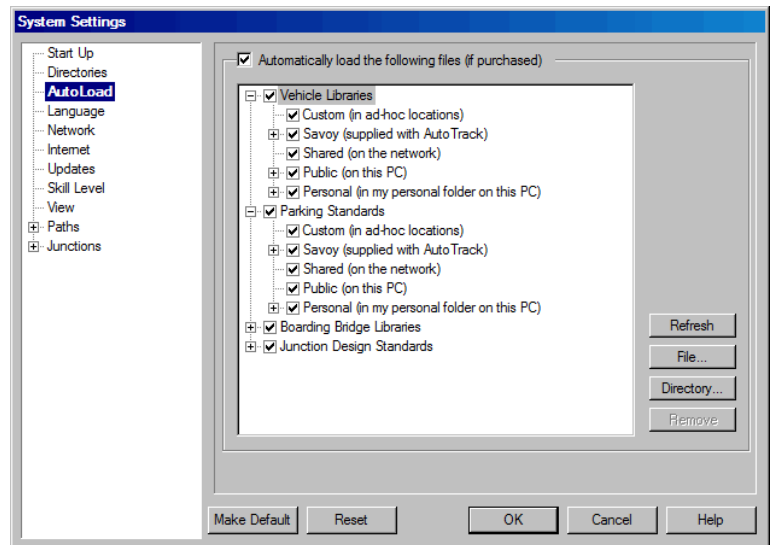

System Settings dialog: AutoLoad tab

2. The AutoLoad settings let you control which data is automatically loaded when the Vehicle Library Explorer or Parking Standard Explorer is opened.
3. All AutoTrack data files found in all the data directories listed on the Directories settings tab are listed in a hierarchical tree and all are ticked (i.e. selected for opening) by default. The list is updated every time AutoTrack is run and new files found are added and ticked.
4. To prevent data from being loaded automatically simply untick the box alongside the item. If you untick a branch that has 'children' you do not need to untick all the 'children' too. For example, to prevent all **Savoy** vehicle libraries from being loaded you only need to untick Savoy and not all the individual library files.
5. If you would rather load all vehicle libraries manually as and when you need them then untick **Vehicle Libraries** and if you would rather load all data of all types manually then untick **Automatically load the following files**.
6. You may customise the list of files that AutoTrack auto-loads by adding individual files or directories. These are added to the Custom data location list.

Note


AutoTrack only auto loads libraries or standards that you are authorised to use, i.e. that you have purchased.

7. Click the **File** button and browse to find the required library or standard. Click **Open** when you find the file and it will be added to the list.
8. Click the **Directory** button and browse to find the required directory. Click **OK** when you find the directory and it will be added to the list.

9. Click the **Remove** button to remove entries (individual libraries or complete directories) from the list.
 10. Click the **Refresh** button to rebuild the list without leaving AutoTrack.
-

System Settings: Language (2010)

1. Click on the **Language** tab.

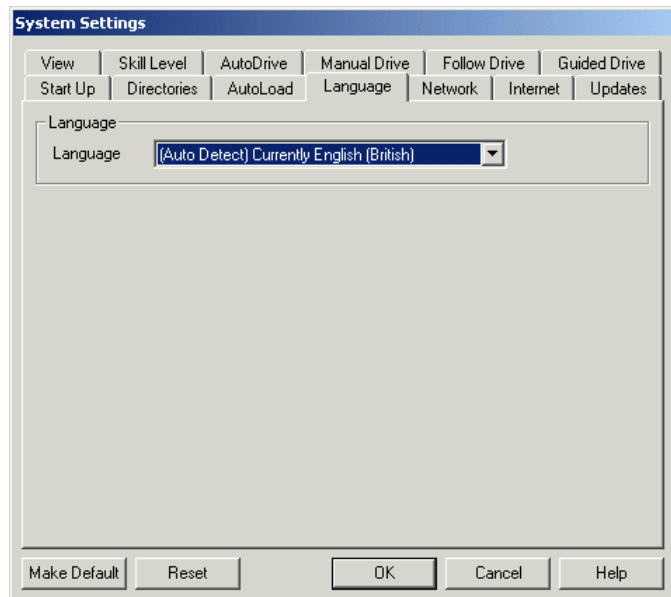


System Settings dialog: Language tab

2. By default AutoTrack detects the input locale setting on your computer and uses this to determine the language to use.
3. However, if you want to force AutoTrack to use a particular language then select it from the drop down list. The menus and dialogs will change as soon as you click **OK**.
4. Currently the languages are English (British), English (American), French, German, Spanish, Italian and Portuguese.
5. If the language is wrong when set to (AutoDetect) you may have your Input locale set wrongly in Windows Control Panel, Regional Settings.

System Settings: Network (2015)

1. Click on the **Network** tab.

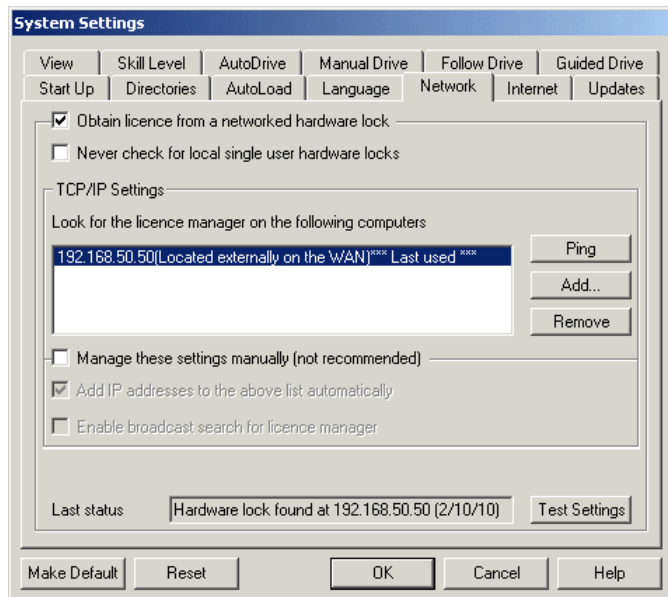

System Settings dialog: Network tab

2. Tick **Obtain licence from a networked hardware lock** if you want AutoTrack to look for a free network licence.
3. AutoTrack will always look for a local hardware lock (i.e. a single user lock) first and use that if one exists. If you want to disable this feature then tick **never check for single user hardware locks plugged into this computer**.
4. By default AutoTrack will search for available licences on your subnet. If it finds one it will use it and add the IP address to the search list. Next time you start AutoTrack it will look for a licence first on the computer that it found the licence last time. If it fails to find a free licence it will re-search your subnet. Again, if it finds one on another computer it will add its IP address to the search list. We recommend that you use this default functionality. If you want to add an IP address to the search list manually click the **Add** button and enter the address. To delete an IP address from the list highlight it and click **Remove**.

Note

The network version is licenced for use only on local area networks, i.e. all copies must be on the same subnet..

5. If you wish to change the default functionality tick **Manage these settings manually**.
6. If you want AutoTrack to add new IP addresses to the search list tick **Add IP addresses to the above list automatically**. In most cases this option will enable AutoTrack to find a network licence faster.
7. If you want AutoTrack to search the subnet for a licence if it fails to find a licence at one of the specified IP addresses then tick **Enable broadcast search for licence manager**. We strongly recommend that you leave this option ticked.

Warning

*If you manage the settings manually and untick both **Add IP addresses to the above list automatically** and **Enable broadcast search for licence manager** and if there are no IP addresses in the search list or if they are wrong AutoTrack will never find a licence.*

8. Click **Test Settings** to check that the settings can find a licence. **Last status** displays the results of the last search for a network licence.


Releasing network licences

Occasionally you may need to release a network licence to allow someone else to use AutoTrack on another computer.

9. To release a network licence either select **Release network licence** from the AutoTrack, Utilities drop down menu or select **About AutoTrack** from the AutoTrack, Help drop down menu and click the Release button.

System Settings: Internet (2210)

1. Click on the **Internet** tab.

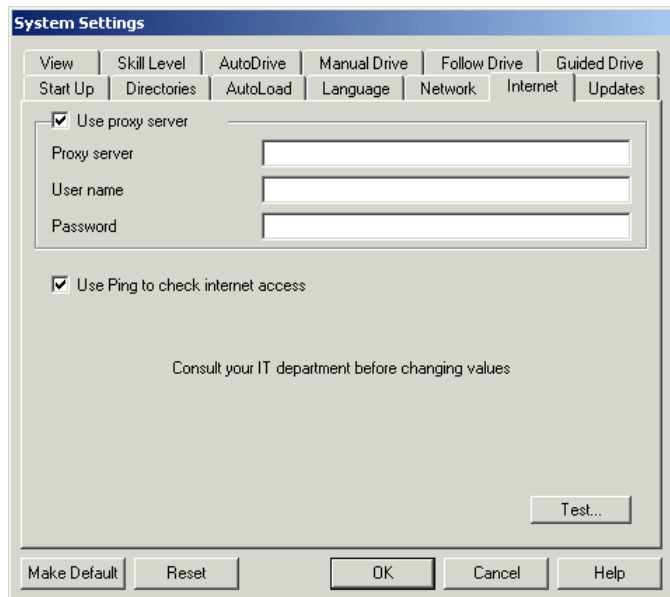


System Settings dialog: Internet tab

2. If you use a proxy server then tick **Use proxy server** and enter the details here. We recommend that you consult your IT department before changing these values.
3. By default Ping is used to test for the internet. If this causes problems on your system untick **Use Ping to check internet access**.
4. Click the **Test** button to check that the settings work.

System Settings: Updates ⁽²¹⁹⁰⁾

AutoTrack is able to log onto the internet and check for newer versions of itself automatically at regular intervals dictated by the user. By default this feature is switched off but the user is offered the opportunity to switch it on when the first automatic check is due. Update checking may have been restricted by your system administrator.

1. Click on the **Updates** tab.

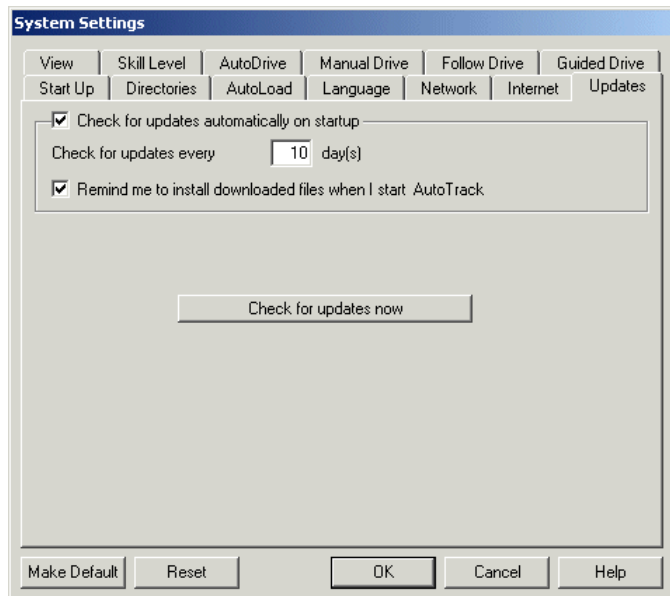

System Settings dialog: Updates tab

2. Click the **Check for updates now** button to access the internet and check for updates immediately. If an update is available the AutoTrack Updates dialog will appear. See [AutoTrack Updates dialog](#) below.
3. Tick **Check for updates automatically on startup** to have AutoTrack check for newer versions at regular intervals when AutoTrack is started. Note that the check is performed when AutoTrack starts and not when the CAD system starts.
4. Enter the frequency of checking in days in the **Check for updates every** field. If you want AutoTrack to check for updates every time you run the program set the frequency to zero.
5. Tick **Remind me to install downloaded files when I start AutoTrack** to be reminded, every time you start AutoTrack, if you have downloaded a newer version but not yet installed it.

Note 1


*If the **Check for updates automatically on startup** tick box is disabled automatic update checking may have been disabled by your system administrator.*

Note 2

*If the **Check for updates now** button is disabled all update checking may have been disabled by your system administrator.*

AutoTrack Updates dialog ⁽¹⁹⁷⁰⁾

1. The AutoTrack Updates dialog lists the main changes to AutoTrack since the version you are currently running.

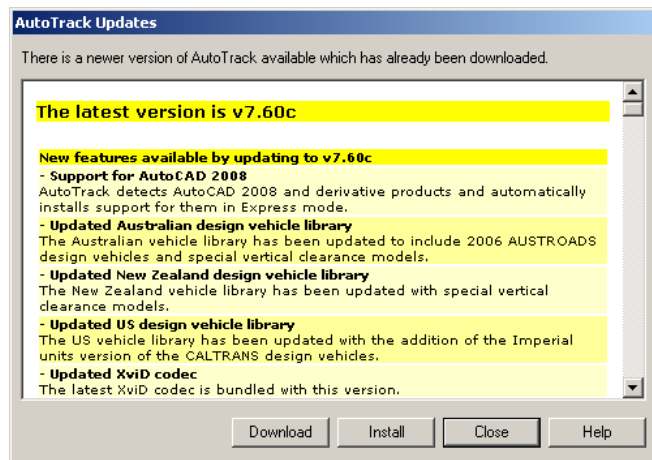

AutoTrack Updates dialog

2. Click the **Download** button to download the file to the `My AutoTrack Data\Updates` subdirectory of your `My Documents` folder. Note that while the file is downloading you will be unable to use other functions in your CAD system. Users with slow connections may therefore prefer to logon to the web site at a more convenient time.


Warning

If your company has a policy of central software control then you may have restricted access. This means that you will not be able to download the software but instead should refer to your system supervisor.

3. As soon as the download has finished, or if you have previously downloaded the new version but not yet installed it, the **Install** button will be enabled. Click the **Install** button to install the new version. The current session will be closed while the new version is installed.
4. Tick **Don't remind me again** (only visible when checking was automatic) and click the **Close** button if you don't want to be reminded of updates in future, i.e. to switch off automatic update checking.

System Settings: View ⁽²⁰⁴⁰⁾

1. Click on the **View** tab.

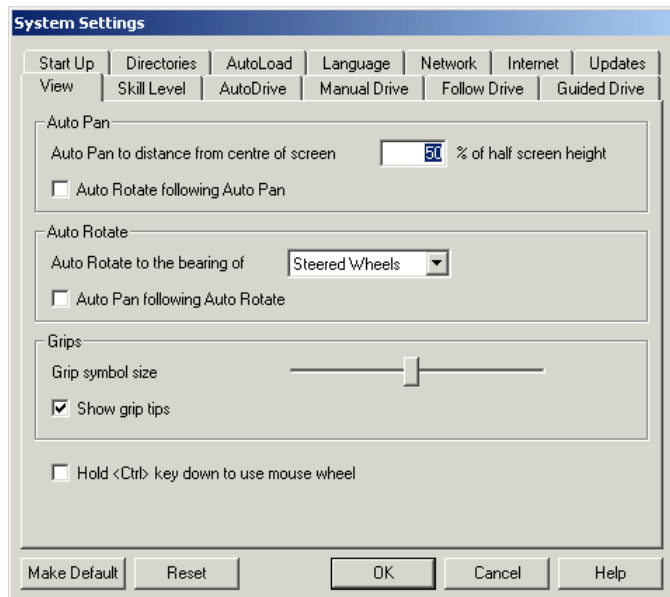

System Settings dialog: View tab

2. By default **AutoPan** moves the drawing so that the vehicle wheels are pointing directly at the centre of the screen and are positioned a distance of 50% of half the screen height from the centre of the screen. This allows you space to continue the manoeuvre. You can set the distance from the centre of the screen at which the vehicle is positioned following the pan by changing **AutoPan to Distance from Centre of Screen**. Set a value of 0% if you want the vehicle positioned exactly in the centre of the screen following the pan. Set 100% if you want the vehicle positioned right on the edge of the screen following the pan but be warned that in this case most of the vehicle is likely to not be visible following the AutoPan.
3. Tick **AutoRotate following AutoPan** if you want the drawing rotated at the same time as it is automatically panned. This does not affect behaviour if you manually invoke the pan command.
4. **AutoRotate** rotates the drawing so that either the spine of the tractor unit points directly up the screen. We find that this makes visualising the vehicles orientation easier when using the Manual Drive interface. However you can set **AutoRotate to Bearing of** to Steered Wheels if you find that more natural.
5. Tick **AutoPan following AutoRotate** if you also want to pan the drawing when AutoRotate is invoked.
6. Use the **Grip symbol size** slider to adjust the size of the editing grips.
7. Tick **Show grip tips** to display a text prompt alongside each grip when the cursor is over the grip.

Note


*The **Grip symbol size** and **Show grip tips** settings only apply to grips displayed when using the AutoTrack editing commands. Grips displayed when the object is simply selected are controlled by the host CAD system settings.*

8. Some AutoTrack features, such as manually controlled secondary steering, make use of the mouse wheel. By default in these cases we temporarily override any CAD functions that use the mouse wheel and to use the CAD function you must hold the <Ctrl> key down.

If you would rather that the CAD system had priority tick **Hold <Ctrl> key down to use mouse wheel**. The CAD system will then retain control of the mouse wheel unless you hold down the <Ctrl> key.

System Settings: Skill Level (2050)

1. Click on the **Skill Level** tab.

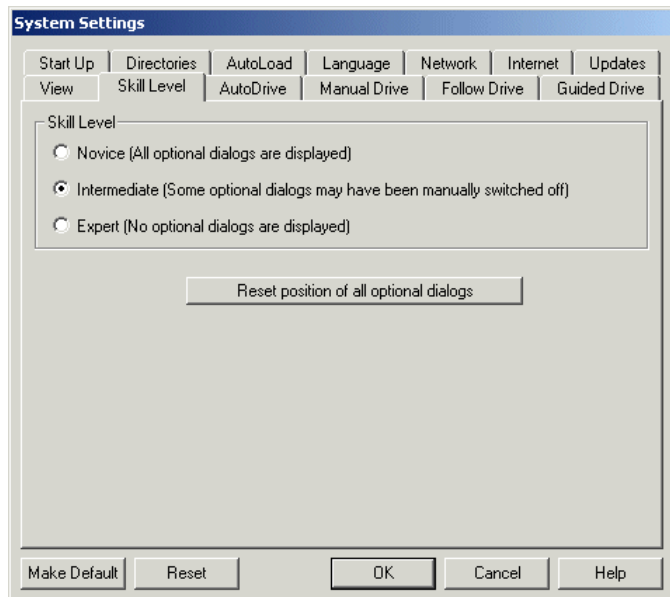


System Settings dialog: Skill Level tab

2. Check the option appropriate to your knowledge and experience of AutoTrack. **Novice** users are presented with dialog boxes and prompts in addition to the command line prompt. **Expert** users only get command line prompts with no additional dialogs. Although you can select **Intermediate** skill level, it has no direct effect; it is normally selected automatically if, as a novice user, you disable one or more of the optional dialog boxes by ticking the **Do not show this dialog again** box.
3. To re-enable all optional dialog boxes disabled by an Intermediate user simply select the **Novice** skill level.
4. AutoTrack will remember the last location of all optional dialogs for the current CAD session. Click the **Reset position of all optional dialogs** button to reset the position all dialogs to the centre of the screen.
5. The AutoTrack Tutor provides dynamic help as you navigate through the program. We recommend that new users leave **Start AutoTrack Tutor on startup** ticked until they are familiar with the program.
6. A static video tutorial is provided with the program but we recommend that you access the online version if possible by ticking **Use Online Tutorial if available**. Untick **Display in AutoTrack Window** to see the tutorial in your default browser.

System Settings: Paths: AutoDrive (Roads only) (2100)

1. Click on the **AutoDrive** tab.

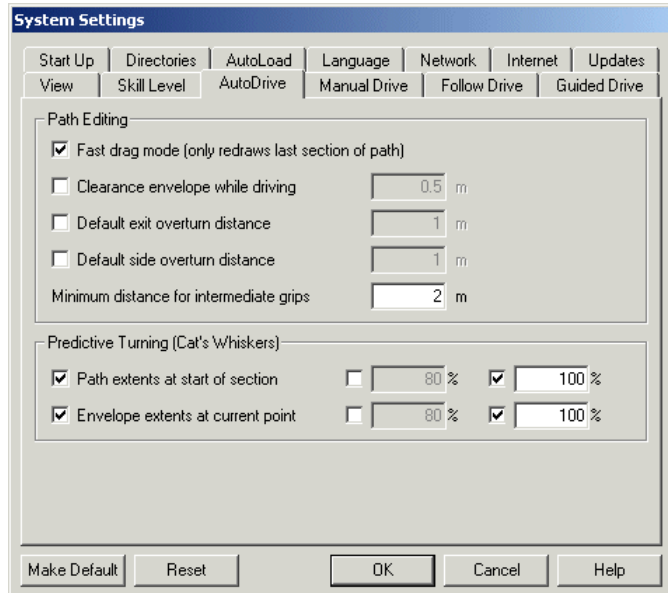


System Settings dialog: AutoDrive tab

2. Tick **Fast drag mode** to only redraw the current point and one either side during dynamic editing. When the new point is confirmed the whole path is recalculated and redrawn. If this box is not checked the dynamic editing will be slower but more accurate.
3. Tick **Default clearance envelope** to show a clearance zone outside the actual body envelope (if shown) and/or wheel envelope (if shown) while the vehicle is ghosted during driving. This allows accurate control if you have fixed clearance or safety guidelines. You may edit the clearance envelope offset distance in the adjacent box.
4. Tick **Default side overturn distance** to make the vehicle perform a side overturn by default (i.e. turn in the opposite direction prior to starting a bearing turn). Enter the default distance that the vehicle should deviate sideways.
5. Tick **Default exit overturn distance** to make the vehicle perform an exit overturn by default (i.e. turn past the normal exit point prior to turning back onto the required exit bearing). Enter the default distance that the vehicle should deviate from its normal path.
6. Enter the **Minimum distance between intermediate grips** to prevent too many closely spaced grips.
7. **Predictive Turning** mode draws path extents at the beginning of each section and envelope extents at the end of each section that help judge where to place target points. Note that the envelope extents for articulated vehicles represent not the absolute turning limits but the tightest turn possible without over-articulating. Thus it may be possible to turn tighter for a short distance.

8. Tick **Path extents at start of section** to show the left and right limits to path at the last target point placed. Select and enter up to two steering percentage values. Note that these are percentages of the lesser of the maximum non-articulating steering limits and the maximum steering angle.
9. Tick **Envelope extents at end of section** to show the left and right limits of the body envelope at the cursor. Select and enter up to two steering percentage values. Note that these are percentages of the lesser of the maximum non-articulating steering limits and the maximum steering angle.

System Settings: Paths: Manual Drive (Roads only) ⁽²¹¹⁰⁾

1. Click on the **Manual Drive** tab.

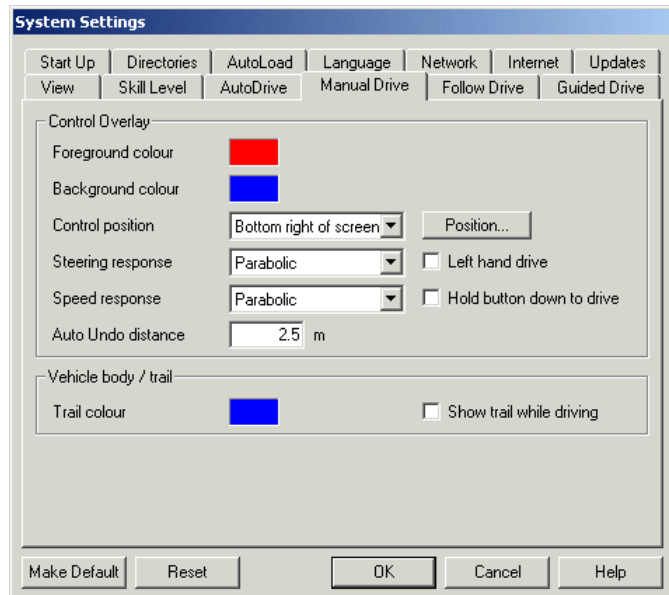


System Settings dialog: Manual Drive tab

2. Click on the **Foreground Colour** box to select your preferred colour for the lines on the control overlay.
 3. Click on the **Background Colour** box to select your preferred colour for the background colour of the control overlay.
 4. Select your preferred **Control Position** from the drop down list. If you wish to specify a non-standard location select Custom and click the **Position and Size** button to define.
 5. Click the **Position and Size** button to adjust the default appearance of the control overlay. The control overlay will appear and should be adjusted for location and size just like a normal resizable window. When you are happy with the appearance click the **Stop** button to return to the System Settings dialog.
 6. Select your preferred **Steering Response** from the list. By default the control is weighted to be more responsive at smaller angles. This response is based upon a parabolic curve. You may select a linear response if you find that more natural.
 7. Select your preferred **Speed Response** from the list. By default the control is weighted to be more responsive at slower speeds. This response is based upon a parabolic curve. You may select a linear response if you find that more natural.
 8. By default the left button is the pick and drive button and the right button toggles hands off as might be used by a right handed person. Tick **Left Hand Drive** if you prefer it the other way round.
-

9. If you tick **Hold Button Down to Drive** the vehicle will only move while you are holding the mouse button down. If you untick the box the vehicle will move as soon as the cursor moves outside the stop zone.
10. The **Auto Undo distance** is the length of path that is erased when you click the Auto Undo button on the control overlay. You may set it to any value but do bear in mind that auto undo is non-reversible and so we suggest that you do not set a very large value.
11. Tick **Show Outline Trails** to show a trail as you drive (a bit like a snail!).
12. Click on the **Vehicle Trail Colour** box to select your preferred colour for the trails left while driving.

System Settings: Paths: Follow Drive (Roads only) ⁽²¹²⁰⁾

1. Click on the **Follow Drive** tab.

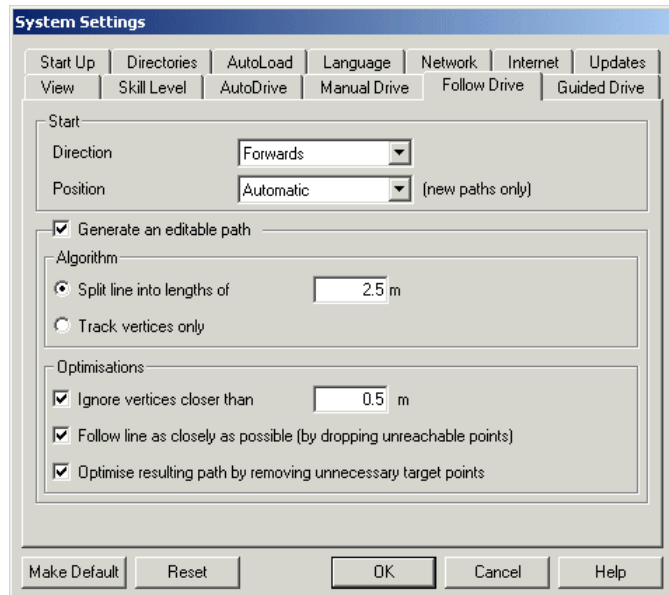

System Settings dialog: Follow Drive tab

2. The **Start Direction** is set by default to **Automatic** in which the direction of travel is based upon the orientation of the vehicle relative to the starting vertex of the polyline. Select **Forwards** or **Reverse** to if you want to force the direction of travel. Select **Keep Current** to continue in the current direction (e.g. if you often use Follow Drive after manoeuvres performed using a different drive mode).
3. Set the **Start Position** to **Automatic** to have the vehicle positioned at the end of the selected line closest to the point you picked with the steered wheels and all spines aligned tangentially to the line. If you want to adjust the vehicle orientation set Start Position to **Manual**. Start Position cannot be edited if the path is pre-selected, in these cases the current vehicle position and orientation is used.
4. By default Follow generates a non-editable path, i.e. you can move or rotate the entire path but not adjust the alignment. This gives best results in most cases. If you wish to create a path comprising a series of target points that can be dynamically edited then tick **Generate an Editable Path**.

Note

*If you are checking fastest line then do NOT tick **Generate editable path**. (See also [Using Follow to check fastest line](#)).*

5. If you opt for the editable path you can choose between two line following algorithms:-
Select **Split line into lengths** if you want AutoTrack to follow the line as closely as it can. You must supply a **segment length**, the shorter the distance the closer the vehicle will follow the line. The default distance of 2.5m should be suitable for most situations. You gain little from setting too close a distance and the program will run slower. Try

increasing the segment length if your vehicle cannot negotiate a turn.

Select **Track vertices only** if you want AutoTrack to use the vertices as target points. Note that this option will follow the automatically generated vertices on splined polylines.

6. Tick **Ignore vertices** to allow AutoTrack to ignore closely spaced vertices. Lines can be difficult to follow if they contain many closely spaced points so we recommend that this option is used.
7. The vehicle will not always be able to reach target points on tight bends. Tick **Follow line as closely as possible** to allow the vehicle to wander from the line temporarily instead of stopping. The vehicle will then ignore target points that it cannot reach and focus on the next one. This has the effect of allowing the vehicle to drift out on tight bends.
8. Not all automatically inserted target points will always be necessary, i.e. no change of steering may be required. If you tick **Optimise resulting path by removing unnecessary target points** AutoTrack will remove targets points at which no steering changes are required.


Using Follow to check fastest line

If you want to check fastest line (e.g. through a roundabout) then you should set the design speed to the highest permitted and then create a non-editable path, i.e. do NOT tick **Generate an editable path**.

If AutoTrack cannot complete the path at the specified design speed then the speed will be reduced to the point at which it can. Note that if the design speed has to be reduced it will be for the entire length of the path. If you wish to check individual bends within the paths you should split the path into sections.

System Settings: Paths: Guided Drive (Rail only) (2130)

1. Click on the **Guided Drive** tab.

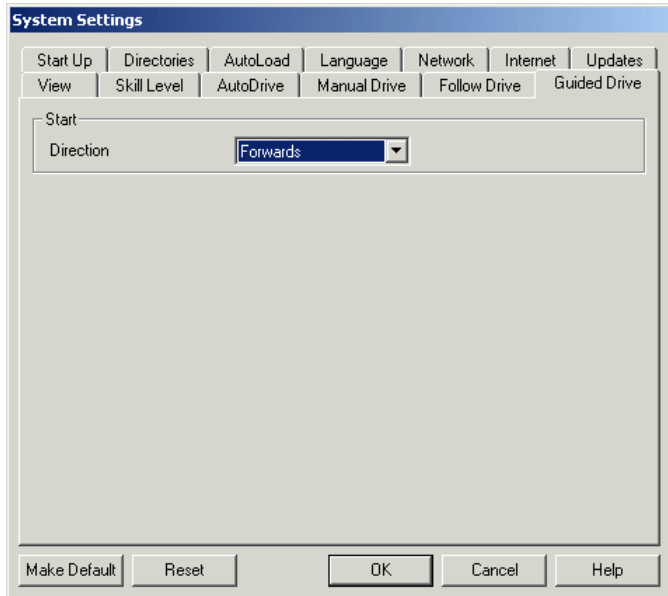

System Settings dialog: Guided Drive tab

2. The **Start Direction** is set by default to **Forwards**.


Drawing Settings

The AutoTrack Drawing Settings control those aspects of the system that are drawing related. The drawing settings are displayed all at once on a single tabbed dialog.



Drawing Settings button

1. Select Drawing Settings from the AutoTrack drop down menu or click the **Drawing Settings** button on the AutoTrack toolbar or type `ATRADRAWINGSETTINGS` at the command line. The Drawing Settings dialog will appear.

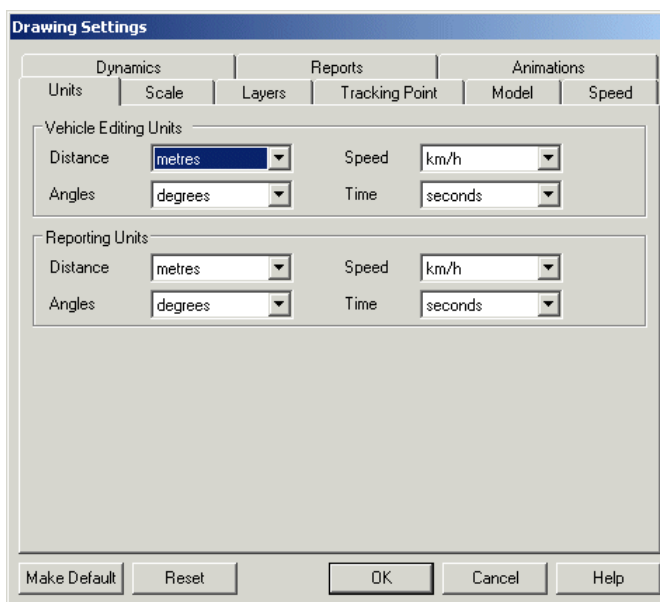


Drawing Settings dialog

2. Click the appropriate tab to edit or view the settings.
3. Edit the data as required and click **OK** to confirm when you are satisfied. Click **Cancel** to abort all changes and close the Drawing Settings dialog.
4. Click **Make Default** to save the displayed settings as defaults for the next session. Click **Reset** to restore your last saved default settings following changes.

Drawing Settings: Units (2020)

1. Click on the **Units** tab.

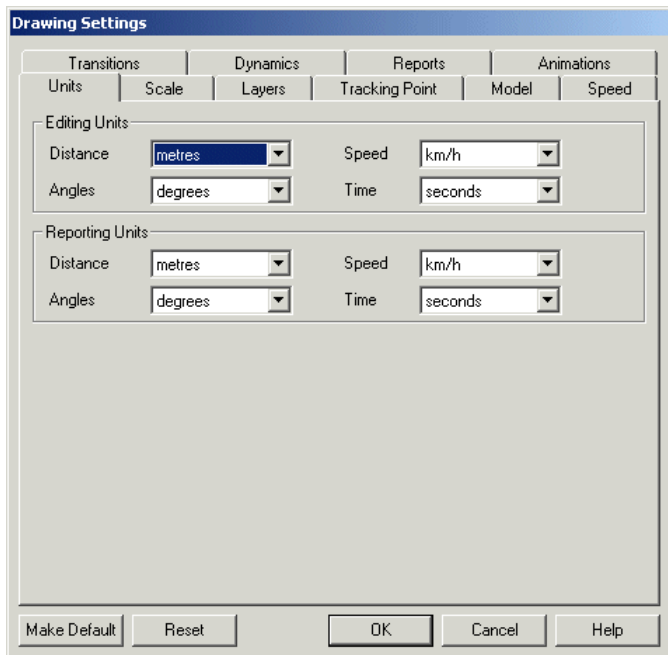


Drawing Settings dialog: Units tab

2. You can use different units for vehicle editing and viewing and for reporting. Select the units that you wish to use for **Distance**, **Angles**, **Speed** and **Time**.

Drawing Settings: Scale ⁽²⁰³⁰⁾

1. Click on the **Scale** tab.

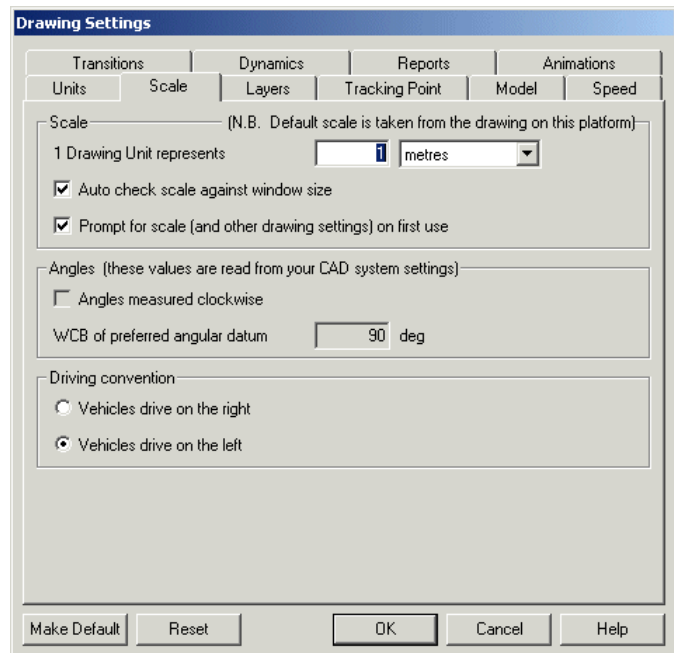

Drawing Settings dialog: Scale tab

2. **AutoCAD**

Set the drawing units and scale by entering the number of distance units that **1 Drawing Unit represents** followed by the units. If you set this incorrectly your vehicles will appear at the wrong size relative to other objects.

MicroStation

Set the drawing units and scale by entering the number of distance units that **1 Master Unit represents** followed by the units. If you set this incorrectly your vehicles will appear at the wrong size relative to other objects.


3. Tick **Auto check scale against drawing extents** to have AutoTrack perform a crude scale check on existing drawings when the vehicle is positioned for the first path in a new drawing. This is a useful reminder if you have not set the drawing units and/or scale correctly.
4. Tick **Prompt scale before use** to have AutoTrack prompt you for a scale on new drawings. Note that this box is ticked by default for Novice users.
5. The middle frame labeled **Angles** contains values that are read from your CAD system settings and cannot be edited here. If you need to change these settings, do so through your CAD system.
6. Driving convention determines the position of a driver or pilot if defined and therefore vehicle tracking if the tracking point is set to pilot/driver. It also affects the direction of angled parking bays according to direction of traffic flow if you are using the parking tools.

Drawing Settings: Paths: Layers (AutoCAD only) (2060)

Note

MicroStation users should refer to the next sections, [Drawing Settings: Levels \(MicroStation v8 onwards\)](#) and [Drawing Settings: Levels \(MicroStation pre-v8 only\)](#).

1. Click on the **Layers** tab.

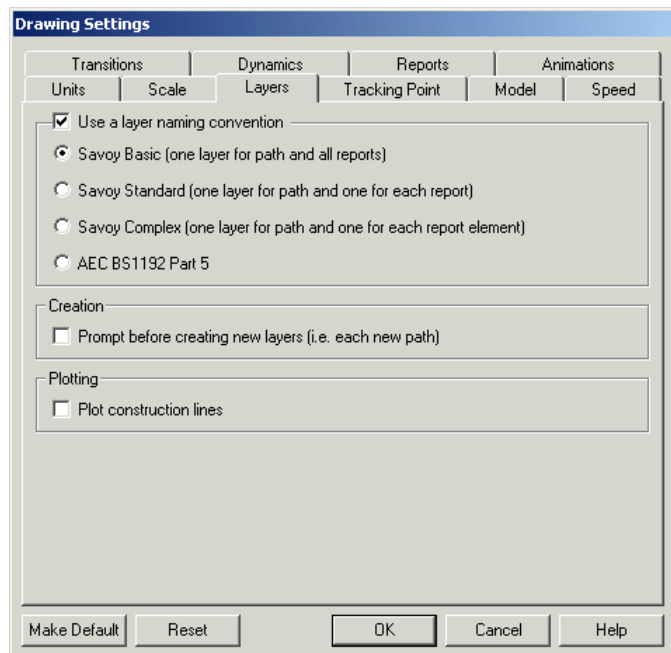

Drawing Settings dialog: Layers tab

2. Tick **Use a layer naming convention** if you want AutoTrack to automatically place the entities that you create on separate logical named layers (strongly recommended).
3. If you opt not to use a layer naming convention all new paths will be placed on the current layer.
4. Select one of the **Savoy** conventions or the **AEC BS1192 Part 5** layer naming convention. See below for details of all the layer naming conventions.
5. Tick **Prompt before creating new layers** to have AutoTrack warn before new layers are created. In practice this means you will be prompted with a default layer name before you start each new path (see Base Layer Name dialog below) and given the opportunity to change it.
6. By default AutoTrack construction lines are not plotted. If you want them to appear on output plots tick **Plot construction lines**.

Note


Adoption of a layer naming convention does not prevent you from renaming a layer later.

Drawing Settings: Paths: Levels (MicroStation v8 onwards) ⁽²⁰⁶⁷⁾

Note

MicroStation pre-v8 users should refer to the next section [Drawing Settings: Levels \(MicroStation pre-v8 only\)](#).

1. Click on the **Levels** tab.

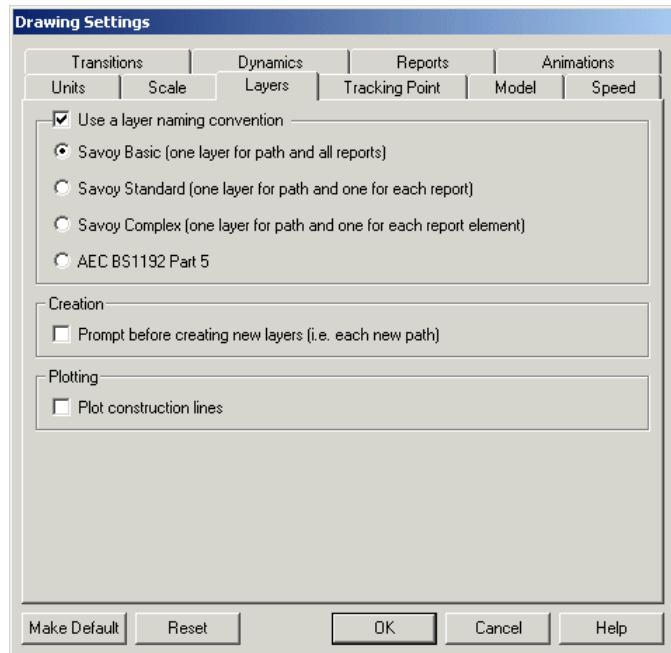

Drawing Settings dialog: Levels tab

2. Tick **Use a level naming convention** if you want AutoTrack to automatically place the entities that you create on separate logical named levels (strongly recommended).
3. If you opt not to use a level naming convention all new paths will be placed on the current level.
4. Select one of the **Savoy** conventions or the **AEC BS1192 Part 5** level naming convention. See below for details of all the level naming conventions.
5. Tick **Prompt before creating new levels** to have AutoTrack warn before new levels are created. In practice this means you will be prompted with a default level name before you start each new path (see Base Level Name dialog below) and given the opportunity to change it.
6. The option to **Plot construction lines** is not available in MicroStation because that CAD system has a similar feature built-in.

Note


Adoption of a level naming convention does not prevent you from renaming a level later.

Drawing Settings: Paths: Levels (MicroStation pre-v8 only) ⁽²⁰⁶⁵⁾

Note

Users of MicroStation v8 or later should refer to the previous section [Drawing Settings: Levels \(MicroStation v8 onwards\)](#).

1. Click on the **Levels** tab.

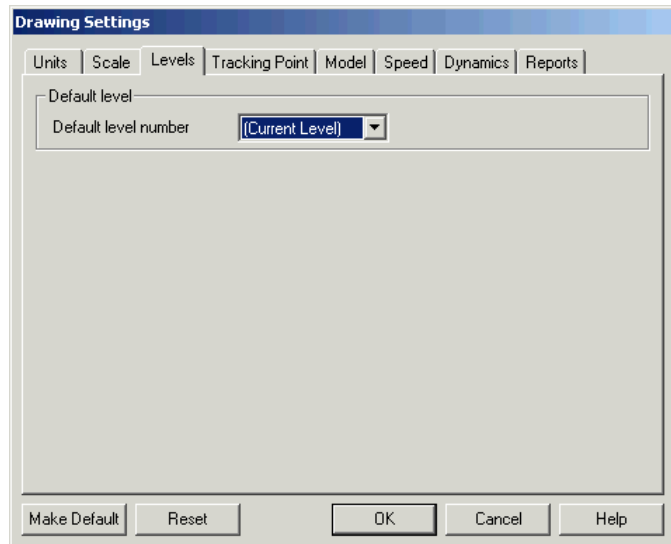

Drawing Settings dialog: Levels tab

2. Select the level on which you want AutoTrack to place new paths.

Note

Setting the report level does not change the active level.

Layer / Level naming conventions

AutoTrack has four built in layer or level naming conventions.

Savoy Basic Layer/Level naming convention

Under the Savoy basic naming convention all path and report data is placed on a single layer or level named:-

ATRxx

where:-

xx is the path number

Note that this is also the base layer or level name for the other Savoy naming conventions.

The path and all report elements have explicitly defined colours and line types. Their colours and line types cannot therefore be changed by changing layer or level settings.

Parking bays are placed on layers named **Bays** and parking islands on a layer called **Islands**.

Savoy Standard Layer/Level naming convention

Under the Savoy standard naming convention the path data and construction lines are placed on layers or levels named:-

ATRxx

and each report is placed on a layer or level named:-

ATRxxRyy

where:-

xx is the path number

yy is the report number

The path and all report elements have explicitly defined colours and line types. Their colours and line types cannot therefore be changed by changing layer or level settings.

Parking data is placed on layers as per the basic convention except that construction lines are now separated and placed on a layer called **BayConstruction**.

Savoy Complex Layer/Level naming convention

Under the Savoy complex naming convention the layers or levels are named as follows:-

ATRxxRyyrd

where:-

xx is the path number

yy is the report number (on this path)

r is the report subject (Body, Chassis, Path, Symbols, Text)

d is the direction of travel of the vehicle (Forward or Reverse).

Note

The direction is not used on reports that use a single layer or level.

The path and all report elements have explicitly defined colours and line types. Their colours and line types cannot therefore be changed by changing layer or level settings.

Each different type of parking data is placed on a different layer, e.g. privacy posts are placed on a layer called **PrivacyPosts**. In addition each type of construction line is placed on its own layer, e.g. flow direction arrows are placed on a layer called **RowFlowDirection**.

AEC BS1192 Part 5 Layer/Level naming Convention

Under the AEC naming convention the layers or levels are named as follows:-

V070PX\$??GBATRxxRyyrd

where:-

- ?? is the current elevation (00 if none found)
- xx is the path number
- yy is the report number (on this path)
- r is the report subject (Body, Chassis, Path, Symbols, Text)
- d is the direction of travel of the vehicle (Forward or Reverse).

Note

The direction is not used on reports which use a single layer or level.

The default discipline code (v) (which is not listed in the AEC disciplines) has been chosen because AutoTrack is used by professionals from a wide range of disciplines and this code allows the AutoTrack vehicle data to be isolated. Likewise the part code is normally discipline dependent so an unallocated code (070) has been selected for use here. Finally, pen colour or type is user dependent so code P is used here. All layer names can be edited if required.

The path and all report elements have explicitly defined colours and line types. Their colours and line types cannot therefore be changed by changing layer or level settings.

Parking data is placed on the same layers as the Savoy Complex convention.

Base layer or level name (Base Layer/Level Name dialog) (5120)


The base layer or level name is the part of the name to which is appended the sub-text appropriate to the selected naming convention. Thus if you use the Standard Savoy naming convention and change the default base layer/level name to BASENAME the layers or levels generated will be of the form...

BASENAMERyyrd

instead of... ATRxxRyyrd

Drawing Settings: Paths: Tracking Point (Roads & Airports) ⁽²¹⁷⁰⁾

1. The path travelled by the vehicle is the line connecting the target points travelled by a specified tracking point on the vehicle. A tracking point on the first unit of the vehicle is used when the vehicle is travelling forwards and a point on the last unit when it is reversing. The tracking point is also the point that follows the line in the Follow drive mode.
2. Click on the **Tracking Point** tab.

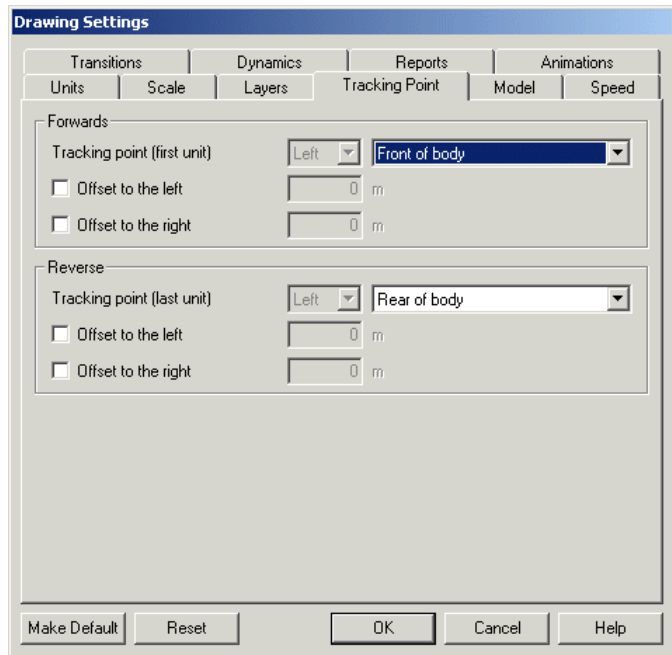


Drawing Settings dialog: Tracking Point tab

3. Set the **Forwards Tracking Point** to the point you wish to track while the vehicle is moving forwards. Note that some of the options require you to select left or right using the adjacent drop down list box. With the exception of **Pilot / Driver** and **User Defined Point** the tracking point is assumed to be on the centre line of the unit. Note that front tracking points on a front steered vehicle tend to give better results than rear tracking points.
4. If you want to specify a point offset from the centre line then tick **Offset to the left** or **Offset to the right** as appropriate and enter the offset distance.
5. If you want to specify a particular point then set the Tracking Point to **User Defined Point** and enter the coordinates explicitly. X is measured from the front coupling or, if there is no front coupling, from the front axle, increasing positive towards the back of the unit; and Y is measured positive to the right of the centre line.
6. If you are modeling aircraft using Follow you should set this to **Pilot / Driver** or **Cockpit** if you want to simulate pilot's eye tracking.

7. The **Reverse Tracking Point**, the point that you want to track while the vehicle is moving backwards, is set in exactly the same way.
-

Drawing Settings: Paths: Model (Roads & Airports) ⁽²⁰⁷⁰⁾

1. The Model settings are used to limit the turning or articulation capability of the vehicle. This may be used to create a more conservative analysis.
2. Click on the **Model** tab.

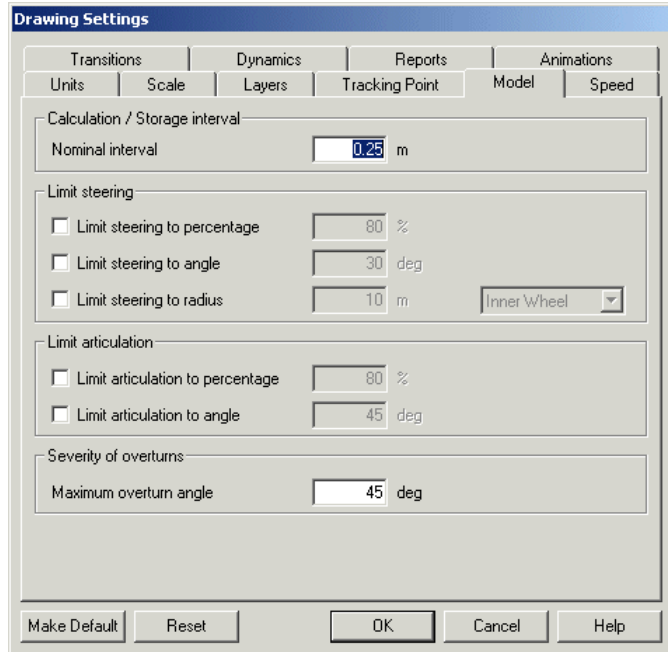

Drawing Settings dialog: Model tab

3. **Nominal storage interval** is the frequency at which points on the path and reports are calculated and saved to the drawing. Reducing this value will make the program run slower because it is performing more calculations. Increasing this value will lose accuracy. This value may not be greater than 75% of the shortest wheelbase of any unit in the driven vehicle.
4. By default the program uses the steering and articulation limits defined in your vehicles. However, the settings on this tab allow you to temporarily change these limits.
5. You may limit the allowable steering lock in three mutually inclusive ways. The program will calculate new steering capabilities based upon the selected methods and use these new limits in all driving calculations unless they exceed the physical vehicle capabilities.

Select **Percentage of maximum** to change the steering capability of your selected vehicle as a factor of the actual maximum steering angle. Note that this is the only vehicle independent way to limit the steering angle.

Select **Absolute angle** to set a new maximum steering angle.

Select **Equivalent turning radius** to specify the maximum steering angle in terms of an equivalent radius. The radius may be to the inside of the inner wheels, the outside of the outer wheels, or the centreline of the steered axle.

6. You may limit the allowable articulation angles in two mutually inclusive ways. The program will calculate new articulation capabilities for all units based upon this figure and use these new limits in all driving calculations unless they exceed the physical vehicle capabilities.


Select **Percentage of maximum** to change the articulation limits of your selected vehicle as a factor of the actual maximum articulation angle. Note that this is the only vehicle independent way to limit articulation angles.

Select **Absolute angle** to set a new maximum articulation angle.

7. Overturns are when the vehicle turns sideways in the opposite direction prior to making a turn or when the vehicle continues forwards and turns late. Both are performed to minimize cut-in. The **Maximum overturn angle** is a way to limit the severity of the overturn by restricting the angle of deviation from a "normal" path.
-

Drawing Settings: Paths: Speed (Roads, Rail & Airports) ⁽²⁰⁸⁰⁾

1. The design speed affects controls how fast the manoeuvre is animated and may also affect the shape of turns on some versions of AutoTrack if a speed dependent turn transition is enabled.
2. Click on the **Speed** tab.

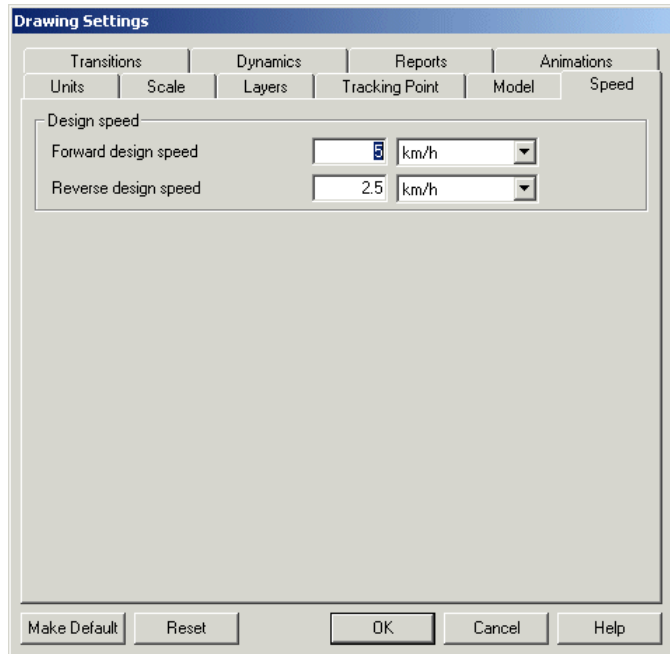

Drawing Settings dialog: Speed tab


3. You may specify different values for the **Forward design speed** and **Reverse design speed** since typically you would travel slower in reverse. Note that the vehicle movement will always be modeled at the design speed regardless of the rate at which you choose to animate the manoeuvre on screen.

Warning

*If you are modelling turns at speeds greater than 15kph we strongly recommend that you limit the turn radius. Go to either the **Model** tab or the **Dynamics** tab.*

Drawing Settings: Paths: Transitions (Roads & Airports) ⁽²⁰⁸⁵⁾

1. The Transitions settings control how fast the steering angle changes into and between turns.
2. Click on the **Transitions** tab.

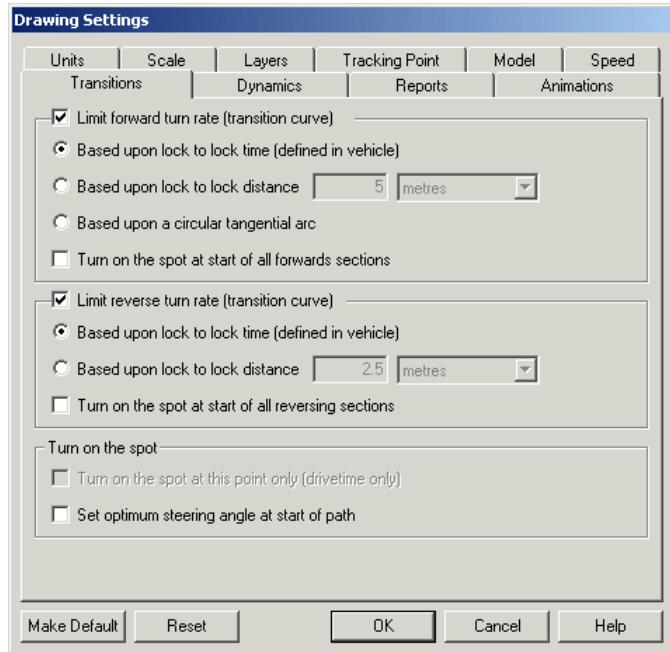

3. Drawing Settings dialog: Transitions

4. By default the rate at which the steering can be turned is limited. This reflects the real life situation in which the vehicle is moving whilst steering lock is being applied. Tick **Limit forward turn rate** and/or **Limit reverse turn rate** to prevent instantaneous application of lock while travelling forwards or backwards respectively. Note that this setting can also be changed during driving if necessary.

Note

Disabling turn rates is equivalent to the use of the Turn on the Spot feature in version 2 of AutoTrack.

5. The steering turn rate can be limited in one of three ways. Either by defining the speed of the vehicle which is then used in conjunction with the vehicles lock to lock time or, by explicitly defining the lock to lock distance (i.e. the distance travelled in the lock to lock time), or by the pure geometric calculation of a circular arc.

Select **Based upon lock to lock time** to impose a turn rate that causes the turn radius to increase with speed. The turn rate (degrees per unit of distance) will be calculated as follows:-

$$R = A / v t$$

Select **Based upon lock to lock distance** to impose a limit that is fixed for all speeds. The turn rate (degrees per unit of distance) will be calculated as follows:-

$$R = A / d$$

Where:-

R is Max Turn Rate

A is Max Steering Angle

v is Design Speed

t is Lock to Lock Time

d is Lock to Lock Distance

Select **Based upon circular tangential arc** if you want the tracking point (typically the centre of the steered wheels) to follow a perfectly circular arc irrespective of speed or lock to lock time. Note that this is the model used by several organisations to generate design vehicle turn templates (e.g. AASHTO, TAC). This mode can only be used with tracking points that are in front of (relative to the direction of motion) the minimum cut-in point.

6. The turn transitions can also be disabled automatically at changes of direction. Tick **Turn on the spot at start of all forwards sections** to automatically disable turn transitions when you stop reversing and start travelling forwards or **Turn on the spot at start of all reverse sections** to disable them when to stop travelling forwards and start reversing.
7. Finally, to force AutoTrack to set the best possible starting steering angle at just the start of the path tick **Set optimum steering angle at start of path**.

Drawing Settings: Dynamics (Roads & Airports) (2180)

1. The Dynamics settings limit the turning radii for comfort at higher speeds. The automatically generated values are based upon published documents.
2. Click on the **Dynamics** tab.

The screenshot shows the 'Drawing Settings' dialog box with the 'Dynamics' tab selected. The dialog has a title bar 'Drawing Settings' and a tabbed interface with tabs for 'Units', 'Scale', 'Layers', 'Tracking Point', 'Model', 'Speed', 'Transitions', 'Dynamics', 'Reports', and 'Animations'. The 'Dynamics' tab is active, showing a section titled 'Limit turning for dynamic effects (weight related)' which is checked. Below this, there are several settings: 'Recommendations from' is set to 'AASHTO Handbook 2004', 'Design Context' is 'Low speed urban streets (Exhibit 3-16)(M)', 'Friction factor (f)' is 0 with 'Use table value of' checked and 0.35, 'Super-elevation (e)' is 0 with 'Use max table value of' checked and 0.12, 'Min. applicable speed' is 0 with 'Use table value of' checked and 20 km/h, 'Minimum turn radius (R)' is 0 with 'Use calculated value of' checked and 0 m, and 'Recommended values based upon current forward design speed (V) of' is 5 km/h. There is also a 'Radius offset from innermost wheel (e.g. to inner lane marking) by' set to 0 m. At the bottom, there are buttons for 'Make Default', 'Reset', 'OK', 'Cancel', and 'Help'. A note at the bottom of the dialog reads: '(N.B. Recommended and calculated values change with design speed)'.

Drawing Settings dialog: Dynamics tab

3. If you want to limit the turning radius for super elevation and side friction tick the **Limit Turning for Dynamic Effects** box.
4. You may use automatically generated values from various references or set your own limiting values.
5. If you wish to use values from one of the available sources select from the **Recommendations from** and **Design Context** drop down lists. The units used for each design context are indicated with (M) or (US) in the context name representing metric and US customary units respectively.

Note

Speeds are displayed in the same units as the current design speed and radii are displayed in the same units as the drawing scale.

6. The recommended and calculated fields will change to reflect your selections. The distance data will be presented in drawing units and the speed in same units as your design speed.
7. If you do not want to use one of the recommended values you should clear the **Use table value** box and enter the required value in the edit box.

Note

The table values are taken straight from the appropriate reference table, which although based upon an equation,

may be rounded. If you choose to use any of your own values AutoTrack will use the base equation to calculate the recommended limiting turn radius. This means that you may get slightly different values if you manually enter a value that is the same as a recommended value.

8. The **Side friction factor (f)** is the ratio of the force parallel to the road surface and the reaction perpendicular to the road surface and the recommended values are all based upon comfort limits rather than physical skidding limits.
9. The **Super elevation (e)** is the slope of the road surface at right angles to the direction of vehicle travel. It is expressed as a factor so 2% super elevation should be entered as 0.02.
10. The table values are used for all speeds above a **Min. applicable speed (V)** which is the lowest speed listed in each table.
11. The recommended **Minimum turn radius (R)** that is displayed relates to the current forward design speed (which is shown on the same dialog). The values used will change as you vary the speed. They do not apply in reverse. AutoTrack will use the value listed in a table if the current forward design speed is within 0.5kph. If the design speed is outside this tolerance then the limiting radius will be calculated direct using the curve formulae relevant to the design publication and context.

The equation used for limiting values of e and f is:-

$$R = v^2 / 127 (e+f)$$

Where:-

R is Minimum Turn Radius

v is Design Speed

e is Maximum Super-elevation (expressed as m/m)

f is Side Friction Factor


If the sum of super elevation and side friction factor is zero the minimum turn radius will not be calculated.

The radius relates either to the outermost wheel track, the innermost wheel track or the centre of the steered wheels. Select it from the drop down list box. The defaults for this field vary according to the selected table and are based upon advice from AASHTO representatives. If you select **Radius is offset from outermost wheel track** or **Radius is offset from innermost wheel track** then the calculated limiting wheel angle is based upon the path the vehicle must steer to keep the wheels just within the outer lane marking or just outside the inner lane marking respectively. In reality you will probably want to model the vehicle travelling some distance away from the lane marking to avoid collisions with vehicles in adjacent lanes or oncoming vehicles. Enter the clearance between the vehicle wheel envelope and the lane marking in the edit box provided.

AutoTrack will prevent a vehicle from using the limiting radius if it is lower than its design capabilities.

Drawing Settings: Paths: Reports (3000)

1. The Reports dialog allows you to change the reports displayed.
2. Click on the **Reports** tab.

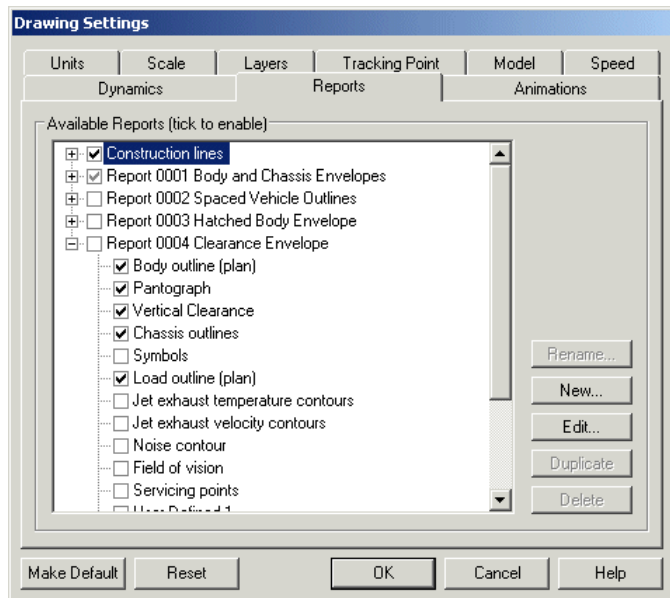

Drawing Settings dialog: Reports tab

3. Each path may have one or more reports each comprising a defined set of sub-reports. In addition each path has a special construction lines report comprising various sub-reports. You may view the sub-reports by clicking on the + symbol.
4. The reports listed on this screen are applied by default to new paths but you may tick or untick the box adjacent to each title to enable or disable elements.


Tip

*When you have completed your path it often clarifies the presentation if you switch off all construction lines by unticking the **Construction Lines** box in the **Reports** view.*

5. In many cases it will only be necessary to define a single report here but you may wish to add more default reports. There must always be at least one report.
6. Click **Edit** to edit a sub-report. The appropriate Report Details dialog will appear.
7. Click **Copy** to make a copy of the current report. A new report will be added to the list and can be edited in the normal way. You cannot copy a sub-report.
8. Highlight a report and click **Rename** to give the report a new title. You cannot rename Construction Lines.
9. Click **New** to define a new report. A new report will be added to the list (with system default settings) which can be edited in the normal way. You cannot add a sub-report.
10. Click **Delete** to remove a report from the list.

Drawing Settings: Paths: Construction Lines (3160)

1. Construction Lines may prove useful whilst creating the path but would normally be disabled for the final report.
2. Click on the appropriate tab and tick the **Show...** box of those elements that you want.

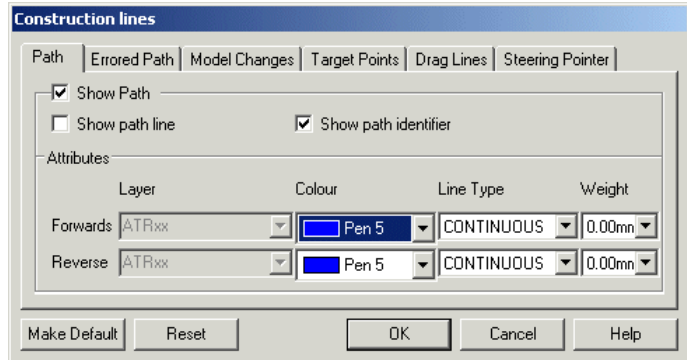

Drawing Settings: Construction Lines

3. The following applies to all six types of construction lines. However, there are some options that apply only to particular types. These are listed at the end.
4. **Path** is the locus of the tracking point.
Errored Path is a line connecting the target points of those sections of the path that cannot be performed.
Model Changes are represented by an octagonal symbol and include speed changes and changes to the transition type.
Target Points are shown as small crosses.
Drag Lines are shown connecting the driving grip and the centres of the front and rear axles.
Steering Pointer is a line or arrow projecting from the centre of the steered axle a distance equal to the wheelbase of the unit.
5. Select the **Colour** from the drop down list box. 255 pen colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices in later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.

6. Select the **Line Type** from the drop down list box.
7. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in AutoCAD R14).

Note

Variations in line weight are only visible on printed output or in a print preview.

Drawing Settings: Construction Lines: Path

1. Select **Show path line** to display the path of the tracking point.
2. Select **Show path identifier** to display the path number adjacent to each path.

Drawing Settings: Construction Lines: Drag Lines


1. Select **Show overturn draglines** to display editing draglines at overturns.
2. Select **Show extend path draglines** to display draglines extending from the front and rear of the vehicle. These may be used to extend the path by one section at a time.

Drawing Settings: Construction Lines: Steering Pointer

1. Select **Show steering percentage** to display the physical steering angle as a percentage of the maximum possible.
 2. Select **Use simple steering pointer** to display the steering pointer as a line instead of as an arrow.
-

Drawing Settings: Paths: Reports: Discrete ⁽³⁰²⁰⁾

1. This controls the appearance of the discrete outlines sub-report. It is applicable to various report types, including body, chassis, loads, etc. Each different report type may have different settings for its discrete sub-report.
2. Click on the **Discrete** tab.

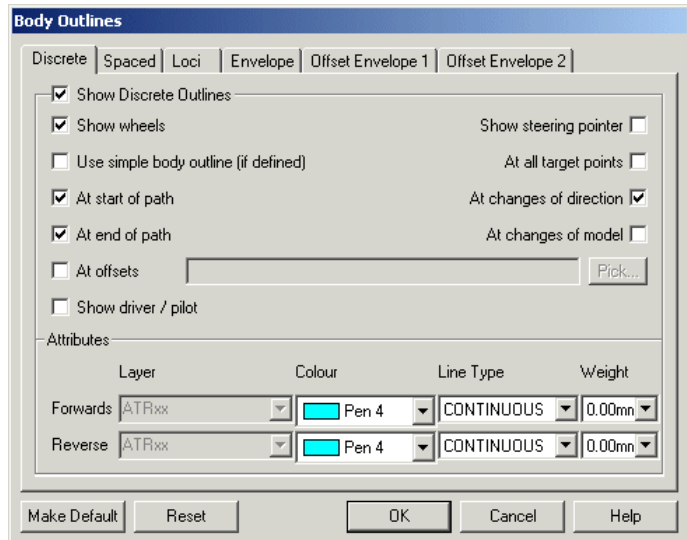

Body Outlines Report dialog: Discrete tab
(other discrete outline reports similar)

3. Tick **Show Discrete Outlines** to enable this element.
4. Tick the boxes to specify the features that you want.

The option **At all Discrete Body Outlines** is available on all but the Body Outline sub-report.

The option **Use simple body outline** is only available on the discrete and spaced body outline reports. It uses the outlines defined in the vehicle's Body Outline (Plan) outline type instead of those in Body Detail (Plan).

The option to display **Label Text** is only available on the Annotation report. Leave the Label Text field blank to display the vehicle name; the text - **Vehicle Name** - will automatically appear in the edit box.

5. Tick **At Offsets** to show outlines at specified positions. Enter the distances from the start of the path in the adjacent box. You should use commas to separate distances, e.g. 10.4, 15.6, 23.9 would draw body outlines at distances of 10.4, 15.6, and 23.9 in the current units. Click the **Pick** button to select positions graphically.

Tip

You may find it easier to use the **Place Outline** command to position outlines at irregular offsets. (see [Placing discrete body outlines](#))

6. Tick **Show driver / pilot** to display an icon representing the driver's location. Note that the position of the driver can be adjusted in the vehicle details.

7. If you are using a layering convention then you will not be allowed to specify the report **Layer** (**Level** on MicroStation). Otherwise, you may select from the existing layers or specify a new layer for the report.
8. Select the **Line Type** from the drop down list.
9. Select the **Colour** from the drop down list box. 255 pen colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices in later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.

10. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in AutoCAD R14).


Note

Variations in line weight are only visible on printed output or in a print preview.

11. Tick **Fill** to solid fill the body outlines (AutoCAD versions only).
-

Drawing Settings: Paths: Reports: Spaced (3030)

1. This controls the appearance of the spaced outlines sub-report. It is applicable to various report types, including body, chassis, loads, etc. Each different report type may have different settings for its spaced sub-report.
2. Click on the **Spaced** tab.

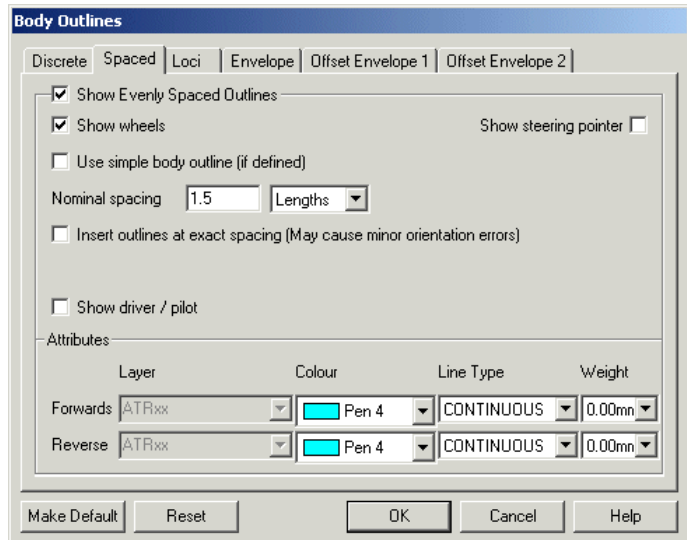

Body Outlines Report dialog: Spaced tab
(other spaced outline reports similar)

3. Tick **Show Evenly Spaced Outlines** to enable this element.
4. Tick the boxes to specify the features that you want.

The option **Use simple body outline** is available on only the discrete and spaced body outline reports. It uses the outlines defined in the vehicle's Body Outline (Plan) outline type instead of those in Body Detail (Plan).

The option to display **Label Text** is available only on the Annotation report. Leave the Label Text field blank to display the vehicle name; the text - **Path Number** - will automatically appear in the edit box.

5. Enter the required **Nominal Spacing** for the outlines. This will place outlines at the closest stored position after the specified distance.
6. If you want the spacing to be precise instead of approximate tick **Insert outlines at exact spacing**. However, note that since the vehicle orientation must be interpolated, it may be very slightly inaccurate. Therefore, for best accuracy, we recommend that you use nominal spacing.
7. Tick **Show driver / pilot** to display an icon representing the driver's location. Note that the position of the driver can be adjusted in the vehicle details.
8. If you are using a layering convention then you will not be allowed to specify the report **Layer (Level on MicroStation)**. Otherwise, you may select from the existing layers or specify a new layer for the report.

9. Select the **Line Type** from the drop down list.
10. Select the **Colour** from the drop down list box. 255 pen colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices in later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.

11. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in AutoCAD R14).


Note

Variations in line weight are only visible on printed output or in a print preview.

12. Tick **Fill** to solid fill the body outlines (AutoCAD versions only).
-

Drawing Settings: Paths: Reports: Loci ⁽³⁰⁴⁰⁾

1. This controls the appearance of the loci sub-report. It is applicable to various report types, including body, chassis, loads, etc. Each different report type may have different settings for its loci sub-report.
2. Click on the **Loci** tab.

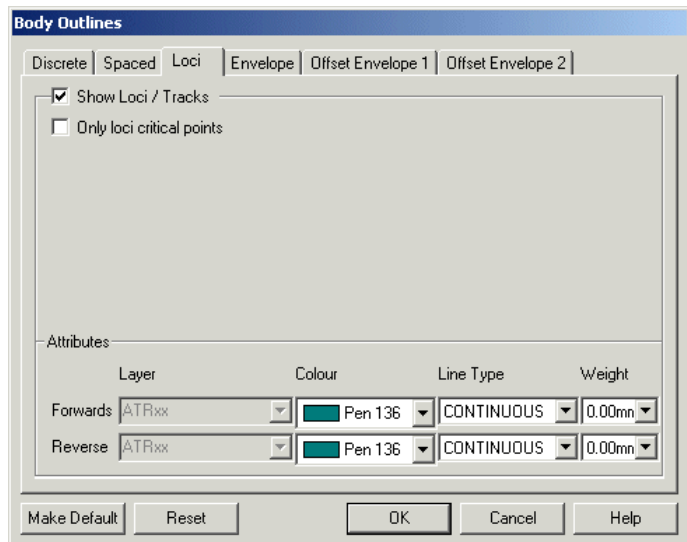

Body Outlines Report dialog: Loci tab
(other loci reports similar)

3. Tick **Show Loci / Tracks** to enable this element.
4. The Body outline report has an option **Only loci critical points**. Tick this option to trace only the front offside corners of the body and the cut-in points on each side.
5. The Chassis report has an option **Show outermost tyre tracks**. Tick this option to show the path of the inside face of the outermost tyres, i.e. if the vehicle has twin wheels then only the outer one is tracked.
6. If you are using a layering convention then you will not be allowed to specify the report **Layer (Level on MicroStation)**. Otherwise, you may select from the existing layers or specify a new layer for the report.
7. Select the **Line Type** from the drop down list.
8. Select the **Colour** from the drop down list box. 255 pen colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices on later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.


9. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in AutoCAD R14).

Note

Variations in line weight are only visible on printed output or in a print preview.

Drawing Settings: Paths: Reports: Envelope (3050)

1. This controls the appearance of the envelope sub-report. It is applicable to various report types, including body, chassis, loads, etc. Each different report type may have different settings for its envelope sub-report.
2. Click on the **Envelope** tab.

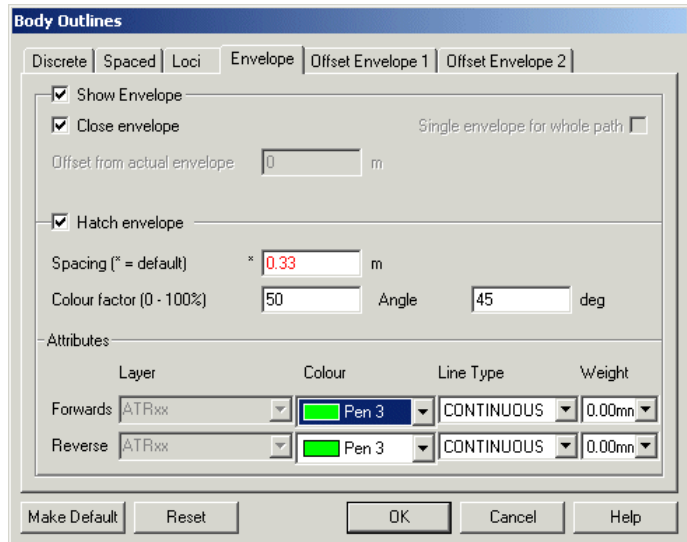

Body Outlines Report dialog: Envelope tab
(other envelope reports similar)

3. Tick **Show Envelope** to display an envelope of the movement of the vehicle.
4. Tick **Close Envelope** to join the left and right boundaries at the front and the back.
5. Tick **Hatch Envelope** to fill the envelope with hatch lines of the same type as the envelope itself.
6. **Hatch spacing** defaults to a value appropriate to the size of the vehicle, i.e. large vehicles such as aircraft will have a wider spacing than smaller vehicles such as cars.
7. The colour of the hatching is always a proportion of the envelope colour. By default, if the envelope colour is bright green the hatch colour will be dark green. The **Hatch Colour Factor** may be set to change this. A value of 100 represents 100% of the envelope colour, i.e. the same colour as the envelope.
8. Set the **Hatch Angle** to adjust the appearance of the hatching and allow overlain hatched areas to be visible.
9. Tick **Cross hatch in reverse** to hatch the envelope for reverse sections of the path in the opposite direction to the forwards sections.
10. If you are using a layering convention then you will not be allowed to specify the report **Layer (Level on MicroStation)**. Otherwise, you may select from the existing layers or specify a new layer for the report.
11. Select the **Line Type** from the drop down list.
12. Select the **Colour** from the drop down list box. 255 pen

colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices on later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.

13. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in AutoCAD R14).

Note

Variations in line weight are only visible on printed output or in a print preview.

14. Tick **Fill** to solid fill the envelope (AutoCAD versions only).
-

Drawing Settings: Paths: Reports: Offset Envelope 1

Note

Offset Envelope 2 is similar.

1. These control the appearance of each of the offset envelope sub-reports. They are applicable to various report types, including body, chassis, loads, etc. Each different report type may have different settings for its offset envelope sub-report.
2. Click on the **Offset Envelope 1** tab.
3. Tick **Show Body Offset Envelope 1** to add a clearance or safety envelope around the static envelope.
4. Enter a value for **Offset from actual envelope**. Note the default values are arbitrary.
5. Tick **Close Envelope** to join the left and right boundaries at the front and the back.
6. Tick **Hatch Envelope** to fill the envelope with hatch lines of the same type as the envelope itself.
7. **Hatch spacing** defaults to a value appropriate to the size of the vehicle, i.e. large vehicles such as aircraft will have a wider spacing than smaller vehicles such as cars.
8. The colour of the hatching is always a proportion of the envelope colour. For example, if the envelope colour is bright green the hatch colour will be dark green. The **Hatch Colour Factor** may be set to change this. A value of 100 represents 100% of the envelope colour, i.e the same colour as the envelope.
9. Set the **Hatch Angle** to adjust the appearance of the hatching and allow overlain hatched areas to be visible.
10. Tick **Cross hatch in reverse** to hatch the envelope for reverse sections of the path in the opposite direction to the forwards sections.
11. If you are using a layering convention then you will not be allowed to specify the report **Layer (Level on MicroStation)**. Otherwise, you may select from the existing layers or specify a new layer for the report.
12. Select the **Line Type** from the drop down list.
13. Select the **Colour** from the drop down list box. 255 pen colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices on later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.

 
14. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in

AutoCAD R14).

Note


Variations in line weight are only visible on printed output or in a print preview.

15. Tick **Fill** to solid fill the envelope (AutoCAD versions only).



Drawing Settings: Paths: Reports: Profile ⁽³⁰⁶⁰⁾

1. The Profile report settings control the appearance of the side elevation or profile report.
2. Click on the **Profile** tab.

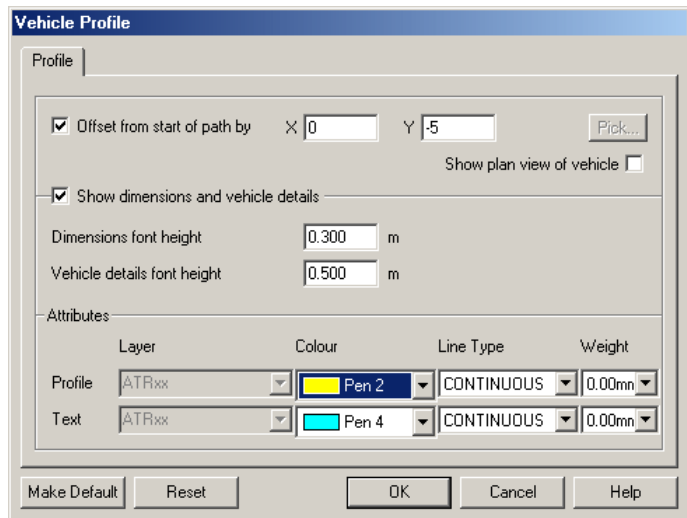

Vehicle Profile Report dialog

3. The position of the diagram can be set either relative to the start of the path or explicitly. Tick **Offset from start of path** for the former and leave it unticked to fix the position explicitly. To select the location interactively click the **Pick** button, position the report and left click to confirm.
4. If you would rather see a plan view of the vehicle, instead of an elevation, then tick **Show plan view of vehicle**.
5. Tick the **Show dimensions and vehicle details** if you want an annotated diagram. Set the **Dimensions font height** in real world units, i.e. drawing units. If you only want dimensions then set the **Vehicle details font height** to zero. Likewise if you only want vehicle details.
6. If you are using a layering convention then you will not be allowed to specify the report **Layer (Level on MicroStation)**. Otherwise, you may select from the existing layers or specify a new layer for the report.
7. Select the **Line Type** from the drop down list.
8. Select the **Colour** from the drop down list box. 255 pen colours are listed. To use a colour that is not listed select **Custom** and click on the colour swatch to select from a colour chart.

AutoCAD only

The pen numbers directly correlate with AutoCAD's pen numbering system (colour indices in later versions). If you select a custom colour that does not correspond to a defined pen colour it will be treated as TrueColor.


9. Enter a line **Weight** for the report. 0.0mm is the default and forces the thinnest possible line. Wider lines are drawn symmetrically about the centreline. (Not available in AutoCAD R14).

Note

Variations in line weight are only visible on printed output or in a print preview.

Drawing Settings: Paths: Reports: Graph ⁽³⁰⁷⁰⁾

1. This controls the appearance of the steering and articulation angles graph.
2. Click on the **Graph** tab.

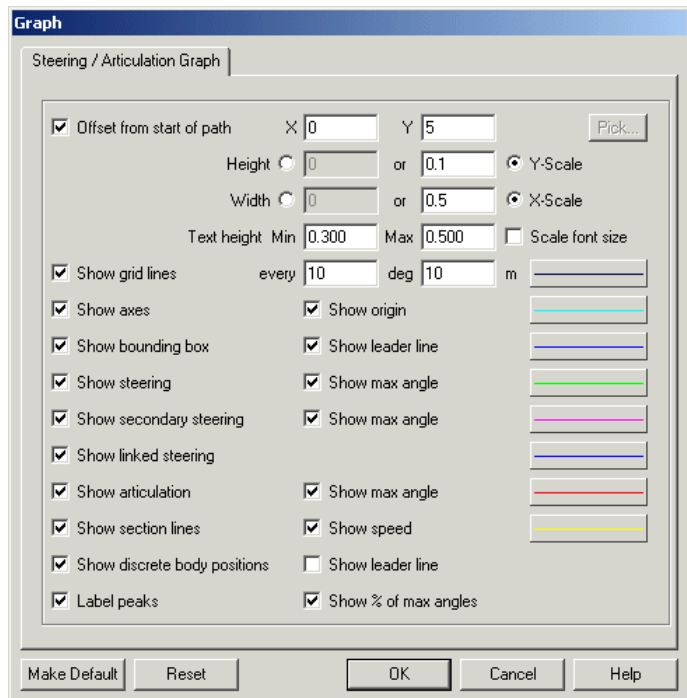

Steering/Articulation Graph Report dialog


3. The position of the diagram can be set either relative to the start of the path or explicitly. Tick **Offset from start of path** for the former and leave it unticked to fix the position explicitly. To select the location interactively click the **Pick** button, position the report and left click to confirm.
4. The height and width can be set explicitly or to be scaled with the rest of the drawing. Select **Height / Width** to set explicitly or **Y-Scale / X-Scale** to allow the graph to scale. In each case you will need to enter suitable values for height and width.
5. Enter **Text height (Min and Max)**. Tick **Scale font size** if you want the text to scale with the rest of the drawing.
6. Tick **Show grid lines** to display a regular background grid. Adjust the spacing in each direction if necessary. Click on the button to change the line attributes.
7. Tick **Show axes** to draw graph axes in a different colour. Tick **Show origin** to draw a circle at the graph origin. Click on the button to change the line attributes.
8. Tick **Show bounding box** to enclose the graph in a box. Tick **Show leader line** to draw a line connecting the bounding box to the path. Note that the position of the connecting line is automatic and cannot be manually controlled. Click on the button to change the line attributes.
9. Tick **Show steering** to plot a graph of the steering angle. Tick **Show max angle** to draw a line representing the

maximum steering angle. Click on the button to change the line attributes.

10. Tick **Show secondary steering** to plot a graph of the angles of any manually controlled secondary steered axles. Tick **Show max angle** to draw a line representing the maximum secondary steering angle. Click on the button to change the line attributes.
 11. Tick **Show linked steering** to plot a graph of the angles of any linked steered axles. Click on the button to change the line attributes.
 12. Tick **Show articulation** to plot a graph of the articulation angle(s). Tick **Show max articulation** to draw a line(s) representing the maximum articulation angle(s). Click on the button to change the line attributes.
 13. Tick **Show section lines** to draw vertical lines on the graph at every model change (i.e. change of speed, steering limit, etc). Tick **Show speed** to indicate the speed and direction along the bottom of the graph. Click on the button to change the line attributes.
 14. Tick **Show discrete body positions** to draw vertical lines wherever a discrete body outline has been placed on the path. Tick **Show leader line** to draw lines connecting the path to the graph at each discretely placed body outline. Click on the button to change the line attributes.
 15. Tick **Label peaks** to annotate the graph to showing the angle at every maximum in each direction. Tick **Show % of max angles** to also show this angle expressed as a percentage of the maximum. Click on the button to change the line attributes.
-

Drawing Settings: Paths: Animations (not Roads) ⁽²¹⁵⁰⁾

1. The Animations settings control the appearance of animations.
2. Click on the **Animations** tab.

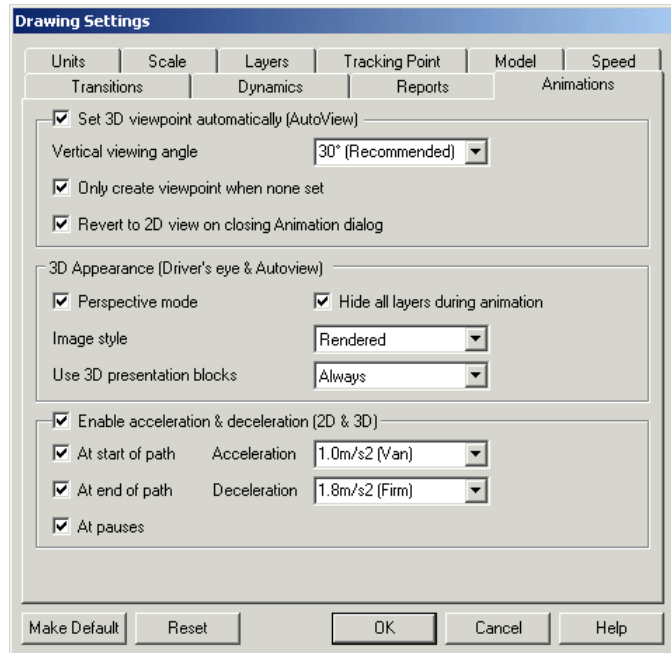

Drawing Settings dialog: Animations tab

3. By default AutoTrack automatically sets the 3D viewing angle. If you would prefer to set the viewing angle manually then untick **Set 3D viewpoint automatically**.
4. The viewing angle is set by default to 30 degrees. If you would prefer a different viewing angle then select an angle from the drop down list or enter an alternative.
5. If you want AutoTrack to only set the viewing angle when you have no view set then tick **Only create viewpoint when none set**.
6. If you want AutoTrack to switch out of 3D mode when you close the animation dialog tick **Revert to 2D view on closing Animation dialog**.
7. Tick **Perspective mode** in the **3D Appearance** section if you want to display a more realistic 3D view. This is especially so when you have a drivers eye viewpoint set.

Note

Perspective mode is not available in AutoCAD R14.

8. The 3D vehicle shape can be displayed in one of several formats. Select your preferred option from the **Image style** drop down list box.
9. Detailed 3D blocks can make the animation jerky so there is an option to control when they are used, if ever. Select when you wish to use 3D blocks from the **Use 3D blocks** drop down list box.

10. Tick **Hide all layers during animation** to hide the 2D swept path while a 3D animation is playing.
 11. Tick **Enable acceleration & deceleration** if you want vehicles to slow down and speed up realistically at pauses and changes in design speed.
 12. Tick **At start of path**, **At end of path** and / or **At pauses** to control where this feature is applied.
 13. Select the required **Acceleration** and **Deceleration** from the drop down combo box or enter your own values.
-

Templates

AutoTrack can generate templates for simple right or left turning manoeuvres.

Generating turn templates

AutoTrack Templates generates turn templates for printing only, Templates Pro additionally allows you to save them or insert them into a drawing.

To generate a turn template



*Generate Turn Template
button*

1. If you are using the stand-alone standard Templates version then when you run the software you will automatically be placed on the first page of the Template Wizard.
2. If you running any other version then you should select **Generate Turn Template** from the AutoTrack menu or click the **Generate Turn Template** button on the AutoTrack toolbar. The Template Wizard will appear (see [The Template Wizard](#)).

The Template Wizard


The Template Wizard allows you to generate turn templates for any of the hundreds of supplied vehicles. It will even allow you to generate templates for user defined vehicles although users of the basic product should be aware that vehicle editing facilities are not included.

The Template Generator uses fixed report settings (colour, linetype, etc) that the user cannot change.

DXF files produced by the Template Generator are created in AutoCAD R14 format, i.e. that they do not use the LWPOLYLINE entity.

Template Wizard: Type ⁽⁶⁵⁰⁰⁾

1. The first page of the Template Wizard lets you specify the type of template.

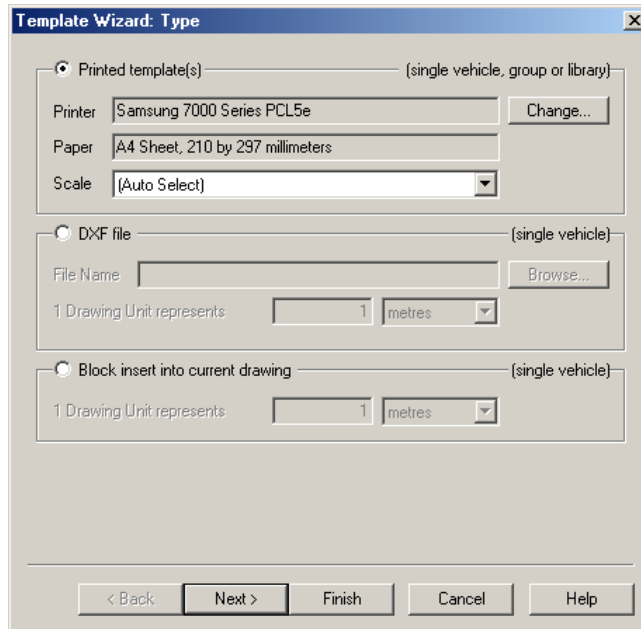

Template Wizard: Type tab

2. Select the type of template that you wish to generate, **Printed Template(s)**, **DXF file** or **Block Insert (into the current drawing)**. Note that only the printing option is available to users of the standard Templates product.
3. **Printed Templates**

Select the printer if necessary using the **Change** button.

Set the **Scale**. The option (**Auto Select**) will pick the largest sensible scale taking into account the manoeuvre and paper size. The option (**Scale to Fit Paper**) will produce the largest true to scale template that will fit on the paper.

DXF File (not standard Templates version)

Enter the file name using the **Browse** button if necessary.

Set the scale of the template, e.g. if you normally prepare drawings in millimetres then set the scale to 1 drawing unit represents 1 millimetre. If you use various drawing units then either generate templates in each unit or simply scale the block upon insert into the drawing.


Block insert (not standard Templates version)

Set the scale of the template, e.g. if you are inserting the block into a drawing prepared in millimetres then set the scale to 1 drawing unit represents 1 millimetre.

4. Click **Next** to move the next page.

Template Wizard: Vehicle ⁽⁶⁵¹⁰⁾

1. The Vehicle page lets you select the vehicle(s) for your templates.

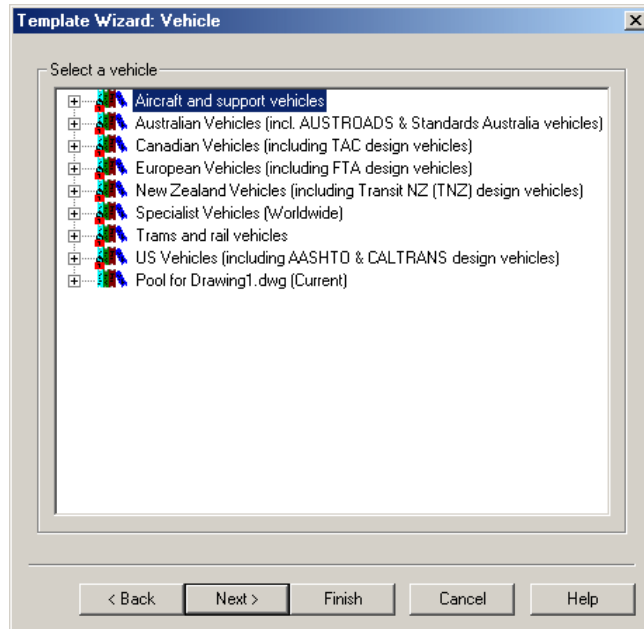

Template Wizard: Vehicle tab

2. Select the vehicle you wish to generate the template for, clicking on the + symbol to expand a library or group and – to collapse it. Note that printed templates can be generated for an entire group or library at a time.
3. If the selected vehicle cannot perform the turn requested, because it has very strict articulation limits for example, the template will only show the part that could be negotiated.
4. Click **Next** to move to the next page.

Template Wizard: Model Settings ⁽⁶⁵¹⁵⁾

1. The Model Settings page lets you control the turn transition.

Template Wizard: Model Settings

Limit turn rate (transition curve)

Based upon lock to lock time (defined in vehicle) and design speed

Template design speed km/h

Based upon lock to lock distance

Lock to lock distance metres

Based upon a circular tangential arc

< Back Next > Finish Cancel Help

Template Wizard: Model Settings

2. Tick **Limit turn rate** if you want to include a transition curve into the turn. If you leave this unticked the vehicle will be able to turn instantaneously. Note that there are various official sources of printed templates available, e.g. the AASHTO Green Book. If you wish to generate templates that match these you will need to select the correct transition curve. In the case of the AASHTO standard you should set the transition to **Based upon a circular tangential arc**.

Note

These settings apply only to template generation and do not affect other drive modes.

Template Wizard: Turn Angles (6520)

1. The Turn Details page lets you define the content of the templates.

Template Wizard: Turn Details

Turn radius

Turn as tight as possible

Turn on a fixed radius of metres

Turn angles (tick all required)

<input checked="" type="checkbox"/>	<input type="text" value="30"/>	<input checked="" type="checkbox"/>	<input type="text" value="150"/>	<input type="checkbox"/>	<input type="text" value="270"/>
<input checked="" type="checkbox"/>	<input type="text" value="60"/>	<input checked="" type="checkbox"/>	<input type="text" value="180"/>	<input type="checkbox"/>	<input type="text" value="300"/>
<input checked="" type="checkbox"/>	<input type="text" value="90"/>	<input type="checkbox"/>	<input type="text" value="210"/>	<input type="checkbox"/>	<input type="text" value="330"/>
<input checked="" type="checkbox"/>	<input type="text" value="120"/>	<input type="checkbox"/>	<input type="text" value="240"/>	<input type="checkbox"/>	<input type="text" value="360"/>

Angles

Overturns

Side overturn distance metres

Exit overturn distance metres

Max. overturn angle


< Back Next > Finish Cancel Help

Template Wizard: Turn Details tab

2. By default the vehicle will turn as tight as it can. If you want the vehicle to turn on a specific radius, around a roundabout for example, then select **Turn at a fixed radius** and enter the inner, outer or centreline body or chassis radius.
3. To specify the **Turn angles** you require tick a box and enter the angle in the box provided.
4. The **Angles** button toggles through various combinations of angles. You may disable as many or as few of the angles.
5. You may also specify overturns. Tick **Side overturn** or **Exit overturn** and enter the deviation distance from the normal path. The **Max overturn** angle controls the severity of the overturn by limiting the angle by which the vehicle may deviate from the optimum path.
6. Click **Next** to move to the next page.

Template Wizard: Format (6530)

1. The Format page lets you specify the presentation of your template(s).

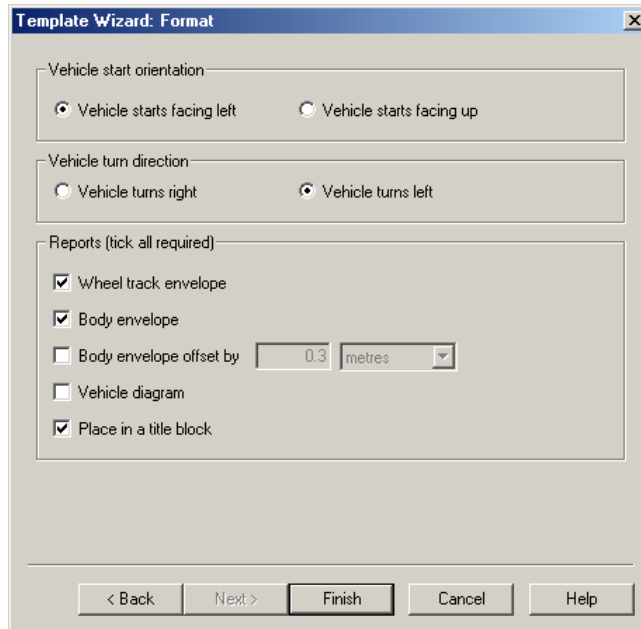

Template Wizard: Format tab

2. Select the **Vehicle start orientation**. Note that if you are inserting the template into a drawing you will be able to rotate it as it is inserted.
3. Select the **Vehicle turn direction**. If you are generating printed templates then this may be affected by which side of the road you drive on.
4. Tick **Wheel track envelope** to if kerbs are likely to be critical and / or **Body envelope** if walls or other high level obstacles are likely to be critical. Tick **Offset body envelope** to show an envelope with clearance margin. You can adjust the offset distance.

Note

You must select at least one of these reports but you may select more than one.

5. Tick **Add vehicle diagram** to show a dimensioned image of the vehicle alongside the template. This is particularly useful on the printed templates.
6. If you are generating printed templates then you may wish to tick **Place in a title block**. This will add a title block with the vehicle name and other details.
7. Click **Finish** to generate the template.
8. If you are inserting a block then move it into position and confirm by left clicking. You may use the Rotate command to adjust the orientation.

Swept Paths: Creating paths

There are six drive modes in the full version of AutoTrack; AutoDrive Arc, AutoDrive Bearing, Manual Drive, Follow, Script and Vertical Clearance. Each may be accessed either directly from the toolbar or the drop down menu. A further drive mode allows you to insert parked vehicles.

AutoTrack Lite has Manual Drive, Follow and Script but does not have AutoDrive Arc, AutoDrive Bearing, Vertical Clearance or Dynamic Editing. It does however have the Park mode.

AutoTrack for Light Rail Design has only one drive mode, namely Guided Drive.

AutoDrive (Roads only)

AutoDrive operates in two modes, Arc and Bearing. Both are controlled via a floating dialog which allows the user to adjust various parameters.

In Arc mode AutoTrack calculates a path, consisting of circular arcs, through target points specified by the user. In doing so it automatically generates any transitions necessary between segments.


In Bearing mode AutoTrack turns the vehicle as quickly as possible subject to the allowable lock rate **until the steered wheels are on a bearing through the target point** and then continues on that bearing **until the selected path point reaches the target**.

To use AutoDrive in Arc mode



AutoDrive Arc button

1. Select **AutoDrive Arc** from the AutoTrack drop down menu or click the **AutoDrive Arc** button on the AutoTrack toolbar.
2. If you have a default vehicle set up then AutoDrive will use this vehicle and you should go to step 6. If you want to use a different vehicle then right click now and refer to [Changing your vehicle](#). Otherwise...
3. If you have a path pre-selected then AutoDrive will use the current vehicle and position and you should go to step 7. Otherwise...
4. The Library Explorer will appear for you to select a vehicle.

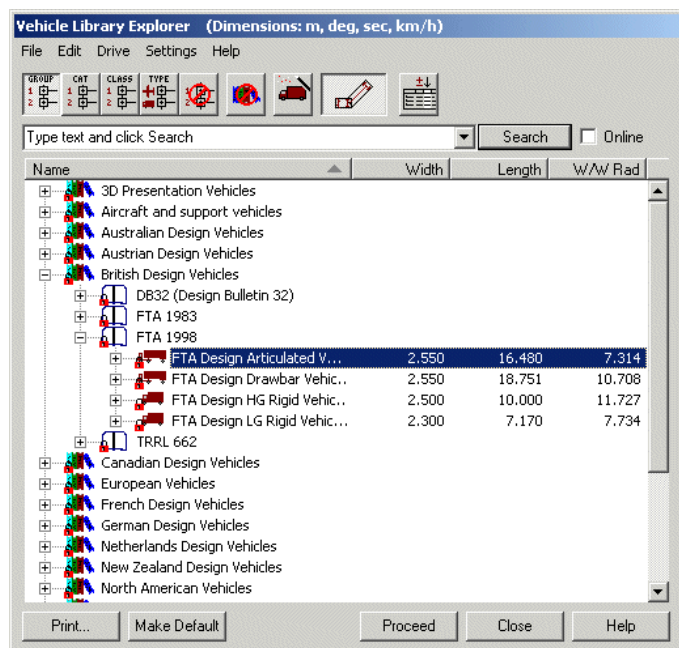

Library Explorer dialog

5. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
 6. Your chosen vehicle will be displayed and can be positioned using the mouse. Position and orient your vehicle and click **Proceed**. For help on how to position a vehicle refer to [Positioning a vehicle interactively](#) later in this section.
-

Note

If you have a simple body defined (i.e. of report type *Body Outline (Plan)*) AutoTrack will use this, otherwise it will use the detailed plan of type *Body Detail (Plan)*.

7. Drive the vehicle (see below) and right click when finished.

To drive forwards on an arc

1. Move the cursor in front of the vehicle and pause. A ghosted image will show the path the vehicle will travel from the last position through the target point (the cursor).
2. If you cannot see a vehicle you may have your drawing units set incorrectly.
3. A straight red line connecting the cursor to the last position indicates that you are requesting a manoeuvre that cannot be performed and the error will be displayed in the bottom left corner of the AutoCAD status bar. Try moving the cursor to perform a less severe turn.
4. Move the cursor until the vehicle is in the desired position and left click to confirm. A vehicle outline will be drawn at the selected location and you may now repeat the process for the next position.
5. The AutoDrive options dialog allows you to specify a minimum radius and to change settings for the current turn. See below.
6. To turn tight and then travel straight tick **Drive onto bearing**.

To drive backwards on an arc

1. Move the cursor behind the vehicle and pause. A ghosted image will show the path the vehicle will travel from the last position through the target point (the cursor).
2. A straight red line connecting the cursor to the last position indicates that you are requesting a manoeuvre that cannot be performed and the error will be displayed in the bottom left corner of the AutoCAD status bar. Try moving the cursor to perform a less severe turn.
3. Move the cursor until the vehicle is in the desired position and left click to confirm. A vehicle outline will be drawn at the selected location and you may now repeat the process for the next position.


To use AutoDrive in Bearing mode



AutoDrive Bearing button

1. Select **AutoDrive Bearing** from the AutoTrack drop down menu or click the **AutoDrive Bearing** button on the AutoTrack toolbar. The default turn angle is 90 degrees. Note that **on AutoCAD platforms only** AutoDrive Bearing has a flyout toolbar listing standard turn angles of 30, 45, 60, 90, 120, 135, 150 and 180 degrees.

2. If you have a default vehicle set up then AutoDrive will use this vehicle and you should go to step 6. If you want to use a different vehicle then right click now and refer to [Changing your vehicle](#). Otherwise...
3. If you have a path pre-selected then AutoDrive will use the current vehicle and position and you should go to step 7. Otherwise...
4. The Library Explorer will appear for you to select a vehicle.

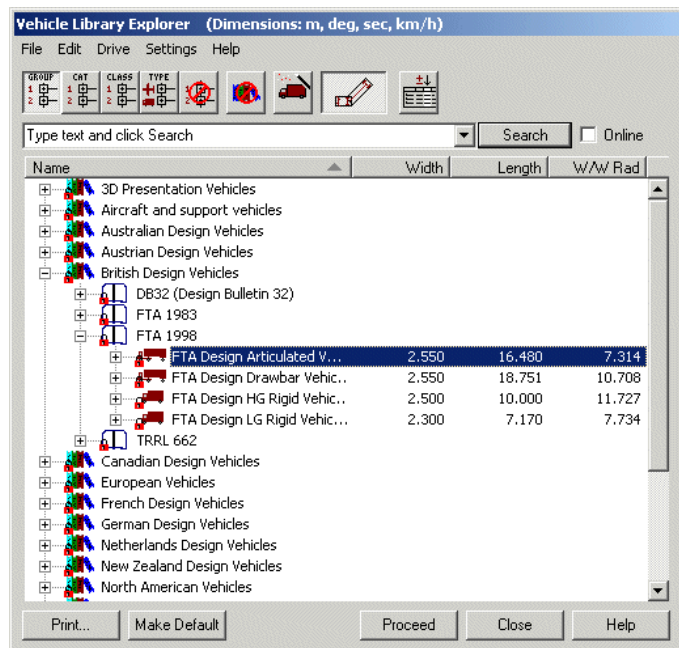


Library Explorer dialog

5. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
6. Your chosen vehicle will be displayed and can be positioned using the mouse. Also displayed will be the AutoDrive Bearing options dialog. Position and orient your vehicle and click **Proceed**. For help on how to position a vehicle refer to [Positioning a vehicle interactively](#) later in this section.
7. Move the cursor in front of the vehicle and pause. A ghosted image will show the path the vehicle will travel from the last position through the target point (the cursor). Notice how the path is different from AutoDrive Arc.
8. Move the cursor until the vehicle is in the desired position and left click to confirm. A vehicle outline will be drawn at the selected location and you may now repeat the process for the next position.
9. You can delete the last selected position (target point) by simply left clicking with the cursor inside the wheelbase of the last drawn vehicle outline. This can be repeated back to the start of the path.
10. The AutoDrive options dialog allows you to specify turn angle and or radius and to change settings.
11. To drive arcs instead of straight segments untick **Drive onto**

bearing in the AutoDrive options dialog.

AutoDrive options ⁽⁵¹¹⁰⁾

1. The AutoDrive dialog appears when you use either of the AutoDrive modes. It allows you not only to set turning criteria but also to switch between arc and bearing mode.

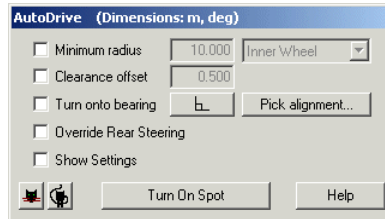


AutoDrive dialog (Arc mode)

2. To limit the turning radius tick **Minimum radius**, enter a value in the box and press <Tab> or <Enter>. You can select Inner Wheel or Outer Wheel to limit the inside or outside wheel tracking radius respectively, Inner Body or Outer Body to limit the inner or outer body envelope radius or Centreline to limit the radius at the centre of the steered axle.

Note

Vehicle turning limitations still take precedence over the value in this field.

3. To show a clearance zone around the vehicle tick **Clearance Offset**. You may edit the offset value. The clearance envelope applies to both body and chassis, i.e. an offset envelope will be displayed outside the body static envelope and another outside the chassis static envelope. If you want to use a clearance envelope during driving then you should refer to Settings, AutoDrive.
4. To switch to bearing mode tick **Turn onto bearing** and to switch back untick it. When ticked the dialog expands to show extra fields.

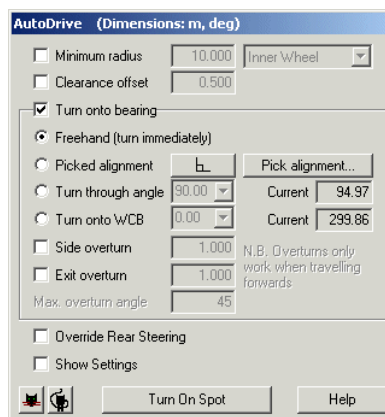


AutoDrive dialog (Bearing mode)

5. Select **Freehand turn** (the default) to turn immediately and drive straight to the cursor. In this case the vehicle still turns as tightly as current constraints allow but there is never any straight section preceding the turn.
6. Select **Picked alignment** to specify the alignment by picking

a line or line segment from the drawing. You can align the vehicle parallel to the selected line or depress the **Perpendicular To** button to align the vehicle perpendicular to the selected line. Click the **Pick alignment** button to pick the alignment.

7. Select **Turn through angle** to turn as late as possible through a fixed angle. Select the angle from the drop down list or enter a value. The vehicle will turn as tightly as possible, subject to current constraints, through the specified angle and then drive straight to the cursor. As you move the cursor away from the last target point the sections preceding and following the turn adjust accordingly.
8. After the next target point has been picked following selection of a non-freehand bearing mode the bearing mode will switch automatically back to freehand mode.
9. Select **Turn onto WCB** (whole circle bearing) to turn as late as possible onto a fixed heading. Select the heading from the drop down list or enter a value. Again, the vehicle will turn as tightly as present constraints allow onto the specified heading and then straighten and drive to the cursor.
10. The current angle and bearing are displayed in the adjacent read-only boxes.
11. Select **Side overturn** to start the turn with opposite lock thereby reducing trailing axle cut-in. By adjusting the side overturn distance you can alter the size of the deviation.
12. Select **Exit overturn** to continue the turn beyond the required exit angle prior to turning back onto the required exit angle. As with side overturn this reduces trailing axle cut-in.
13. Adjust the **Max overturn angle** to alter the severity of the overturn. This is the maximum opposite lock bearing deviation. For example, if the vehicle commences a right turn from straight ahead on a bearing of 0 deg, a max overturn angle of 30 deg would allow the vehicle to turn left onto a maximum bearing of -30 before turning back. Note that the maximum overturn angle may not be reached when using smaller overturn distances.
14. If the vehicle has manually controllable secondary steering then to switch it on tick **Override rear steering**. Unlick it to switch it off again. You can also do this by clicking the mouse wheel. When secondary steering is switched on the dialog expands to show more fields.

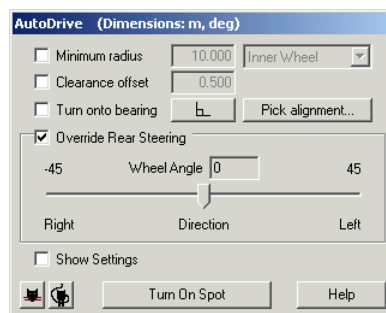


AutoDrive dialog (Secondary Steering)

15. The secondary steering may involve adjusting a linkage ratio or the wheel angle directly. Either way the slider shows the range of values. The current value is displayed in a box

labeled either **Linkage Ratio** or **Wheel Angle** depending according to the vehicle definition.

16. The easiest way to adjust the secondary steering value is to use the mouse wheel but you can move the slider if you prefer.
17. To check what other constraints are current tick **Show Settings**. When ticked the dialog expands to show the main settings.

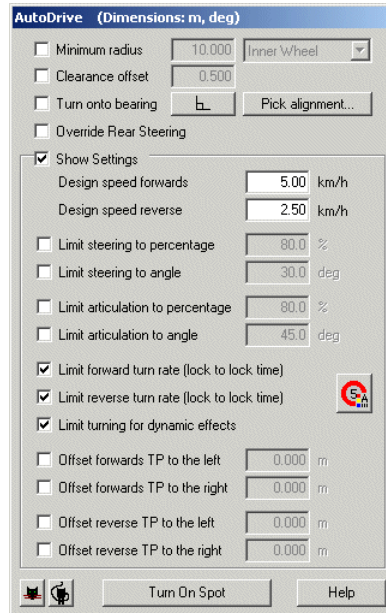

AutoDrive dialog (Show Settings)



Forwards and Reverse Predictive Turning buttons

18. Depress the **Forward Predictive Turning** button to switch on the Predictive Turning envelope for forward manoeuvres or the **Reverse Predictive Turning** button for the same in reverse. You can change the settings for these in the AutoDrive settings. Note that for articulated vehicles the predictive turning envelopes are based upon a percentage (set in AutoDrive settings) of the tightest turn possible without the vehicle over-articulating. Thus it may be possible to turn tighter than the 100% envelope for a short distance.
19. Depress the **Turn on spot** button to disable any turn transitions for just the current step. The steering will turn instantaneously at the start of the step only. As soon as you click the next target position the option will be reset.
20. To limit the steering tick **Limit steering to percentage** or **Limit steering to angle** and edit the value if required. Note that limiting the steering by percentage is vehicle independent whereas limiting to a specific angle is not.
21. To limit the articulation angles tick **Limit articulation to percentage** or **Limit articulation to angle** and edit the value if required. Note that limiting the articulation angles by percentage is vehicle independent whereas limiting by angle is not.
22. To allow steering to be turned whilst the vehicle is stationary untick **Limit forward turn rate** or **Limit reverse turn rate**. When these limits are disabled (unticked) you should be able to see the steering pointer (if displayed) at the last picked position changing as you move the cursor to change the

current position.

23. If you are modeling higher speed manoeuvres (above about 15kph) then you may wish to tick **Dynamic effects**. This limits the turn radius to allow for passenger comfort. See [Drawing Settings: Transitions \(not Rail\)](#) ⁽²⁰⁸⁵⁾ for more details).
 24. Tick **Offset forwards TP** (Tracking Point) or **Offset reverse TP** to offset the tracking point.
 25. If you need to modify a value that is not listed click the **Current Model** button.
-

Manual Drive (not Rail)


Manual Drive allows you to control the vehicle interactively much like the real vehicle, albeit with a different viewpoint and controls.

To use Manual Drive




Manual Drive button

1. Select Manual Drive from the AutoTrack drop down menu or click the **Manual Drive** button on the AutoTrack toolbar.
2. If you have a default vehicle set up then Manual Drive will use this vehicle and you should go to step 6. If you want to use a different vehicle then right click now and refer to [Changing your vehicle](#). Otherwise...
3. If you have a path pre-selected then Manual Drive will use the current vehicle and position and you should go to step 7. Otherwise...
4. The Library Explorer will appear for you to select a vehicle.

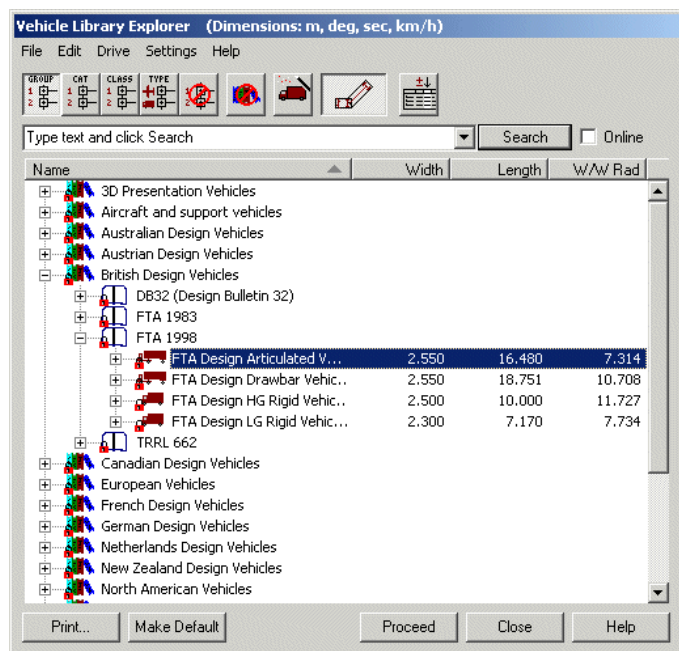

Library Explorer dialog

5. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
6. Position and orient your vehicle and click **Proceed**. For help on how to position a vehicle refer to [Positioning a vehicle interactively](#) later in this section.
7. The Control Overlay will appear.

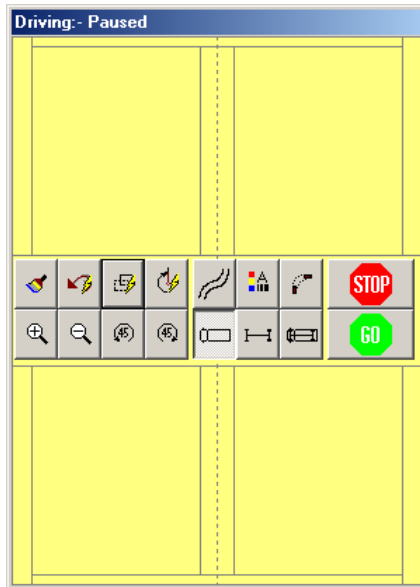

Manual Drive Control Overlay

8. By default the overlay will appear in the bottom right corner of the screen. If you find this awkward the location and size of the overlay can be changed in Manual Drive Settings.

To start driving (Control Overlay) ⁽⁶⁰²⁰⁾

If you are using the default button functionality....



Go button

1. Click the **Go** button. The buttons will disappear and the cursor now represents requested steering angle and rate at which the path is generated (not design speed).
2. The vehicle will start to move when you move the cursor out of the stop zone. Notice how the caption bar changes from Driving: PAUSED to Driving: Forwards or Driving: Reverse to reflect the direction of travel. Click the left button again when you wish to pause.
3. Move the cursor between the two centre horizontal bands to stop moving, above the bands to go progressively faster forwards and below the bands to go progressively faster in reverse.
4. Move the cursor left to turn the steered wheels left and vice versa. Practice reversing and driving rear steered vehicles until you feel comfortable with the steering response.
5. A dotted line representing the current wheel angle is displayed on the overlay. If you have steering rate limits enabled you may notice that it lags behind the requested steering angle represented by the cursor. The degree to which it lags behind depends upon the steering rate criteria. The actual wheel angle line will snap the centre of the full lock and straight ahead zones.
6. Click anywhere on the overlay to pause the vehicle and redisplay the buttons.

If you have specified hold down button to drive...

1. Move the cursor into the zone above or below the buttons and hold down the left mouse button. The buttons will disappear and the cursor now represents requested steering angle and rate at which the path is generated (not design speed).
41. As long as you hold the button down the overlay buttons will not be visible and the vehicle will start to move as you move the cursor out of the stop zone. Notice how the caption bar changes from Driving: PAUSED to Driving: Forwards or Driving: Reverse to reflect the direction of travel. As soon as you release the left mouse button the vehicle will stop moving and the overlay buttons will reappear.
42. Move the cursor between the two centre horizontal bands to stop moving, above the bands to go progressively faster forwards and below the bands to go progressively faster in reverse.
43. Move the cursor left to turn the steered wheels left and vice versa. Practice reversing and driving rear steered vehicles until you feel comfortable with the steering response.
44. A dotted line representing the current wheel angle is displayed on the overlay. If you have steering rate limits enabled you may notice that it lags behind the requested steering angle represented by the cursor. The degree to which it lags behind depends upon the steering rate criteria. The actual wheel angle line will snap the centre of the full lock and straight ahead zones.
45. Release the mouse button to pause the vehicle and redisplay the buttons.

Note

If you have configured your mouse for left-handed use or selected left hand drive in the Manual Drive settings then you will need to hold down the right mouse button to drive.

To pause driving

If you are using the default button functionality....

1. Right click. The overlay buttons will appear.

If you have specified hold down button to drive...

1. Release the left mouse button. The overlay buttons will appear.

Note

If you have swapped the mouse button functionality, either in the Windows Control Panel or in the Manual Drive settings then you will need to click (or release) the right mouse button.

To adjust the view

1. For your convenience the View toolbar functions are repeated on this dialog. For help in adjusting the view refer to [Adjusting the view](#).

To undo part of the path



Auto Undo button

1. If the overlay buttons are not displayed pause driving to display them.
2. Click the **Auto Undo** button.
3. The path will be shortened by the Auto Undo distance. The Auto Undo distance is 2.5m by default but can be modified if a different value is more appropriate. For details of how to modify the Auto Undo distance refer to [System Settings: Manual Drive \(not Rail\)](#).

To redraw the path and update the reports



1. If the overlay buttons are not displayed pause driving to display them.
2. Click the **Redraw** button.
3. The path and all reports will be redrawn.

To show or hide the vehicle trail



Show Trails button

1. If the overlay buttons are not displayed pause driving to display them.
2. Click the **Show Trails** button to toggle displaying and hiding vehicle trails as you drive. If the button is depressed trails will be displayed.

To edit the path properties



Properties button

1. If the overlay buttons are not displayed pause driving to display them.
2. Click the **Properties** button.
3. The Path Properties dialog will appear. Edit the properties and click **OK** to confirm and resume driving.

To edit the path reports



Reports button

1. If the overlay buttons are not displayed pause driving to display them.
2. Click the **Reports** button.
3. The path properties dialog will appear with the Reports tab foremost. Edit the reports and click **OK** to confirm and resume driving.

To terminate the current path



Stop button

1. If the overlay buttons are not displayed pause driving to display them.
 2. Click the **Stop** button.
 3. The control overlay will disappear.
-

Follow (not Rail)


Follow allows you to track a vehicle along a predefined polyline or spline and is useful if the path that your vehicle will take is well defined, e.g. aircraft manoeuvring on airport taxiways. It can be used in conjunction with the other drive modes.

To use Follow




Follow button

1. Select **Follow** from the AutoTrack drop down menu or click the **Follow** button on the AutoTrack toolbar.
2. If you have a default vehicle set up then Follow will use this vehicle and you should go to step 6. If you want to use a different vehicle then right click now and refer to [Changing your vehicle](#). Otherwise...
3. If you have a path pre-selected then Follow will use the current vehicle and position and you should go to step 6. Otherwise...
4. The Library Explorer will appear for you to select a vehicle.

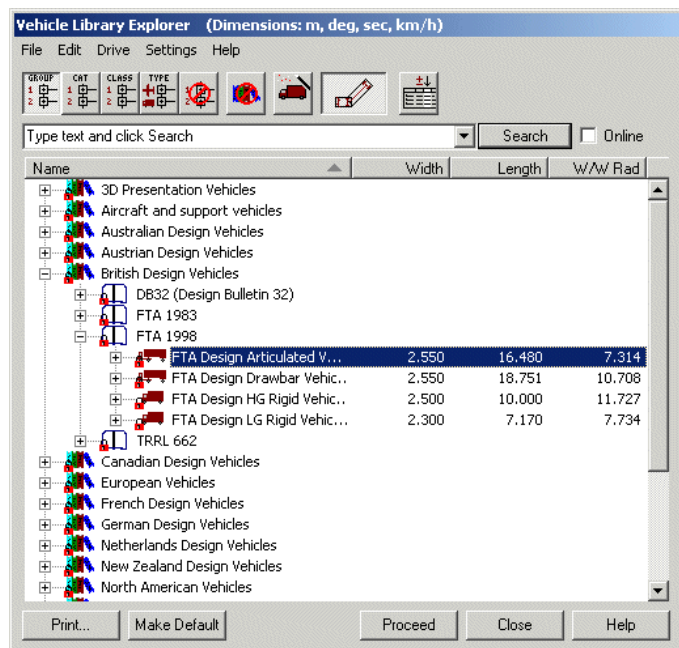

Library Explorer dialog

5. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
6. Pick an AutoCAD polyline (which may be 2D, 3D, splined, curve-fitted or contain straight and/or arc segments) or spline (2D, non-closed, non-periodic splines only) or MicroStation complex chain. The vehicle will follow the line starting at the end closest to the point picked. Closing segments of closed polylines are ignored.
7. The Follow Settings dialog will appear.

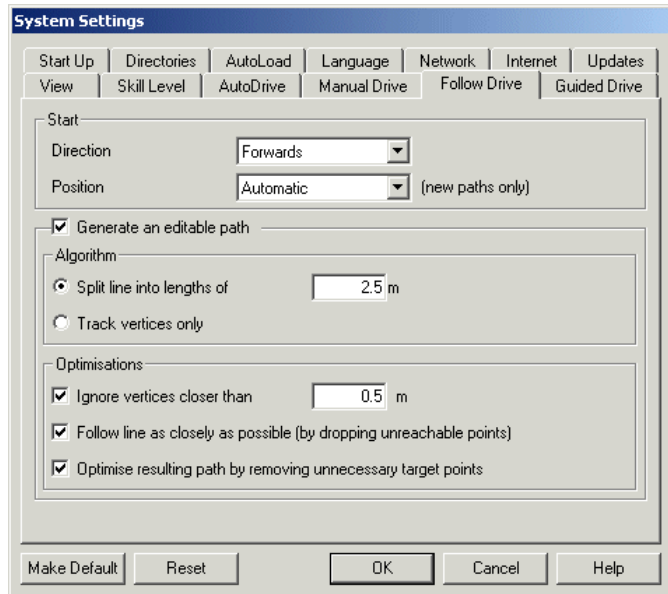

Follow Drive Settings dialog

8. Make sure that the **Start Direction** is set to the correct direction. Select Forwards or Reverse to force the direction of travel. Select Keep Current to continue in the current direction (if this manoeuvre follows one performed using a different drive mode). Select Automatic to determine the direction of travel based upon the orientation of the vehicle relative to the starting vertex of the polyline.
9. If you have a path pre-selected then the current vehicle position and orientation will be used and you should go to step 10. Otherwise, you will probably want **Start Position** set to Automatic, which will start the vehicle at the end of the line closest to the point you picked, with the steered wheels tangential to the line and all the spines aligned. If you want to adjust the position of the vehicle then select Manual.
10. If you are modelling aircraft then you should click on the Tracking Point tab and check that the Tracking Point's are set correctly, i.e. typically, Pilot's Eye or Front most Axle.
11. Change any other settings if necessary (see [System Settings: Follow Drive \(not Rail\)](#)) and then click **OK**.
12. The swept path will be generated and the path redrawn.

Script (not Rail)


The Script language allows you to specify paths as a series of very well defined and manoeuvres. This means that you can generate “templates” of commonly used manoeuvres. It works with or without a pre-selected vehicle or path.

To create or edit an AutoTrack script ⁽⁶⁰⁵⁰⁾



Script button

1. Select **Script** from the AutoTrack drop down menu or click the **Script** button on the AutoTrack toolbar.
2. The Script Editor will appear. If you have already edited a script then this will appear in Command Script window.

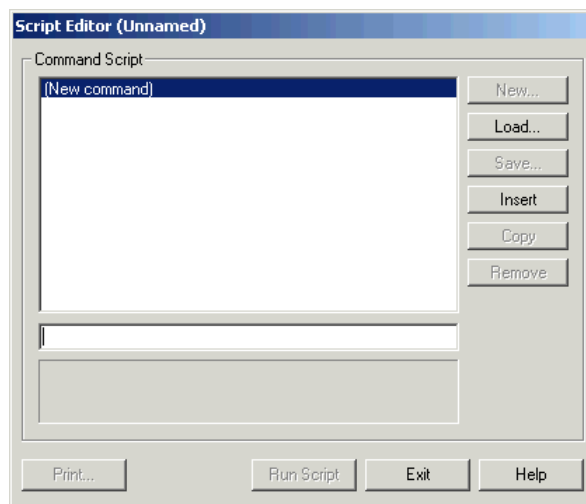

Script Editor

3. Type your manoeuvre commands in the edit box. Each line that you type will be added to the Command Script window.
4. To remove a line, highlight it in the Command Script window and click **Remove**. The line will be removed.

Tip

You can select multiple lines for deletion by dragging and/or using Ctrl-Click.

5. To insert a command, highlight the position in the Command Script window and click **Insert**. A blank line will be inserted.
6. To copy a line to the end of the script, highlight it in the Command Script box and click **Copy**.

Tip

Select multiple lines for copying by dragging and/or using Ctrl-Click.

7. To clear the current command script click **New**.
8. You may print a hardcopy of a script by clicking the **Print** button.
9. A full list of script commands appears at the end of this section.

To run an AutoTrack script

1. Create or load the required script.
2. Make sure that you have no path selected and then click the **Run Script** button.
3. The manoeuvre(s) will be generated on layers defined by the current layering convention settings. However, unlike other drive modes the script command will not prompt for a layer name if this option is enabled.
4. If the manoeuvre is incomplete then check the command line, it was probably impossible.

To save an AutoTrack script

1. Click the **Save** button. The Save As dialog will appear.
2. Browse to the directory in which you wish to save the script and then click **Save**.

To load an AutoTrack script

1. Click the **Load** button.
2. Browse to find the file that you wish to load and then click **Load**.

AutoTrack script commands

There follows a list of script commands for reference purposes.

Script Commands: General

;text

Comment line (ignored)

Etext

Echo text to the command line when the script is run

Utext

Set the distance units for the rest of the script to text, where text is a valid units abbreviation (e.g. 'ft', 'm', 'mm' etc.). The default units are metres.

Script Commands: New Path

AutoTrack will automatically prompt for a vehicle, i.e. issue a **v?** command, if none is given in the script. A **v?** command in a script is ignored if a vehicle or path has been pre-selected.

N

Start a new path, using the currently selected vehicle (the start settings of the new path match the old path)

v?

Select the vehicle interactively (prompts for a vehicle using the Library Explorer)

Script Commands: Positional

The following positional commands are ignored if a drive command has been issued or if a path has been pre-selected. AutoTrack will automatically prompt for position, i.e. issue a **P?** command, if none is given in the script.

P?

Set the position interactively
(if this command is placed at the end of the script you will be able to position the scripted manoeuvre)

Px, y

Set the start position of the path to **x, y** in the current UCS

H?

Set the heading interactively

Hb

Set the heading to **b** degrees in the current UCS

S?

Set the wheel angle interactively

Sa

S+a

Set the steering right at angle **a**

Sra

Set the steering right at angle **a**

S-a

Set the steering left at angle **a**

Sla

Set the steering left at angle **a**

A?

Set the articulation angles of all units interactively
(prompts for unit and then angle)

An?

Set the articulation angle of unit **n** interactively
(prompts for just the angle)

An a

Set the articulation angle of unit **n** **a** degrees to the right

An +a

Set the articulation angle of unit **n** **a** degrees to the right

AnRa

Set the articulation angle of unit **n** **a** degrees to the right

An -a

Set the articulation angle of unit **n** **a** degrees to the left

AnLa

Set the articulation angle of unit **n** **a** degrees to the left

Script Commands: Drive

Drive commands take the general form:-

{Direction}{Manoeuvre}[Turn condition]{Stop condition}

In the following list {S} indicates a mandatory stop condition and [T] indicates an optional turn condition.

F{S}

Drive forwards at current steering angle

R{S}

Reverse at current steering angle

FC{S}

Drive forwards at current steering angle

RC{S}

Reverse at current steering angle

FH{S}

Drive forwards with hands off
(i.e. maintaining current wheel heading)

FL[T]{S}

Drive forwards and turn left as tightly as possible

RL[T]{S}

Reverse and turn left as tightly as possible

FR[T]{S}

Drive forwards and turn right as tightly as possible

RR[T]{S}

Reverse and turn right as tightly as possible

Script Commands: Stop Conditions {S}

A vehicle will automatically stop if it encounters an error state, for example if it over-articulates.

A

Stop when the wheel angle has increased by angle **a**
(in the direction of the turn)
N.B. applies only to turn commands, e.g. FL, FR, etc

Ba

Stop when the wheel bearing has reached **a**

Wa

Stop when the wheel angle has increased by angle **a**
(in the direction of the turn)

Wba

Stop when wheel bearing reaches **a** in the current UCS

d

Stop after distance **d**
N.B. applies only to non-turn commands, e.g. F, R, etc

Dd

Stop after distance **d**

Ta

Stop when tractor spine angle has increased by angle **a**

Tba

Stop when tractor spine reaches bearing **a** in the current UCS

Un a

Stop when the spine angle of unit **n** has increased by angle **a**

UnBa

Stop when the spine angle of unit **n** reaches bearing **a** in the current UCS

Aa

Stop when any articulation angle exceeds angle **a**

An a

Stop when the articulation angle of unit **n** exceeds angle **a**

An1 : n2 a

Stop when the articulation angle between units **n1** and **n2** reaches angle **a**

Script Commands: Turn Conditions [T]

Cr

Set the steering to achieve a centre line chassis radius **r**

Or

Set the steering to achieve an outer wheel radius **r**

Ir

Set the steering to achieve an inner wheel radius **r**

Obr

Set the steering to achieve an outer body radius **r**

Ibr

Set the steering to achieve an inner body radius radius **r**

Sa

S+a

Set the steering right at angle **a**

S-a

Set the steering left at angle **a**

Guided Drive (Rail only)


The Guided Drive mode is used for trams and other light rail vehicles in which the vehicles position is entirely dictated by the rail layout.

To use Guided Drive




Guided Drive button

1. Select **Guided Drive** from the AutoTrack drop down menu or click the **Guided Drive** button on the AutoTrack toolbar.
2. If you have a default vehicle set up then AutoTrack will use this vehicle and you should go to step 6. If you want to use a different vehicle then right click now and refer to [Changing your vehicle](#). Otherwise...
3. If you have a path pre-selected then AutoTrack will use the current vehicle and position and you should go to step 7. Otherwise...
4. The Library Explorer will appear for you to select a vehicle.

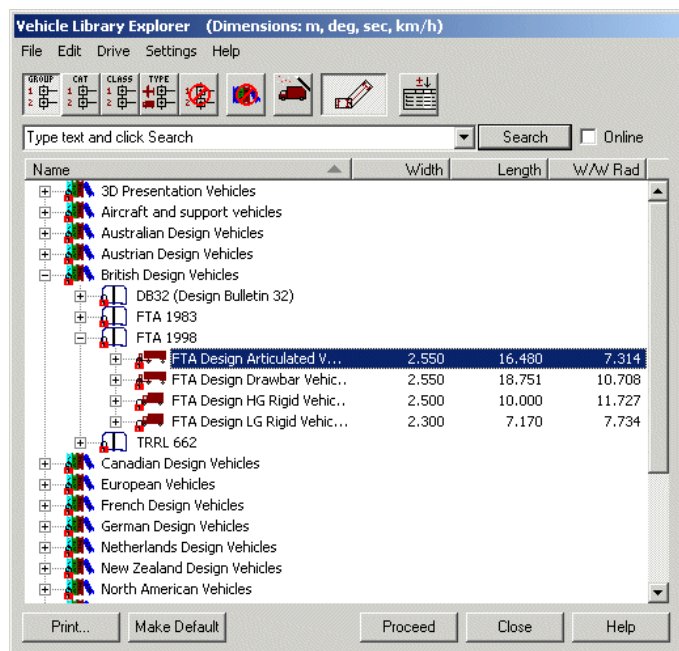

Library Explorer dialog

5. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
 6. Pick an AutoCAD polyline (which may be 2D, 3D, splined, curve-fitted or contain straight and/or arc segments) or MicroStation complex chain. The vehicle will follow the line starting at the end closest to the point picked. Closing segments of closed polylines are ignored.
 7. The Guided Drive Settings dialog will appear.
-

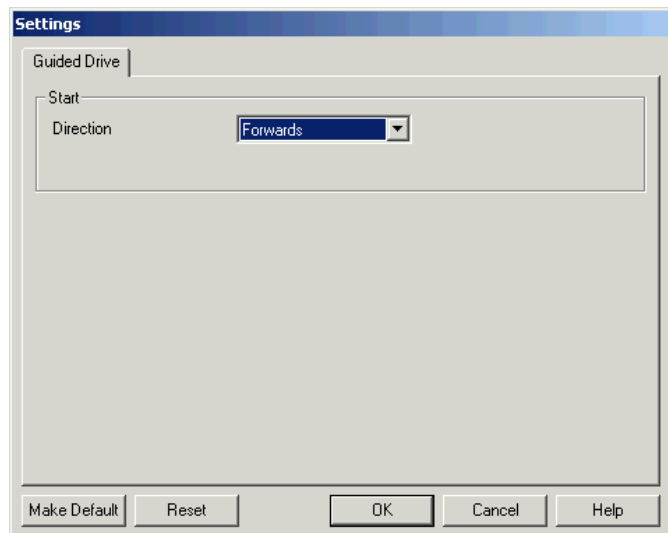

Guided Drive Settings dialog

8. Make sure that, if you want the vehicle to reverse along the line, the **Direction** is set to Reverse and then click **OK**.
9. The swept path will be generated and the path redrawn.

Vertical Clearance


This drive mode allows you to model the vertical movement envelope of a vehicle. This then enables you to check for grounding of the vehicle or overhead impacts with other structures. The vehicle is assumed to have all wheels in contact with the road at all times. In the case of multiple axles this means that there may be some vertical movement of individual axles. This movement approximates to the behaviour of the vehicles suspension.

To use Vertical Clearance



Vertical Clearance
button

1. Select **Vertical Clearance** from the AutoTrack drop down menu or click the **Vertical Clearance** button on the AutoTrack toolbar.
2. If you have a default vehicle set up then AutoTrack will use this vehicle and you should go to step 5. If you want to use a different vehicle then right click now and refer to Changing your vehicle. Otherwise...
3. The Library Explorer will appear for you to select a vehicle.

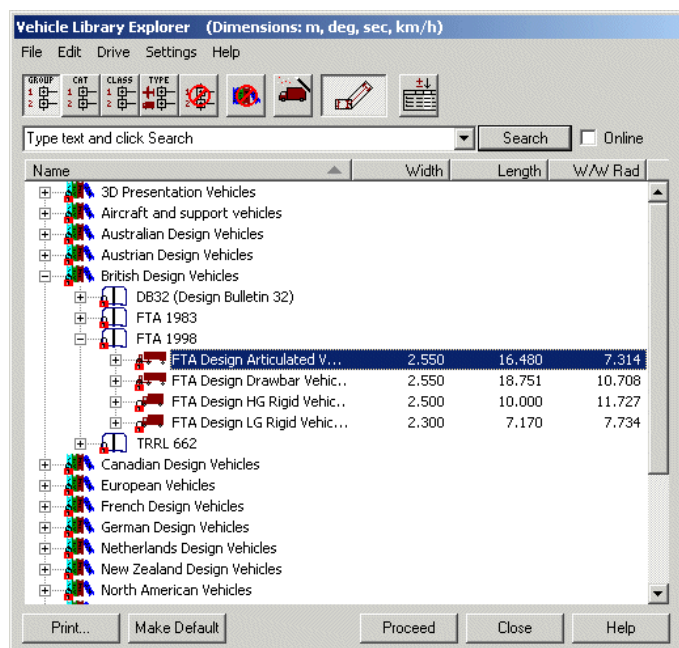

Library Explorer dialog

4. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
5. Pick an AutoCAD polyline (which may be 2D, 3D, splined, curve-fitted or contain straight and/or arc segments) or MicroStation complex chain. The vehicle will follow the line travelling forwards starting at the end closest to the point picked. Closing segments of closed polylines are ignored.
6. The swept path will be generated and the path redrawn.

Note

It is assumed that all wheels will remain in contact with the road. In order to do this some wheels will rise and some will fall. The extent of this movement is not controllable by the user.

Warning

*Vertical Clearance mode uses default values for ground clearance and overall height that are unlikely to match your requirements. In order to generate useful results you **MUST** obtain and enter the accurate height and ground clearance.*

Park a Vehicle


This drive mode is included as a quick way to insert parked vehicles. For example, when designing a loading bay you may wish to model the case in which the bays on either side are occupied. The mode is functionally equivalent to starting an AutoDrive command and cancelling after the vehicle has been positioned.

To use Park a Vehicle



Park a Vehicle button

1. Select **Park a Vehicle** from the AutoTrack drop down menu or click the **Park a Vehicle** button on the AutoTrack toolbar.
2. If you have a default vehicle set up then AutoTrack will use this vehicle and you should go to step 5. If you want to use a different vehicle then right click now and refer to [Changing your vehicle](#). Otherwise...
3. The Library Explorer will appear for you to select a vehicle.

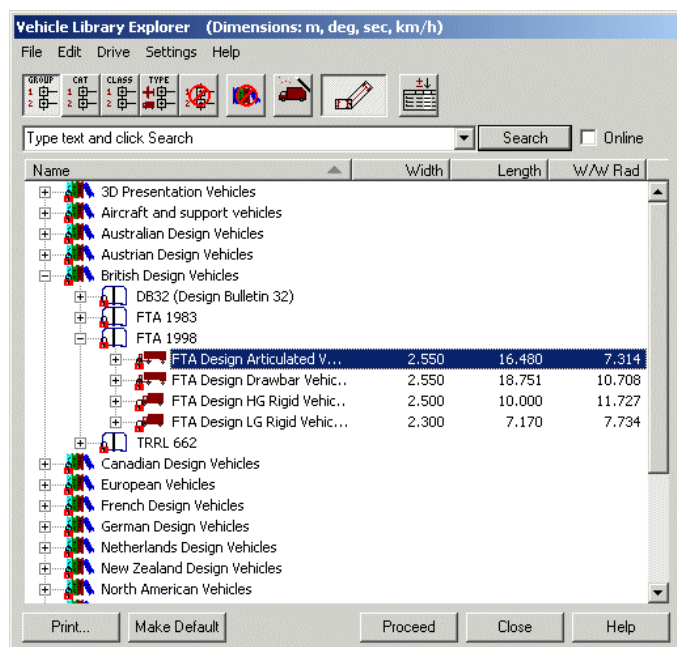

Library Explorer dialog

4. Select a vehicle and click **Proceed**. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) later in this section.
 5. Position and orient your vehicle and click **Finish**. For help on how to position a vehicle refer to [Positioning a vehicle interactively](#) later in this section. Note that if you move the vehicle over an AutoTrack parking bay the vehicle will automatically park in the correct position and orientation in the bay.
 6. The vehicle is inserted as a path with no length and can, if needed, be selected and driven just like any other existing path.
-


Selecting a vehicle to drive

For details of the vehicles see Vehicle Libraries.



Vehicle Library button

1. If you don't have a default vehicle selected or you wish to use a different vehicle select **Vehicle Library** from the AutoTrack drop down menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.

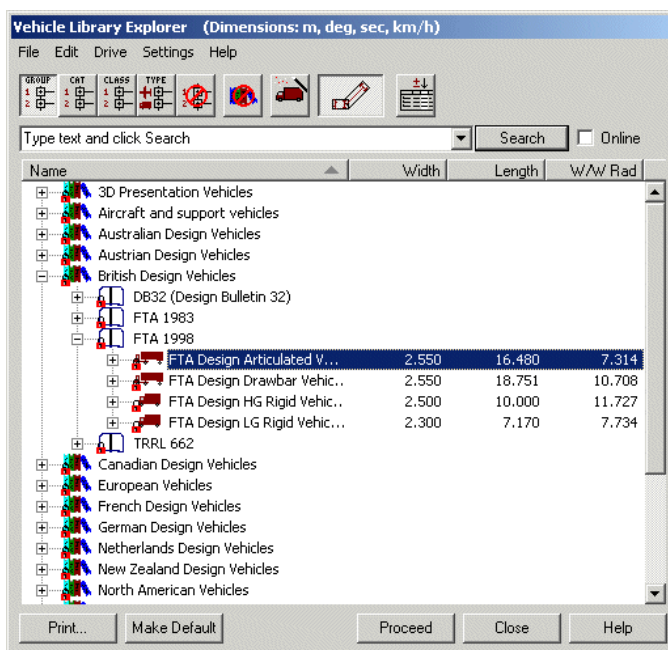

Library Explorer dialog

2. If you do not have a vehicle library loaded all you will see is a bookshelf icon with the text Pool beside it. This represents the pool of vehicles used in and saved with your drawing.
3. If you have already used a vehicle then there will be a small + symbol beside the Pool icon. Click on this and the Pool will expand to list the vehicles held in the drawing.
4. The buttons at the top are mutually exclusive and allow you to group the vehicles by Vehicle Group (default), Category, Classification, Type or Ungrouped. There is also an option to display all vehicles for all libraries together.
5. The arrow on the header bar allows you to list the data in ascending or descending alphanumeric order. Click on the arrow to change the order or click on another column header to sort by another item of data.
6. You can add or remove data from the display by clicking the **Insert/Remove Columns** button. See [Customising the Library Explorer view \(Library Explorer Columns dialog\)](#) ⁽³⁵¹⁵⁾
7. Click the **Vehicle Diagram** button to switch the vehicle diagram on and off. See [Vehicle Diagram dialog](#) for details.
8. For more details of the Library Explorer dialog see [Viewing a vehicle in a library or the pool \(Library Explorer dialog\)](#) ⁽³⁵¹⁰⁾ in Viewing and editing vehicles).



Insert / Remove Columns button



Vehicle Diagram button



Vehicle Library icon

To open a vehicle library

1. To open a library, select **Open Library** from the File menu on the Library Explorer or right click and select **Open Library** from the menu that appears.
2. Browse to the Library subdirectory of the AutoTrack directory, select a library and click **Open**.
3. A new Vehicle Library icon will appear in the Library Explorer with the name of the library beside it.
4. Click on the + symbol to expand the library.

To select a vehicle from a loaded library



Vehicle Library icon

1. Vehicle libraries are indicated by a bookshelf icon.
2. Click on the + symbol beside the library (or pool) that contains the required vehicle. The library will expand to reveal a list of vehicle groups.
3. Expand the category by clicking on the + symbol. A list of vehicles will appear.
4. Highlight a vehicle and click **Proceed** to select it.
5. If you do not have a default vehicle set then you will be asked if you want to make this your default vehicle. See [Default Vehicle dialog](#).
6. If your scale appears to be incorrect you will be given the opportunity to change it. See [Scale dialog](#).
7. The vehicle has been selected and may now be positioned. Proceed to [Positioning a vehicle interactively](#).

Note

If you have the prompt for scale option enabled you will see the Drawing Settings dialog before the Position Vehicle dialog.

To close a vehicle library


1. Highlight the library that you want to close.
46. Select **Close Library** from the File menu on the Library Explorer or right click and select **Close Library** from the menu that appears.
47. The selected library will be removed from the Library Explorer.

To set a default vehicle

1. Highlight the vehicle that you want to set as your default and click the **Make Default** button.
 48. The next time you select a drive mode this vehicle will be used.
-

Default Vehicle dialog ⁽⁵¹⁰⁰⁾

1. AutoTrack allows you to define a default vehicle, i.e. a vehicle that will be used every time you start to drive unless you actively select an alternative. This can be very useful if you regularly use the same vehicle. If you select a vehicle to drive and you do not have a default vehicle set the Default Vehicle dialog will appear.

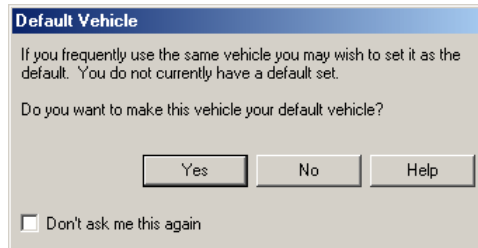


Default Vehicle dialog

2. If you select **Yes** then this vehicle will be selected automatically next time you use any drive command. If you select No then you will be asked this again the next time you select a vehicle in similar circumstances.
3. If you don't want to be asked again then tick **Don't ask me this again**.

Scale dialog ⁽⁵¹³⁰⁾

1. If you are using the wrong units, e.g. AutoTrack is set to use millimeters but your drawing is in metres, your vehicle will appear out of proportion with the background. If this occurs and you have automatic scale checking enabled the Scale dialog will appear.

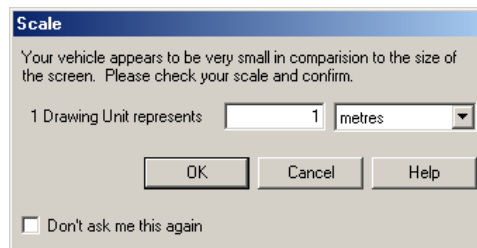

Scale dialog

49. Check your units are correct and change them if necessary.
50. If you want to switch off automatic scale checking then tick **Don't ask me this again**.

Changing your vehicle


You can change your vehicle selection at any time before you start driving.

To change the selected vehicle



Vehicle Library button

1. Right click to display the Position Vehicle dialog.

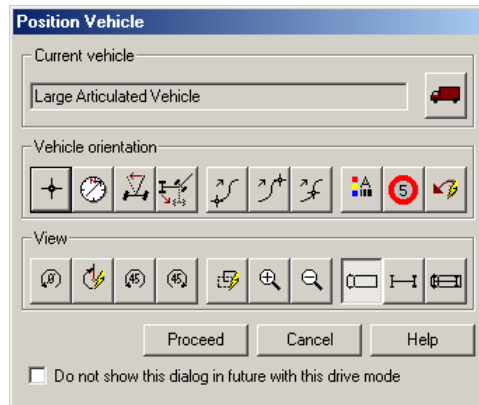

Position Vehicle dialog

2. Click the **Vehicle Library** button.
 3. Select the new vehicle. For help on how to select a vehicle refer to [Selecting a vehicle to drive](#) in this section.
 4. Click **Proceed** to position the vehicle interactively.
-

Positioning a vehicle interactively

The vehicle orientation can be adjusted interactively until you start to drive. Once you have started to drive you may adjust the initial orientation using the Path tools.

With the vehicle selected move the cursor along the spine of the vehicle. Notice the small square that appears at each coupling point and at the front axle of the first unit. This is called a grip and is used to change between adjusting position, heading and articulation.

To change the position of the vehicle

1. Move the cursor until the positioning grip appears over the front axle of the first unit and left click.
51. Use the mouse to move vehicle to the required location and left click to confirm.

To change the heading of the vehicle


1. Move the cursor until the positioning grip appears at the rear coupling of the first unit and left click.
2. Use the mouse to adjust the heading of the entire vehicle and left click to confirm.

To adjust the articulation

1. Move the cursor until the positioning grip is at the coupling point whose angle you want to adjust and left click.
2. Use the mouse to adjust the articulation angle and left click to confirm.

Positioning a vehicle (Position Vehicle dialog) (6000)

If you don't want to use the interactive vehicle positioning right click immediately after selecting your vehicle and the Position Vehicle dialog will appear.

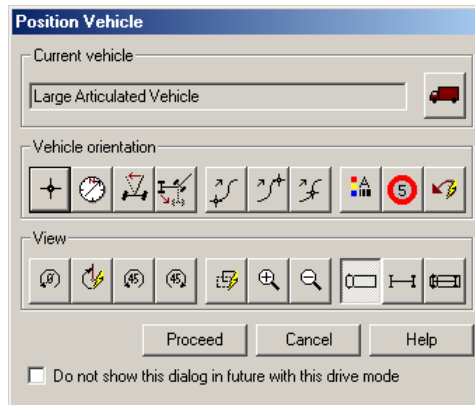

Position Vehicle dialog

To set or change the position of the vehicle



Location button

1. Click the **Location** button.
2. Use the mouse to move the vehicle and click the mouse button to confirm.

To set or change the heading of the entire vehicle



Heading button

1. Click the **Heading** button.
2. Use the mouse to adjust the orientation and click the mouse button to confirm.

To set or change the starting steering angle



Steering button

1. Click the **Steering** button.
2. Use the mouse to adjust the steering angle and click the mouse button to confirm.

To set or change the starting orientation of a selected spine



Articulation button

1. Click the **Articulation** button.
 2. If there is only one articulation point then you will automatically be requested to adjust the trailer spine. If there is more than one articulation point you will be asked to pick the unit that you want to adjust. In either case simply move the cursor to reorient the appropriate spine and click the mouse button to confirm.
-

To position the vehicle at the start of an existing path



Start of Path button

1. Click the **Start of Path** button.
2. You will be asked to select the path.

To position the vehicle at the end of an existing path



End of Path button

1. Click the **End of Path** button.
2. You will be asked to select the path.

To position the vehicle at a point on an existing path



Point on Path button

1. Click the **Point on Path** button.
2. You will be asked to point to the required position.

To view the path properties



Properties button

1. Click the **Properties** button.

To view the model settings



Model button

1. Click the **Model** button.


To undo the last operation



Undo button

1. Click the **Undo** button.

To start driving

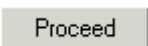

Proceed button

1. Click the **Proceed** button.
2. The **Drive** dialog (or the Drive command line) will appear.

To adjust the view

For your convenience the View toolbar functions are repeated on this dialog. For help in adjusting the view refer to [Adjusting the view](#).

Adjusting the view (View toolbar)

Whilst you can use the built-in CAD functions to manipulate the view, AutoTrack includes a number of intelligent view functions that take account of the current AutoTrack path.



Reset Rotation button

To reset any drawing rotation

1. Select **Rotate, Reset** from the AutoTrack, View drop down menu or click the **Reset Rotation** button.
2. The drawing rotation will be reset to zero.



Rotate Left button

To rotate the drawing to the left

1. Select **Rotate, Left** from the AutoTrack, View drop down menu or click the **Rotate Left** button.
2. The drawing will be rotated 45 degrees to the left.



Rotate Right button

To rotate the drawing to the right

1. Select **Rotate, Right** from the AutoTrack, View drop down menu or click the **Rotate Right** button.
2. The drawing will be rotated 45 degrees to the right.



AutoRotate button

To rotate the drawing automatically

1. Select **Rotate, Auto** from the AutoTrack, View drop down menu or click the **AutoRotate** button.
2. The drawing will be rotated until the steered wheels point directly up the screen.

To pan the image (e.g. if the vehicle is close to the edge of the window)



AutoPan button

1. Select **AutoPan** from the AutoTrack, View drop down menu or click the **AutoPan** button.
2. By default this will move the drawing so that after the pan the steered wheels of the vehicle are located slightly off centre and pointing directly through the centre of the screen. Depending upon your settings the drawing may also be rotated.

To zoom in



Zoom In button

1. Select **Zoom, In** from the AutoTrack, View drop down menu or click the **Zoom In** button.
2. The screen image will be magnified by a factor of 2.

To zoom out



1. Select **Zoom, Out** from the AutoTrack, View drop down menu or click the **Zoom Out** button.
-

Zoom Out button

2. The screen image will be reduced by a factor 0.5.



Show Body button

To show only the vehicle body

1. Select **Show Body** from the AutoTrack, View drop down menu or click the **Show Body** button.
2. Only the body of each unit to will be displayed whilst driving.



Show Chassis button

To show only the vehicle chassis

1. Select **Show Chassis** from the AutoTrack, View drop down menu or click the **Show Chassis** button.
2. Only the chassis of each unit will be displayed whilst driving.



Show All button

To show both the vehicle body and chassis

1. Select **Show All** from the AutoTrack, View drop down menu or click the **Show All** button.
2. Both the body and the chassis of all units will be displayed whilst driving.

Swept Paths: Editing paths

All swept paths, as long as they have not been exploded can be edited to adjust the colour, content or even alignment. The AutoTrack Properties command lets you edit a single path whilst the Drawing Explorer allows you to copy path attributes between drawings.

Adjusting the path alignment (Path toolbar)

Tip

Almost all the operations described in this section are simpler to perform using grip editing. See [Adjusting the path alignment using grip editing](#).


All paths, except those created using Guided Drive, are stored as a series of target points through which the vehicle is required to drive. AutoTrack allows you to move the target points of a path, dynamically updating the path to reflect changes in position.

If you edit the path in such a way that the vehicle cannot get from a given point to the next target the remainder of the path will drawn as a single line (red by default). See [Undriveable Paths](#) ⁽⁵⁰⁵⁰⁾.



Edit Path button

1. Click the **Edit Path** button on the toolbar. The Path toolbar will appear.

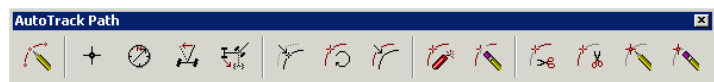

Path toolbar

To see the target points on the path

Target points are shown as small diagonal crosses along the path. If you cannot see any target points on your path make sure that you have them enabled. To do this...



Properties button

1. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the main AutoTrack toolbar and select the path if necessary. The Path Properties dialog will appear.
2. Select the **Reports** tab.
3. Expand the **Construction Lines** report by clicking on the small + symbol and make sure that both the **Construction Lines** report and the **Target Points** sub-report are ticked.

To see the steering pointer

The steering pointer is a line drawn from the centre of the primary steered axle at the same angle as the steered wheels. If you cannot see the steering pointer then make sure you have it enabled. To do this...



Properties button

1. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the main AutoTrack toolbar and select the path if necessary. The Path Properties dialog will appear.
2. Select the **Reports** tab.
3. Expand the **Construction Lines** report by clicking on the small + symbol and make sure that both the **Construction Lines** report and the **Steering Pointer** sub-report are ticked.

To adjust the vehicle start position (not Rail)



Location button

1. Select **Initial Location** from the AutoTrack, Path drop down menu or click the **Location** button on the Path toolbar.
2. Select the path if necessary.
3. Move the mouse until the vehicle is in the required location and left click to confirm.

To adjust the vehicle start heading (not Rail)



Heading button

1. Select **Initial Heading** from the AutoTrack, Path drop down menu or click the **Heading** button on the Path toolbar.
2. Select the path if necessary.
3. Move the mouse until the vehicle is in the required orientation and left click to confirm.

To adjust the vehicle start steering angle (not Rail)



Steering button

1. Select **Initial Steering Angle** from the AutoTrack, Path drop down menu or click the **Steering** button on the Path toolbar.
2. Select the path if necessary.
3. Move the mouse until the steering is at the required angle and left click to confirm.

To adjust the vehicle start spine angles (not Rail)



Articulation button

1. Select **Initial Articulation Angle** from the AutoTrack, Path drop down menu or click the **Articulation** button on the Path toolbar.
2. Select the path if necessary.
3. Select the required unit and move the mouse until it is in the required orientation and then left click to confirm.

To move the path



Move Path button

1. Select **Move** from the AutoTrack, Path drop down menu or click the **Move Path** button on the Path toolbar.
2. Select the path if necessary.
3. Left click at the base point.
4. Move the mouse to move the path and click again to confirm the displacement.

To rotate the path



Rotate Path button

1. Select **Rotate** from the AutoTrack, Path drop down menu or click the **Rotate Path** button on the Path toolbar.
2. Select the path if necessary.
3. Left click to specify the base point about which the path is to be rotated.
4. Move the mouse to rotate the path and click again to specify the rotation angle.

To copy the path



Copy Path button

1. Select **Copy** from the AutoTrack, Path drop down menu or click the **Copy Path** button on the Path toolbar.
2. Select the path if necessary.
3. Move the mouse until the copy is in the required position and left click to confirm.

To explode the path entity (or cell)



Explode Path button

1. Select **Explode** from the AutoTrack, Path drop down menu or click the **Explode Path** button on the Path toolbar.
2. Select the path if necessary.
3. The path will be exploded into standard CAD entities.

To delete a path



Delete Path button

1. Select **Delete** from the AutoTrack, Path drop down menu or click the **Delete Path** button on the Path toolbar.
2. Select the path if necessary.
3. The path will be deleted.

To trim the start of the path



Trim to Start button

1. Select **Trim to Start** from the AutoTrack, Path drop down menu or click the **Trim to Start** button on the Path toolbar and select the path if necessary.
2. As you move the cursor over the path a small square will be drawn at the point on the path closest to the cursor. Move the cursor until the square is in the required position and the click the left button to confirm.
3. The section of path from the selected point to the start will be deleted. If you wish to trim back to the start of a manoeuvre select **start of Manoeuvre** from the command line option.

The vehicle will only be drawn at the start of each manoeuvre (i.e. at each target point). Again click the left button to confirm.

To trim the end of the path



Trim to End button

1. Select **Trim to End** from the AutoTrack, Path drop down menu or click the **Trim to End** button on the Path toolbar and select the path if necessary.
2. As you move the cursor over the path a small square will be drawn at the point on the path closest to the cursor. Move the cursor until the square is in the required position and then click the left button to confirm.
3. The section of path from the selected point to the end will be deleted. If you wish to trim back to the start of a manoeuvre select **start of Manoeuvre** from the command line option. The vehicle will only be drawn at the start of each manoeuvre (i.e. at each target point). Again click the left button to confirm.

To move target points (not Rail)



Edit Path button

1. Select **Edit Path** from the AutoTrack, Path drop down menu or click the **Edit Path** button on the Path toolbar and select the path if necessary.
2. A small square will appear on the path and move as you move the mouse. This square represents the point to be moved.
3. Move the mouse until the square is at the target point that you wish to move (it snaps and changes colour when you get close to one) and left click to select it.
4. Now move the mouse until the selected point is in the required new location and left click to confirm.

To insert a new target point (not Rail)

Normally it is preferable to use the fewest possible target points as this will produce the smoothest path. However, there will be cases where you need to insert a new target point.



Edit Path button

1. Select **Edit Path** from the AutoTrack, Path drop down menu or click the **Edit Path** button on the Path toolbar and select the path if necessary.
 2. A small square will appear on the path and move as you move the mouse. This square represents the point to be edited or the point at which a new target would be inserted.
 3. Move the mouse until the square is at the position at which you want to insert the new target (may not be a target point already) and left click to confirm. A new target point will appear (indicated by a diagonal cross) and can be moved in the normal way.
-



Edit Path button

To remove intermediate target points (not Rail)

1. Select **Edit Path** from the AutoTrack, Path drop down menu or click the **Edit Path** button on the Path toolbar and select the path if necessary.
2. A small square will appear on the path and move as you move the mouse. This square represents the point to be edited.
3. Move the mouse until the square is at the point that you want to delete (it snaps and changes colour when you get close to one) and left click to confirm.
4. Now move the mouse to the preceding or following target point (denoted by diagonal crosses) and click the left button again. The selected target point will be removed.



Delete Last Target button

To delete the last target point (not Rail)

1. Select **Delete Last Target** from the AutoTrack, Path drop down menu or click the **Delete Last Target** button on the Path toolbar and select the path if necessary.
2. The last target point on the selected path will be removed.

Tip

You can delete the last target point “on-the-fly” whilst using AutoDrive. Left click with the cursor inside the wheelbase of the last drawn vehicle position.

Adjusting the path alignment using grip editing

All paths, except those created using Guided Drive, are stored as a series of target points through which the vehicle is required to drive. The Dynamic Edit functionality incorporated in AutoTrack allows you to move the target points of a path, dynamically updating the path to reflect changes in position. Grip editing mode allows you to make all path adjustments interactively simply by picking and dragging grips.

If you edit the path in such a way that the vehicle cannot get from a given point to the next target the remainder of the path will drawn as a single line (red by default). See [Undriveable Paths](#) ⁽⁵⁰⁵⁰⁾.

Note

AutoDrive and Dynamic Editing are options and may not be available on your copy.

To enter grip editing mode

1. Select the path and click **Edit Path** on the **Path Edit** toolbar or select **Path Edit**, **Edit Path** from the AutoTrack drop down menu.
2. Grips will appear at various locations along the path and vehicle. The shape of the grips indicates what they do and when you hover over the grip it will change colour and a text grip tip will confirm the associated action.

Note

AutoCAD and SavoyCAD have their own grip editing modes

which are enabled by simply selecting the path. This works just like the AutoTrack's dynamic editing mode.

To see the target points on a path

Target points are shown as small diagonal crosses along the path. If you cannot see any target points on your path make sure that you have target point markers enabled in the Construction Lines settings. To do this...



Properties button

1. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the main AutoTrack toolbar and select the path if necessary. The Path Properties dialog will appear.
2. Select the **Reports** tab.
3. Expand the Construction Lines report, by clicking on the + symbol, and make sure that both **Construction Lines** and **Target Points** are ticked.

To see the steering pointer

The steering pointer is a line drawn from the centre of the primary steered axle at the same angle as the steered wheels. If you cannot see the steering pointer then make sure you have the steering pointer enabled in the Construction Lines settings. To do this...



Properties button

1. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the main AutoTrack toolbar and select the path if necessary. The Path Properties dialog will appear.
2. Select the Reports tab.
3. Select the Construction Lines tab followed by the Steering Pointer tab and make sure that both **Construction Lines** and **Steering Pointer** are ticked.

To adjust the vehicle start heading (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. Select the **Adjust Spine Angle** grip on the first unit.
3. Move the mouse to rotate the units and right click again to confirm the new position.

To adjust the vehicle start steering angle (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
 2. Select the **Adjust Steering Angle** grip at the end of the steering pointer.
 3. Move the mouse to adjust the steering angle and right click again to confirm the new angle.
-

To adjust the vehicle start spine angles (not Rail)

The spine angles are adjusted by rotating a selected unit and all those behind it about the front articulation point of the selected unit.

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. Select the **Adjust Spine Angle** grip on the unit or spine you wish to adjust.
3. Move the mouse to rotate the units and right click again to confirm the new position.

To move a path

Adjusting the vehicles start position has the effect of moving the entire path.

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. Select the **Move Path** grip on the first unit. Be careful not to pick the **Adjust Target Point** grip.
3. Move the path and right click again to confirm the new position.

To move a target point (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. Select the **Adjust Target Point** grip of the target point that you want to move.
3. Move the point to its new location and right click again to confirm the new position. See also [To stretch a section in a path \(not Rail\)](#).
4. If the new position means that the vehicle cannot complete the manoeuvre a single line will connect the point to the last acceptable target point. This line represents the Errored Path.

To stretch a section in a path (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. Select the **Adjust Target Point** grip of the target point that you want to move.
3. To move all the section of path before the selected target point hold down the <Ctrl> key while moving the mouse. All target points from the start of the path to the current target point will move together maintaining their relative positions.
4. To move all the section of path after the selected target point hold down the <Alt> key while moving the mouse. All target points from the current target point to the end of the path will move together maintaining their relative positions.

5. Move the section of path and right click to confirm the new position.

To adjust a bearing turn (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. All bearing turns should have two dotted lines parallel to the entry to the turn and two parallel to the exit from the turn. Two of these will be on the centerline of the path and the other two offset to the outside of the turn. If you cannot see these lines, open the **Report Wizard**, go to the **Construction Lines** page and make sure that **Drag Lines** are ticked.
3. The lines closest to the centerline of the path cannot be moved and are tangents to the entry and exit alignments. The outer lines have **Adjust Side Overturn** and **Adjust Exit Overturn** grips halfway along them.
4. Select the grip you wish to adjust and drag it away from or towards the other line to increase or decrease the offset. Right click again to confirm the new position.



Report Wizard button

To insert a new target point (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. In between the target point markers there will be intermediate **Insert Target Point** grips.
3. Select the **Insert Target Point** grip closest to where you wish to insert the target point. Move the new target point and right click to confirm the new position.
4. If you cannot see an intermediate grip then you may need to reduce the distance between intermediate. To do this click on the **System Settings** button on the AutoTrack toolbar, select the AutoDrive tab and adjust the **Minimum Distance between Intermediate Grips**.



System Settings button

To remove a target point (not Rail)

1. Enter grip editing mode so that the editing grips appear. (See [To enter grip editing mode](#)).
2. Select the **Adjust Target Point** grip of the target point that you want to remove.
3. Drag the grip over the top of the preceding or following target point and right click to confirm. The selected target point will be removed.
4. You may only remove one target point at a time. If you drop the selected point onto an intermediate grip the point will not be removed but moved and this may result in an errored path.

To trim the start of the path

1. Enter grip editing mode so that the editing grips appear.
-

(See [To enter grip editing mode](#)).


2. Select the **Trim Start of Path** grip adjacent to the first unit at the start of the path.
3. Move the mouse and right click to trim the path.

To trim the end of the path

1. Enter grip editing mode so that the editing grips appear.
(See [To enter grip editing mode](#)).
2. Select the **Trim End of Path** grip adjacent to the first unit at the end of the path.
3. Move the mouse and right click to trim the path.

Undriveable Paths (5050)

If you try to edit a path that consists of many closely spaced target points (which tends to happen when using Manual Drive) you may end up with an undriveable path. Under these circumstances you may need to delete some target points. AutoTrack may offer to perform this operation on the section of path from the point you dragged to the end. You will see the Undriveable Path dialog.

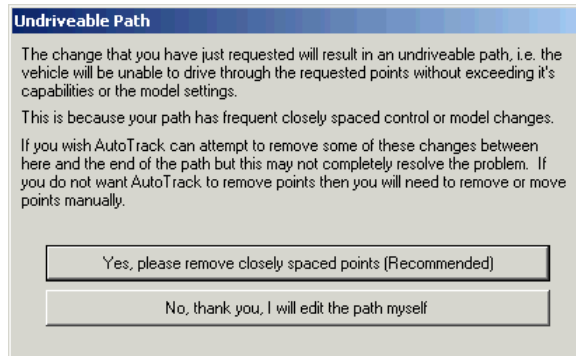

Undriveable Path dialog

1. Select **Yes** to allow AutoTrack to remove points automatically or **No** if you wish to edit the path manually.
2. If you select **Yes** AutoTrack will remove closely spaced points on the section of path from the selected point to the end of the path. This may not always result in a driveable path, because it only removes points and does not optimise the remaining, but is nevertheless the recommended option. Use Undo to restore the path if you don't like the changes that AutoTrack makes.
3. If you select **No** then the path will not be altered (apart from storing the data slightly differently – see below).

Warning

Manual Drive path data is converted to AutoDrive target points as soon as you try to edit it. For this reason changing a model value on a non-errored path, that results in a path error and then changing it back will not necessarily result in the original non-errored path. To get back the original path you should use Undo.

Extending or trimming a path

Once created paths can be extended or trimmed very easily.

To extend a path

1. Select the path that you want to extend.
2. Select a drive mode from the AutoTrack drop down menu or by clicking the appropriate button on the main AutoTrack toolbar.
3. Resume driving from the end of the path.

To trim the start of the path



Trim to Start button

1. The easiest way to trim a path is in dynamic edit mode. See [To trim the start of the path \(not Rail\)](#).
Alternatively,
2. Select **Trim to Start** from the AutoTrack, Path drop down menu or click the **Trim to Start** button on the Path toolbar and select the path if necessary.
3. As you move the cursor over the path a vehicle will be drawn at the point on the path closest to the cursor. Move the cursor until the vehicle is in the required position and the click the left button to confirm. The section of path from the selected point to the start will be deleted.
4. If you wish to trim back to the start of a manoeuvre select **start of Manoeuvre** from the command line option. The vehicle will only be drawn at the start of each manoeuvre (i.e. at each target point). Again click the left button to confirm.

To trim the end of the path



Trim to End button

1. The easiest way to trim a path is in dynamic edit mode. See [To trim the end of the path \(not Rail\)](#).
Alternatively,
2. Select **Trim to End** from the AutoTrack, Path drop down menu or click the **Trim to End** button on the Path toolbar and select the path if necessary.
3. As you move the cursor over the path a vehicle will be drawn at the point on the path closest to the cursor. Move the cursor until the vehicle is in the required position and the click the left button to confirm. The section of path from the selected point to the end will be deleted.
4. If you wish to trim back to the start of a manoeuvre select **start of Manoeuvre** from the command line option. The vehicle will only be drawn at the start of each manoeuvre (i.e. at each target point). Again click the left button to confirm.

Editing path properties (Path Properties dialog)



Properties button

1. Select the path whose properties you wish to see.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar.
3. The Path Properties dialog will appear with the **Path Notes** tab displayed.

A screenshot of the 'Properties' dialog box in a software application. The dialog has a title bar 'Properties' and four tabs: 'Path Notes', 'Vehicle', 'Manoeuvres', and 'Reports'. The 'Path Notes' tab is selected. The 'Path' section contains several fields: 'Path ID' with the value '1', 'Title' (empty), 'Path Scale' with '1 Drawing Unit represents 1m', 'Layer Name Prefix' with 'ATR01', and 'Comments' (empty text area). At the bottom, there is a 'Status' field with the text 'Fwd:5.00km/h Min Center Radius=13.81m'. Below the dialog are five buttons: 'Make Default', 'Reset', 'OK', 'Cancel', and 'Help'.

Path Properties dialog: Path Notes tab

4. Enter values in the fields provided and click **OK** to confirm and close the dialog.
 5. Click **Apply** if you wish to confirm the changes but not close the dialog. Click **Cancel** to abort all changes since the last time you clicked **Apply**.
-

Path Properties: Path Notes ⁽⁵⁰¹⁰⁾

1. Click on the **Path Notes** tab.
2. Edit the **Title** and **Comments** as required.
3. **AutoCAD version**

The **Layer Name Prefix** is the AutoCAD base layer name as defined by your selected layering convention. If you are not using a layering convention this is the current layer.


MicroStation version

The **Base Level** is the level on which the path exists. You may change this to any other level from 1 to 63 by selecting from the drop down list.

4. The **Path Scale** is a read only field. It shows the scale of the selected path. When using XREF drawings in AutoCAD or reference drawings in MicroStation there is a risk that incompatible units can be used alongside one another.

Path Properties: Vehicle

1. Click on the **Vehicle** tab.

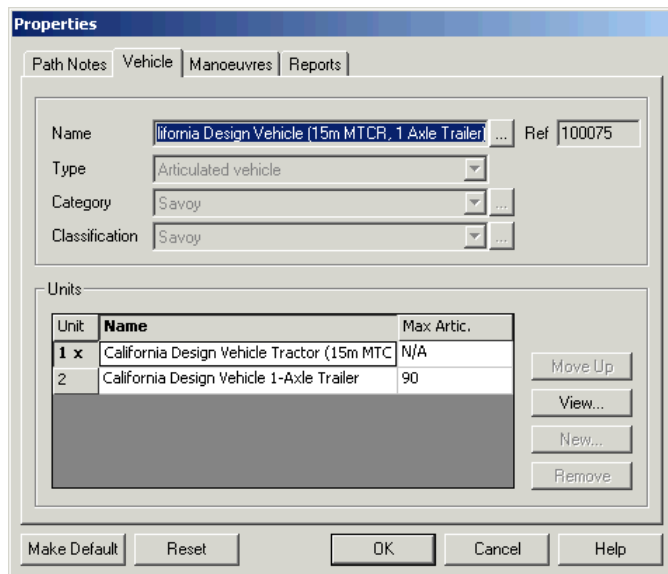


Path Properties dialog: Vehicle tab

52. You may not edit the vehicle details but the details are the same as display in the [Creating a new library \(Library Details dialog\)](#).
53. Click on the **View** button to look at the unit details which again are as displayed in the [Unit Details dialog](#).

Path Properties: Manoeuvres (5020)

1. Click on the **Manoeuvres** tab. A list of manoeuvres is displayed, each one representing a section of path, which can be driven with a single drive 'command'. The name is normally blank but will contain the text **** Model Change **** if a model setting changes at this manoeuvre. The first section will contain the text **** Initial Model ****.

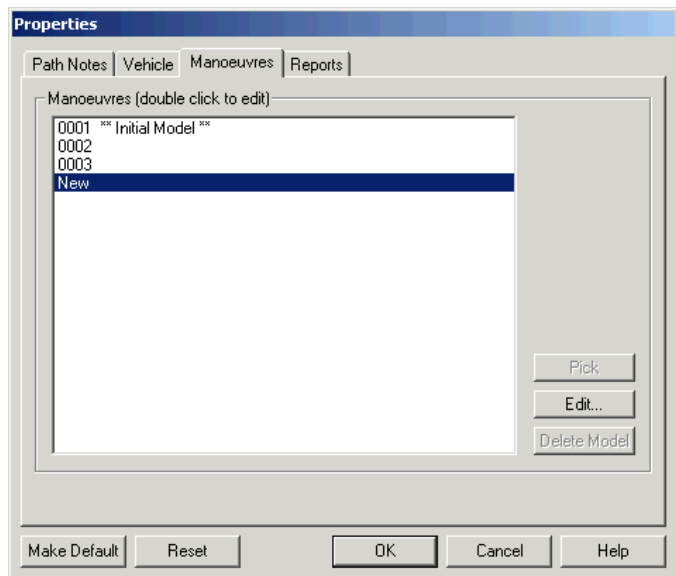


Path Properties dialog: Manoeuvres tab

2. As you move the cursor down the list a ghost image of the vehicle is drawn at the start of the manoeuvre section of path.
3. Click **Edit** to view the Model and Speed settings. If you change a setting then the text **** Model Change **** will appear in the Name. Edit the manoeuvre reference **New** to change the model for future manoeuvres.
4. Click **Delete Model** to remove a model change.
5. Enter values in the fields provided and click **OK** to confirm and close the dialog.
6. Click **Apply** if you wish to confirm the changes but not close the dialog. Click **Cancel** to abort all changes since the last time you clicked **Apply**.

Path Properties: Manoeuvres: General ⁽⁵⁰⁴⁰⁾

1. Click on the **General** tab.

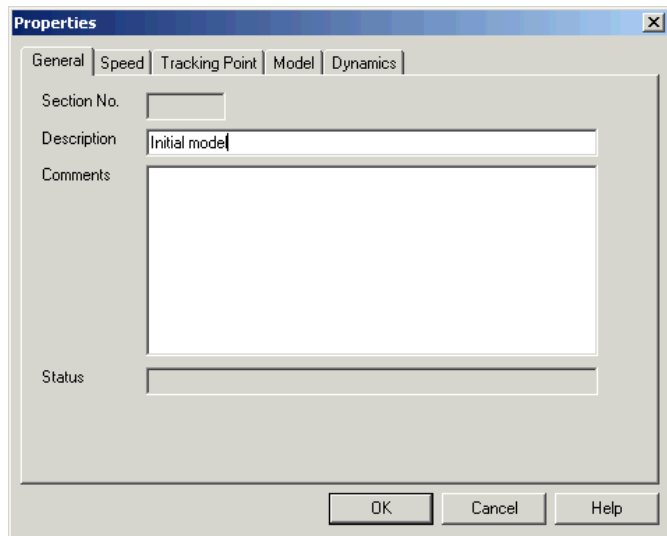

Path Properties dialog: Manoeuvres: General tab

2. Edit the **Description** and **Comments** as required. The description is displayed in the manoeuvres list.

Path Properties: Manoeuvres: Speed

1. Click on the **Speed** tab.
2. See Settings: Speed.

Path Properties: Manoeuvres: Tracking Point

1. Click on the **Tracking Point** tab.
2. See Settings: Tracking Point.

Path Properties: Manoeuvres: Model

1. Click on the **Model** tab.
2. See Settings: Model.

Path Properties: Manoeuvres: Dynamics


1. Click on the **Dynamics** tab.
2. See Settings: Dynamics.

Path Properties: Manoeuvres: Transitions

1. Click on the **Transitions** tab
2. See Settings: Transitions.

Path Properties: Reports

1. Click on the **Reports** tab. A list of all current reports will appear.

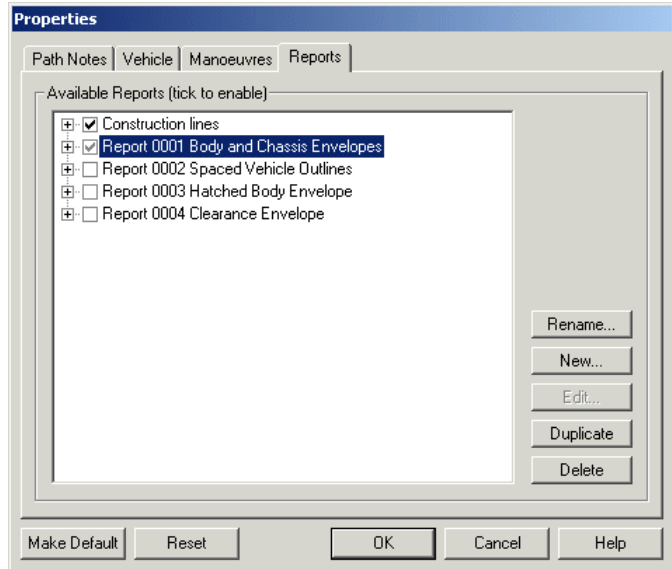

Path Properties dialog: Reports tab

2. Click the + symbol to expand the explorer view and tick those elements that you want to include.
3. To edit a report see Settings: Reports.

Adjusting model settings (Roads only)

Model settings apply from the point at which they are made until the next change of model. Model changes are indicated with an octagon around the relevant target point. See [Drawing Settings: Model \(not Rail\) ^{\(2070\)}](#) for more details.

To change the absolute steering limits



Properties button

1. Select the path that you want to edit.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar. The Path Properties dialog will appear.
3. Click the **Manoeuvres** tab.
4. Highlight the required manoeuvre and click the **Edit** button. The manoeuvre details dialog will appear.
5. Click the **Model** tab.
The steering can be limited in three ways:-
Select **Limit steering to percentage** to change the steering capability of your selected vehicle as a factor of the actual maximum steering angle.
Select **Limit steering to angle** to set a new maximum steering angle.
Select **Limit steering to radius** to specify the maximum steering angle in terms of an equivalent radius. The radius may be to the inside of the inner wheels, the outside of the

outer wheels, or the centreline of the steered axle.

To change the absolute articulation limits



Properties button

1. Select the path that you want to edit.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar. The Path Properties dialog will appear.
3. Click the **Manoeuvres** tab.
4. Highlight the required manoeuvre and click the **Edit** button. The manoeuvre details dialog will appear.
5. Click the **Model** tab.
The articulation angles can be limited in two ways:-
Select **Limit to percentage** to change the articulation limits of your selected vehicle as a factor of the actual maximum articulation angle.
Select **Limit to angle** to set a new maximum articulation angle.

Adjusting speed settings

Speed settings apply from the point at which they are made until the next change of model. Speed changes are indicated with an octagon around the relevant target point. See [Drawing Settings: Speed](#) ⁽²⁰⁸⁰⁾ for more details.

To change the design speed



Properties button

1. Select the path that you want to edit.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar. The Path Properties dialog will appear.
3. Click the **Manoeuvres** tab.
4. Highlight the required manoeuvre and click the **Edit** button. The manoeuvre details dialog will appear.
5. Click the **Speed** tab.
6. You may set different values for the **Forwards Design Speed** and the **Reverse Design Speed**.

Adjusting transition settings (not Rail)

Turn transition types apply from the point at which they are made until the next change of model. Transition changes are indicated with an octagon around the relevant target point. See [Drawing Settings: Transitions \(not Rail\)](#) ⁽²⁰⁸⁵⁾ for more details.

To change the turn transition types



Properties button

1. Select the path that you want to edit.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar. The Path Properties dialog will appear.

3. Click the **Manoeuvres** tab.
4. Highlight the required manoeuvre and click the **Edit** button. The manoeuvre details dialog will appear.
5. Click the **Transitions** tab.
6. Tick **Limit Forward Turn Rate** or **Limit Reverse Turn Rate** to restrict the rate of application of steering lock when travelling forwards and backwards respectively.

Select **Based Upon Speed** to impose a turn rate that causes the overturn to increase with speed. The turn rate (degrees per unit of distance) will be calculated as follows:-

$$R = A / v t$$

Select **Based Upon Lock to Lock Distance** to impose a limit that is fixed for all speeds. The turn rate (degrees per unit of distance) will be calculated as follows:-

$$R = A / d$$

Where:-

- R is Max Turn Rate
- A is Max Steering Angle
- v is Design Speed
- t is Lock to Lock Time
- d is Lock to Lock Distance

Select **Based upon Circular Tangential Arc** to follow a pure circular arc. This option is only available for forward turns.

7. Tick **Turn on the spot at start of all forwards sections** or **Turn on the spot at start of all reverse sections** to turn the steering instantaneously at each change of angle whilst the vehicle is travelling forwards or backwards respectively.
8. Tick **Set optimum steering angle at start of path** to allow the steering to turn to the best starting angle at the beginning of the path. Note that this option always applies to the start point regardless of which target point is currently being examined.

Adjusting the tracking point (not Rail)

Tracking Point settings apply from the point at which they are made until the next change. Tracking Point changes are indicated with an octagon around the relevant target point. See [Drawing Settings: Tracking Point \(not Rail\)](#) ⁽²¹⁷⁰⁾ for more details.

To change the tracking point



Properties button

1. Select the path that you want to edit.
 2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar. The Path Properties dialog will appear.
 3. Click the **Manoeuvres** tab.
 4. Highlight the required manoeuvre and click the **Edit** button. The manoeuvre details dialog will appear.
-

5. Click the **Tracking Point** tab.
6. Select the Front Tracking Point and Rear Tracking Point as required.

Adjusting dynamics settings (not Rail)

Dynamics settings apply from the point at which they are made until the next change. Dynamics changes are indicated with an octagon around the relevant target point. See [Drawing Settings: Dynamics \(not Rail\)](#) ⁽²¹⁸⁰⁾ for more details.

To change dynamics settings



Properties button

1. Select the path that you want to edit.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar. The Path Properties dialog will appear.
3. Click the **Manoeuvres** tab.
4. Highlight the required manoeuvre and click the **Edit** button. The manoeuvre details dialog will appear.
5. Click the **Dynamics** tab.
6. Tick the **Limit for Dynamic Effects** box to apply a turning radius limit based upon driver comfort and allowing for side friction and super elevation.

Vehicle details report



Insert Profile button

To insert a vehicle details report

1. Select the path whose vehicle details you wish to insert.
2. Select **Insert Profile** from the AutoTrack drop down menu or click the **Insert Profile** button on the AutoTrack toolbar.
3. A ghosted picture of the vehicle will appear at the cursor.
4. Move the mouse to position the report and left click to confirm.
5. To edit or disable the report see [Viewing the properties of a path \(Path Properties dialog\)](#).

To move a vehicle details report

1. Select the report that you want to move. Note that the report and its associated path and any other reports will appear selected.
2. Pick the grip at the centre of the front wheels of the first unit and holding the left mouse button down, move the details report as required. Release the mouse button to drop the report.

To remove a vehicle details report



Properties button

1. Select the report that you want to remove.
2. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack toolbar.
3. Select the **Reports** tab.
4. Click the + next to Report 0001 to display the sub-reports and untick the Profile sub-report.
5. If you have more than one report listed (i.e. Report 0001, Report 0002, etc) then you will need to expand each in turn and make sure that the Profile report is disabled in each.

Placing discrete body outlines (5140)


To place discrete outlines

You can add discrete outlines using the reports dialogs. However, there is a quick way to add them using the Place Outline command.



Place Outline button

1. Select the path on which you wish to add discrete outlines.
2. Select **Place Outline** from the AutoTrack drop down menu or click the **Place Outline** button on the AutoTrack toolbar. The Place Outline dialog will appear.

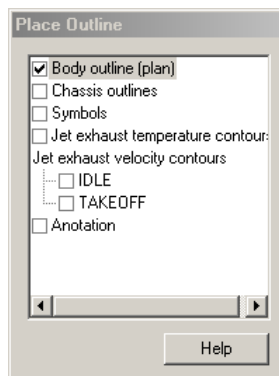

Place Outline dialog

3. Tick the discrete elements that you want to add.
4. To place them, move the cursor until they appear at the required location on the path and left click to confirm. You can remove the selected outlines by reselecting the location.

The rule is:-

If **all** the selected elements **are present** at the chosen location, then when you left click all the selected elements will be removed.

If **any** of the selected elements **are not present** at the chosen location, then when you left click the missing selected elements will be added.

5. To remove a particular outline from a location tick just this outline type and select the location.
 6. To quickly remove all outlines from a location tick all outline types and select the location twice (once to add any non-existent outlines and a second time to remove them all).
-

Extracting path data

Sometimes there is a need to analyse paths in more detail than is possible in a CAD system. The Extract command allows you to save path data as text files which can then be imported into a spreadsheet program and further examined.

To extract path data

1. Select the path that you wish to extract data from.

Note

You may only extract data for one path at a time.

2. Select **Extract** from the AutoTrack, Path menu. The Save As dialog will appear.
3. Select the file type (comma delimited or tab delimited), name the file and browse to the save location.
4. Click **Save** to confirm.
5. The file will contain the following data in columns:-

```
COUNT  
POSITION X  
POSITION Y  
POSITION Z  
DISTANCE  
MAX STEERING ANGLE  
MIN STEERING ANGLE  
ACTUAL STEERING ANGLE  
PERCENTAGE OF MAX STEERING ANGLE  
UNIT 1 ANGLE  
UNIT 2 ANGLE  
...  
UNIT 1-2 ARTICULATION ANGLE  
...
```

Reading extracted data in Excel

The following is presented as a demonstration of how easy it is to obtain graphical plots of AutoTrack path data in Excel 2002. The procedure will vary in other spreadsheet programs.

1. Generate a short path with an articulated vehicle and extract the data as described in the previous section.
2. Open Excel.
3. Open the CSV file containing your extracted path data.
4. Select the columns labelled **Actual Steering Angle** and **Unit 1-2 Articulation Angle** by clicking on the column letter designator.
5. Select **Chart** from the Insert menu. The Chart Wizard will start.
6. Select **Line** graph and click **Finish**. A graph will be inserted showing steering angle and articulation angle varying with distance along the path.
7. The Chart Wizard has further options to allow you to enhance the graph.

Swept Paths: Creating and editing vehicles

Although AutoTrack includes a wide range of predefined vehicles there will be cases where you will need a vehicle that is not listed. Between them, the Vehicle Wizard and the Advanced Editor allows you to create or edit almost any vehicle. And if you use your own vehicles regularly you may wish to create your own library of vehicles.

AutoTrack vehicle libraries

AutoTrack is provided with a number of vehicles whose dimensions and characteristics have been pre-defined and which can be used immediately. In the UK version these vehicles are provided in a file called `UK_xxx.ATL`, where `xxx` is the most recent version of AutoTrack that can read it, e.g. `UK_700.ATL`. Such collections of vehicles are referred to as vehicle libraries. Additional vehicle libraries are available for different markets and can even be created by users themselves. However, to ensure that vehicle details do not change arbitrarily, there are restrictions on who can edit them. These restrictions require that users identify themselves if they wish to access a library to make changes. No password is needed simply to use a vehicle contained therein.

Access to vehicle libraries

Access to libraries is restricted using a username / password system such that before a library can be opened for editing they must enter his or her name and password. Only if the user is authorised will they be allowed to open the library. There are three levels of access:-

None

You may list the vehicles but cannot access the details. This is the status of any libraries that have not been purchased.

Read Only

You may use the vehicles but may not change them or add new vehicles. All libraries are initially opened Read Only.

Full Access

You may use, copy, edit, or create new vehicles and add or edit the users.

All Savoy vehicle libraries are Read Only.

Refer to [Viewing and editing vehicles](#) for details of how to open vehicle libraries and maintain users.

Access to vehicles in the Pool

Vehicle once in the Pool may be edited unless they have been driven. As soon as a vehicle is used in a path it can no longer be edited; it can however be copied and the copy edited.

Note

If you make a copy of a vehicle in the same library it's name (and those of all it's units) are prefixed with the words 'Copy of ' to distinguish it from the original vehicle.

Compatibility with previous versions

AutoTrack can read vehicle library files back as far as AutoTrack 2, as well as WinTrack 2.x library files. It can also read AutoCAD drawings that contain data generated by earlier versions of AutoTrack and the vehicles contained therein. However, it cannot report upon or manipulate path data generated by earlier versions of either product.

Loading AutoTrack 2.x vehicle libraries

If you want to load v2.x libraries you will need the vehicle files and the corresponding library definition file (extension .DEF). If you do not have this file, then create a text file in the following format:-

```
{LIBRARY NAME}  
{VEHICLE FILE NAME}  
{VEHICLE FILE NAME}  
{VEHICLE FILE NAME}  
etc....
```

Where {VEHICLE FILE NAME} is the AutoCAD drawing file name (without the extension). So if you want to load an old library called "Any Old Library" consisting of three vehicle files, CAR.DWG, BUS.DWG and TRUCK.DWG then your DEF file should look like this:-

```
Any Old Library  
CAR  
BUS  
TRUCK
```

To load an AutoTrack 2.x library

1. Place the DEF file along with the DWG files in the AutoTrack Library subdirectory.
 2. Open the library explorer.
 3. Right click and select **Open Library** from the menu.
 4. Change the file type to AutoTrack 2.x and browse to find the DEF file.
 5. Highlight the file and click **Open**.
 6. The library will appear in the explorer as Imported AutoTrack v2.x vehicle library.
 7. Right click and select **Save Library As** from the menu.
 8. Name the file and click **Save**.
-

To load an AutoTrack 2.x vehicle

If you want to load just one vehicle or don't have the DEF file you can load individual AutoTrack 2.x vehicles into AutoTrack.

1. Make a copy of the AutoTrack 2.x vehicle file (the DWG file).
2. Load the AutoTrack 2.x vehicle file into AutoCAD.
3. Open the library explorer.
4. The AutoTrack 2.x vehicle will be listed in the Pool.
5. If you want to save the vehicle for future use then create a new library, drag the vehicle into it and save the library.

AutoTrack can be used alongside AutoTrack v2.x but not v3.x.

Important


Because AutoTrack v2.x made no distinction between front and rear axles AutoTrack assumes that the actual wheelbase is the greatest distance between any two adjacent axles. It is possible that this assumption may be incorrect in a few cases.

Viewing a vehicle in a library or the pool (Library Explorer dialog) ⁽³⁵¹⁰⁾



Vehicle Library button

1. Select Vehicle Library from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear. For details of the vehicles see Vehicle Libraries.

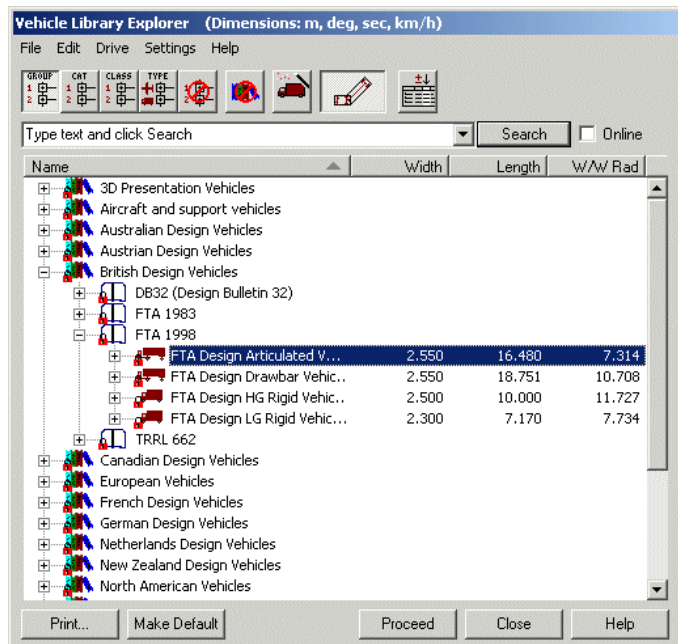

Library Explorer dialog



Group by Vehicle Group button



Group by Vehicle Category button

2. If the library that you require is not loaded then select **Open Library** from the **File** menu in the Library Explorer, browse to find the library and click **Open**. A new Vehicle Library icon will appear in the Library Explorer with the name of the library beside it.



Group by Vehicle Classification button



Group by Vehicle Type button



Do Not Group button



Hide Library Level button



Insert/Remove Columns button



Vehicle Wizard button



Vehicle Diagram button

3. The grouped buttons at the top of the Explorer dialog represent display group options. Click the **Group by Vehicle Group** button, **Group by Vehicle Category** button, **Group by Vehicle Classification** button **Group by Vehicle Type** button or **Do Not Group** button to list the vehicles grouped accordingly when the library is expanded.
 4. Click the **Hide Library Level** button to display all vehicles from all libraries together.
 5. Click on the + symbol to expand the library or the pool.
 6. Click the + symbol adjacent to the required by group, category or classification if necessary.
 7. The arrow on the header bar allows you to list the data in ascending or descending alphanumeric order. Click on the arrow to change the order or click on another column header to sort by another item of data.
 8. Below the buttons is an editable list box that allows you to search for text in all open vehicle libraries. Simply type the text in the field and click the **Search** button. The last 20 searches are saved and can be recalled by clicking on the arrow at the right hand end.
 9. You can also search and download vehicles from the Savoy website using the **Online Vehicle Library Explorer**. To do this enter any required search text, tick the **Online** checkbox and click the **Search** button. See [Finding vehicles online \(Online Vehicle Library Explorer\)](#)³⁵⁸⁰.
 10. You can add or remove data from the display by clicking the **Insert/Remove Columns** button. See [Finding vehicles online \(Online Vehicle Library Explorer\)](#)³⁵⁸⁰.
 11. Highlight the required vehicle (indicated by a vehicle symbol dependant upon its type) and select **Edit** (or **View** if the Library is locked) from the Edit menu. The Vehicle Details dialog will appear.
 12. If you wish to edit a Vehicle Group then highlight it and select **Edit** (or **View** if the Library is locked) from the **Edit** menu in the Library Explorer. The Vehicle Group dialog will appear.
 13. To create a new vehicle or edit or view an existing vehicle using the vehicle wizard click the **Vehicle Wizard** button. For more details refer to [The Vehicle Wizard](#).
 14. To print a library, vehicle group or vehicle, select **Print** from the File menu or click the **Print** button. For more details refer to [Printing library or vehicle details \(Print dialog\)](#)⁽⁵⁰⁷⁰⁾.
 15. Click the **Vehicle Diagram** button to display a picture of the current vehicle in a window adjacent to the Library Explorer. See [Vehicle Diagram dialog](#)⁽³⁵⁷⁰⁾
-

Finding vehicles online (Online Vehicle Library Explorer) ³⁵⁸⁰

Online

Online checkbox

Search

Search button

1. From the Vehicle Library Explorer, tick the **Online** checkbox and click the **Search** button to display the **Online Vehicle Library Explorer**.
2. The online libraries of vehicles are displayed hierarchically in much the same way as the local libraries. Click on the + symbol to expand a level or on the – to collapse it.
3. Once you are at vehicle level the same data columns are displayed as on the local Library Explorer. If you change the local data columns the online columns will change too.
4. You can change your search criteria without going back to the Library Explorer, simply enter the text in the box at the top and click **Search**.
5. At the left hand end of each vehicle there is a checkbox and thumbnail image. Tick the checkbox to select the vehicle for download to your PC. If you are not sure then move the cursor over the thumbnail to see a larger image with all the data. Click on the thumbnail image to keep the vehicle details on screen while you continue looking. If you click on another thumbnail then that image and data replaces the previous data.
6. Once you have selected your required vehicle(s) click the **Download** button. The vehicle(s) will be copied to your hard disk and will appear in a special library called **Downloaded Vehicles**. These are now accessible even without an internet connection.

Note

Anyone can browse the online libraries but you will need a current support, maintenance and updates contract to download them for use.


Customising the Library Explorer view (Library Explorer Columns dialog) ⁽³⁵¹⁵⁾

By default the Library Explorer lists the vehicles sorted alphabetically by library along with the length, and width of each vehicle. However, you can modify this to suit your preference and requirements.



Insert/Remove Columns button

1. To add or remove columns from the Library Explorer view click the **Insert/Remove Columns** button. The Library Explorer Columns dialog will appear.

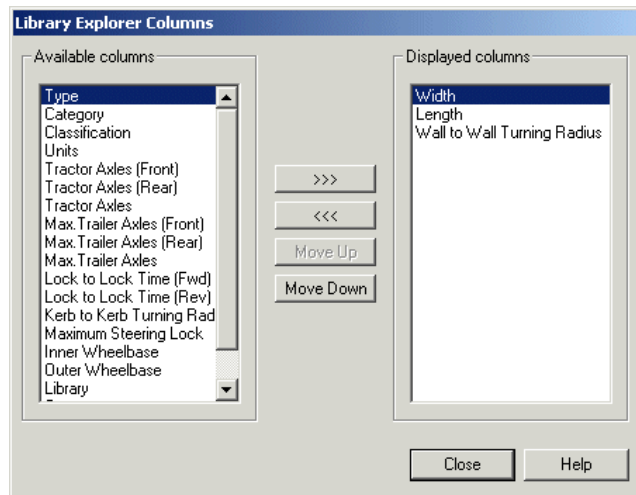

Library Explorer Columns dialog

2. The column on the left lists available data items and the column on the right, those that you currently have selected. To add a column to the display, highlight the data item on the left and click the **>>>** button. To remove a column, highlight the data item on the right and click the **<<<** button.
 3. To change the positions of a column in the dialog, highlight the entry in the right hand column and click **Move Up** or **Move Down** as desired.
 4. Click Close to return to the Library Explorer.
-

Vehicle Diagram dialog (3570)



Zoom Extents button



Zoom In button



Zoom Out button



Increase Steering Angle button



Decrease Steering Angle button



Increase Articulation Angles button



Decrease Articulation Angles button



AutoScale button



Show Datums button



Show Dimensions button



Show Loads button




Show Other Outlines button



Show Simple Body Outlines button

1. The Vehicle Diagram dialog shows a scale picture of the current vehicle. Initially the picture is centred on the geometric centre of the vehicle but you can change the focus by simply clicking on the picture.

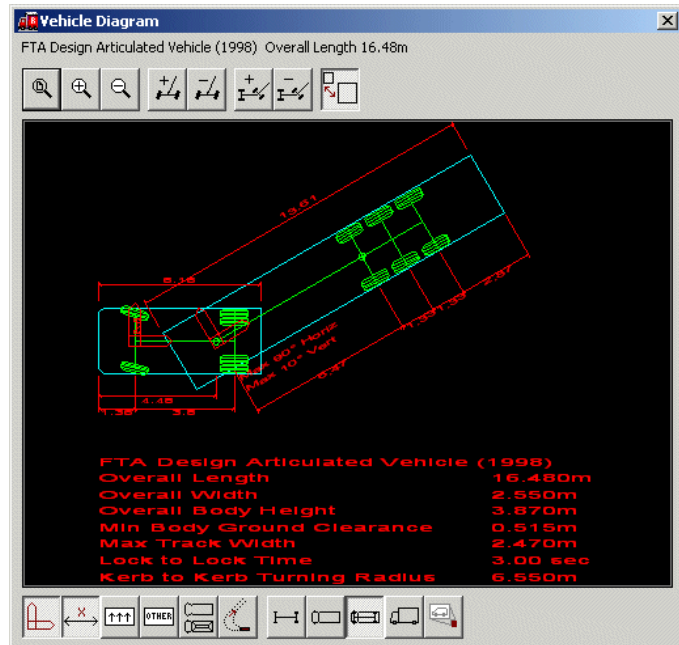

Vehicle Diagram dialog

2. The principle dimensions are listed below the diagram.

Note

Overall Width follows the general convention and excludes the width of wing mirrors.

3. Click the **Zoom In** button to double the view scale and the **Zoom Out** button to halve the view scale. Note that using either command disables the AutoScale feature (see below).
4. Click the **Zoom Extents** button to restore a full size view of the entire vehicle. Using this command re-enables the AutoScale feature (see below).
5. You can increase or decrease the steering angle shown using the **Increase Steering Angle** button and **Decrease Steering Angle** button respectively.
6. Likewise the articulation angles can be changed with the **Increase Articulation Angles** button and **Decrease Articulation Angles** button respectively.
7. Depress the **AutoScale** button if you want the picture to zoom to extents when you highlight a new vehicle. You may disable this to make it easier to see the relative sizes of the vehicles as you scan through a library. This option is automatically disabled if you zoom in or out manually but is re-enabled if you zoom to extents.
8. Depress the **Show Datum** button to display the reference datum for each unit. This also shows the location of the



Show Turn Template button



Show Body button



Show Chassis button



Show All button



Show Elevation button

driver or pilot.

9. Depress the **Show Dimensions** button to display dimensions on the diagram.
10. Depress the **Show Loads** button to display load outlines and/or the **Show Other Outlines** button to display any and all other outline types.
11. Depress the **Show Simple Body Outlines** button to hide the detailed outline and display just a silhouette of the vehicle.
12. Depress the **Show Turn Template** button to show 30, 60, 90, 120, 150 & 180 degree turn templates for *front steered vehicles only*. For details of how to print these templates refer to [Printing library or vehicle details \(Print dialog\)](#) ⁽⁵⁰⁷⁰⁾.

Note

You can also create Turn Templates using the Template Generator. See Template Generator.

13. Click the **Show Body** button to display just the bodies, **Show Chassis** button to see just the chassis elements or **Show All** button to see both. The colours are the default colours used for reporting. Click **Show Elevation** to display a side view of the vehicle.
-

Creating a new library (Library Details dialog) ⁽³⁵²⁰⁾



Vehicle Library button

1. Select Library, Explore from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
2. Select **New Library** from the File menu in the Library. The Library Details dialog will appear.

Library Details dialog

3. Click the appropriate tab to edit or view the settings.
4. Edit the data as required and click **OK** to confirm when you are satisfied. Click **Cancel** to abort all changes and close the dialog.

Library Details: Library


1. Click the **Library** tab.
2. Give the library a meaningful **Name**.
3. The **Version** and **Notes** fields are provided for additional information and may be used at your discretion.
4. The **File Name** is read only and will be filled in when the file is saved.

Library Details: Users ⁽³⁵³⁰⁾

Note

You may only add new users or edit existing users in libraries to which you have full access rights.

1. Click on the **Users** tab.

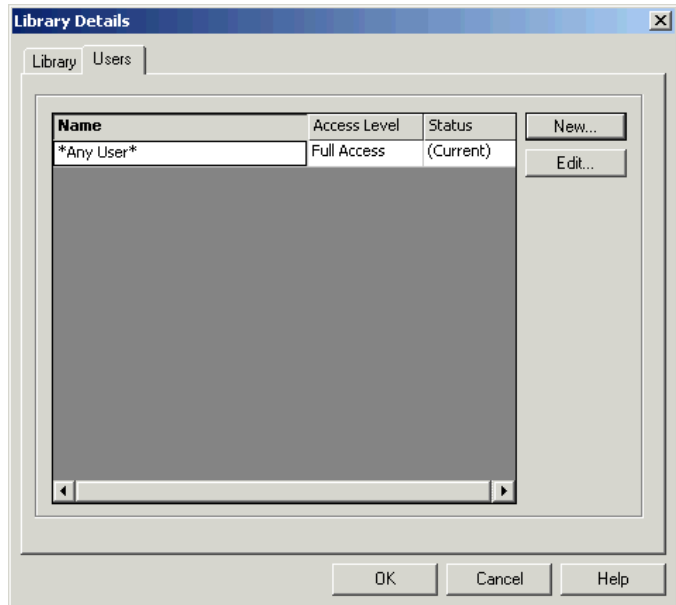

Library Details: Users

2. On a new library all users have full access as indicated by the default entry in the Users table. At least one user in the table must have full access before you may downgrade the default Any User rights.

To add a new user

1. On the Library Details dialog click **New**. The New User dialog will appear.

New User dialog


2. Enter the new **User Name**. Depending upon how you want to restrict access, this may be a specific person or a department name.
3. Enter the **Password** and then repeat it in the **Validate Password** field. This checks that you typed the password correctly. If you do not enter a password the named user will be able to unlock the library without typing a password.
4. Finally set the **Access Level**. We recommend that you add any users that you want to have full access and then downgrade the default Any User to Read Only.
5. Even tighter restrictions can be placed by downgrading Any User to No Access and adding Read Only users as required. However, this may prove problematic in practice.

To edit an existing user (Maintain Users dialog) ⁽³⁵⁶⁰⁾

Note

You may only add new users or edit existing users in libraries to which you have full access rights.

1. On the Library Details dialog highlight the user that you wish to edit and click **Edit**. The Maintain User dialog will appear.

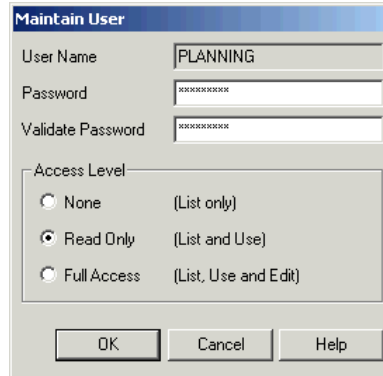

Maintain User dialog

2. Change the **Password** and / or set a new **Access Level** and click **OK** to confirm. If you do not enter a password the named user will be able to unlock the library without typing a password.
3. Click **Cancel** to abort any changes.

Note

You cannot delete users; instead you must set their access level to None.

Saving a library



Vehicle Library button


1. Select **Vehicle Library** from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
2. Highlight the library that you want to save, right click and select **Save Library As** from the drop down menu that appears.
3. The Save Library As dialog will appear. Browse to the required storage directory, enter the filename and click **Save**.
4. If the library already has a name then you can use **Save Library**.

Sharing a library (Share Data dialog) ⁽³⁵⁹⁰⁾



Vehicle Library button

1. Select **Vehicle Library** from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
2. Highlight the library that you want to share, right click and select **Share Library** from the drop down menu that appears.
3. The Share Data dialog will appear.

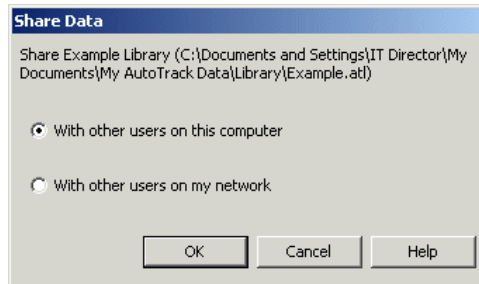

Share Data dialog

4. Select who you want to share the library with and click **OK**.

If you select **With other users on this computer** a copy will be placed in the public data directory on your computer.


If you select **With other users on my network** a copy will be placed in the shared data directory (if one is defined).

Printing library or vehicle details (Print dialog) ⁽⁵⁰⁷⁰⁾



Vehicle Library button

1. Select **Vehicle Library** from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
2. Highlight the library, vehicle group or vehicle that you want to print and click the **Print** button at the bottom. The Print Options dialog will appear.

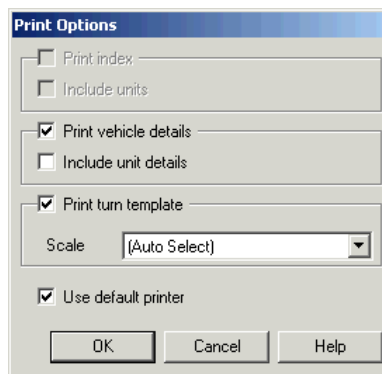

Print Options dialog

3. Tick **Print index** to print an index listing the vehicles and **Include units** if you want the index to include the names of the units.

Note

These options are disabled if you selected a vehicle.

4. Tick **Print vehicle details** to print details for the selected vehicles including a dimensioned scale diagram.
Tick **Include unit details** if you want full details of every unit.
5. Tick **Print turn template** to print 30, 60, 90, 120, 150 & 180 degree turn templates for the selected vehicles. Select the scale from the drop down list box or let AutoTrack select it for you. Note that the printed output includes a check point to allow you to check for stretching of the paper.
6. Tick **Use default printer** if you do not want to see the printer settings when you click **OK** and then click **OK** to proceed.
7. The Print dialog will appear if you did not opt to use the default printer. Adjust the printer settings if necessary and click **OK**.

Copying vehicles and units using drag and drop

Vehicles are automatically copied to the Pool when they are driven but you may wish to edit a vehicle before driving it or indeed build your own library of frequently used vehicles.

To copy a vehicle to the pool, select it, drag it over the Pool symbol and drop it. If you wish to copy it to another library you will need full access rights in the destination library. The cursor will change to a no entry symbol to indicate areas where you may not drop the vehicle.

You can also make copies of vehicles within libraries in the same way; in this case the names of the vehicle and its constituent units are prefixed with the words 'Copy of ', to distinguish them from the originals. If you drag a vehicle to a new group within the same library it will be moved (not copied). If you want it to be copied then hold down the <Ctrl> key while you drag. This is basically the same functionality as you will be familiar with in Windows Explorer.

Units may be copied in the same way but can only be copied to another vehicle. Select the unit and drag and drop it over the required vehicle. The unit will be added to the end of the vehicle but may be moved forward by editing the vehicle details.

Entire vehicles can also be added to the end of other vehicles in the same way. In this case all the units that make up the dragged vehicle are added to the end of the target vehicle.

Building vehicles using drag and drop

Using the drag and drop facility new vehicles can be constructed from existing vehicles quite quickly. However, be sure to check that the articulation angles between units are appropriate for your new vehicle.

Using tractors as trailers

If you drop a tractor type unit onto another vehicle its type AutoTrack will change its type to Tractor used as trailer. AutoTrack will then ignore the steering limits of the tractor when the vehicle is driven. It will also check that a coupling exists at the rear of the existing vehicle and at the front of the dropped tractor. In most cases you should not need to make any further changes to the vehicle. However, if it was necessary for AutoTrack to add couplings you might need to edit the coupling details.

Towbar type aircraft tugs


To model aircraft being towed with a towbar type tug you will need to change the front axle type to Drawbar. You will also need to set a front coupling at the end of the drawbar.

Towbar-less aircraft tugs

If using the drawbar-less type of tug you should set the articulation limits for the coupling to the maximum nosewheel angle.

Unlocking a library (Unlock Library dialog) ⁽³⁵⁵⁰⁾

1. Highlight the library that you want to unlock, right click and select **Unlock Library** from the drop down menu that appears. If a password has been set for the library, the **Unlock Library** dialog will appear. Otherwise, the library will be unlocked and you should refer to step 3.

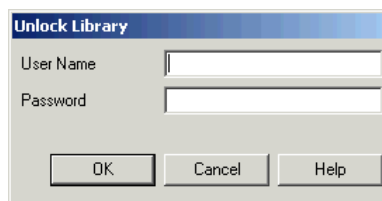

Unlock Library dialog

2. Enter your **User Name** and **Password** and click **OK**.
3. You will be granted whatever rights you have within the library. Thus, if you have full access rights within the current library then you will be able to edit vehicles in the unlocked library; if, on the other hand you only have read only rights then you will only be able to drive and copy the vehicles.

Creating a new group




Vehicle Library button

1. Select **Vehicle Library** from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
 2. Highlight the library that you want to add a group to.
 3. Right click and select **New, Group** from the menu. The [Vehicle Group dialog](#) will appear.
 4. Edit the details and click **OK** to confirm.
-

Vehicle Group dialog (4040)

1. The Vehicle Group dialog lists the vehicle group details.

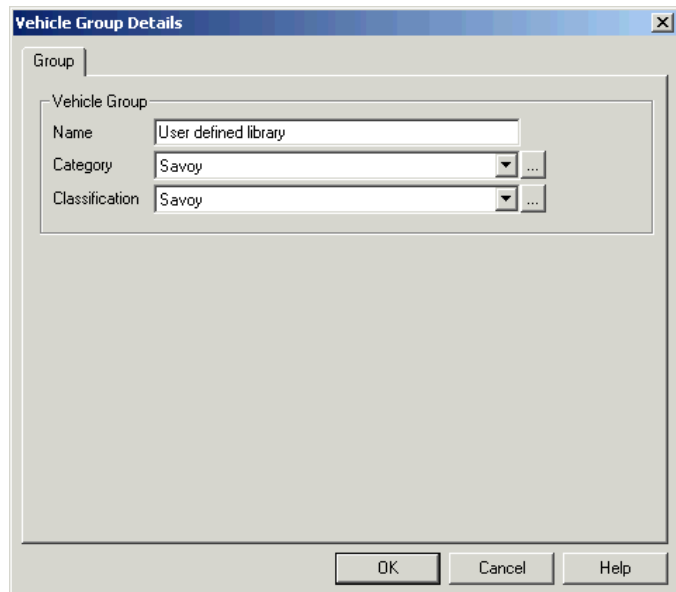

Vehicle Group dialog

54. Edit the **Name**, **Category** and **Classification** as required and click **OK** to confirm.

Viewing a vehicle used on a particular path



Properties button

1. Select the path and select Properties, Path from the AutoTrack menu or click the **Properties** button on the AutoTrack toolbar.
2. Click the **Vehicle** tab. The [Vehicle Details dialog](#) will appear.

Viewing or editing an existing vehicle



Vehicle Library button



Vehicle Wizard button

1. Select **Vehicle Library** from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
2. Highlight the vehicle whose details you wish to view or edit. Note that you cannot edit Savoy library vehicles or vehicles in other locked libraries directly but you can view their details or edit a copy.
3. Click the **Vehicle Wizard** button or right click and select **Edit** (or **View** if the vehicle is locked) from the menu that appears. The Vehicle Wizard will appear (see [The Vehicle Wizard](#)).
4. To edit a locked vehicle (e.g. a library vehicle) highlight it right click and select **Edit a Copy**. AutoTrack will make a copy of the vehicle in the Pool and open it in the Vehicle Wizard.

Creating vehicles

By default new vehicles are created using the Vehicle Wizard. However, you can switch to the advanced editor from any page of the wizard and once the vehicle is created you can even start editing in the advanced editor if you prefer.

To create a new vehicle



Vehicle Library button



Vehicle Wizard button

1. Select **Vehicle Library** from the AutoTrack menu or click the **Vehicle Library** button on the AutoTrack toolbar. The Library Explorer will appear.
2. Make sure that the cursor is not on a vehicle, then right click and select **New, Vehicle** from the menu that appears or click the **Vehicle wizard** button.

Note

All new vehicles are created in the Pool even if the cursor is over an editable library or vehicle group. This minimises the risk that you corrupt an existing library.

3. The Vehicle Wizard will appear (see [The Vehicle Wizard](#)).
-

The Vehicle Wizard

The Vehicle Wizard allows you to define simple vehicles. The wizard cannot edit the following:-

More than 7 units
Non-identical axles
Different front and rear lock to lock times
Steering linkages
Self-steered or retracted axles

If you try to edit a vehicle that has more than 7 units you will be placed in the advanced editor.

On every page of the wizard there is an **Advanced** button that takes you to the advanced editor. If you wish to edit data that falls into one of the above categories go to the advanced editor then return to the wizard.

Also on every page is a **Finish** button. This is only active for vehicles that are being edited and not for those being created for the first time.

The wizard displays different screens depending upon the vehicle type.

Some tips for defining trams (Rail only)

All axles on a tram must, by definition, be guided. Each front or rear axle group is reduced to an effective contact point (ECP) and these are used to calculate the movement of the tram. However, it is not always easy to determine whether an axle, or its wheels, are fixed or free to turn, and if you define them incorrectly the tram may be undriveable. There are two rules that must be observed when defining a tram in order to avoid undriveable vehicles.

1. Each tram **must** have at least one unit with 2 guide points (i.e. a front axle group and a rear axle group) but this need not necessarily be at the end of the tram.
2. There must be only one guide point adjacent to each articulation point. For example, if you define a rear guide point (axle group) on unit 2 then there **must not** be a front guide point on unit 3; and conversely, if there is no rear guide point on unit 2 then there **must** be a front guide point on unit 3.

Note that it is implicit in these rules that the first unit must have a front axle and the last unit must have a rear axle.

You should consider the following when defining a new tram:

Which unit is the 2-ECP unit ?

Most trams have a clear candidate for the required double ECP unit. However, if it is unclear you should bear in mind that a two axle bogie **cannot** be regarded as two separate contact points if the bogie articulates with respect to the unit chassis. If the bogie does not articulate with respect to the unit chassis then you can consider the centres of the two axles of the bogie as separate effective contact points.

Where are the pivot points ?

The pivot points are where the tram chassis articulates. The tram chassis (and therefore the tram body) is assumed to be rigid between the pivot points.

Vehicle wizard: Name ⁽⁷⁰⁰⁰⁾

Vehicle Wizard

This wizard will help you to define or edit simple vehicles. Refer to the user manual or the online help to see the limitations.

Vehicle name: California Design Vehicle (15m MTCR, 2 Axle Trailer)

Source of data: [Empty]

Description: Design vehicle

Vehicle type: Articulated vehicle

Number of units: 2 (a drawbar trailer counts as one unit)

Click Next to continue

Advanced...

< Back Next > Finish Cancel Help

Vehicle Wizard: Name tab

1. Enter the vehicle **Name**, **Description** and **Source**. Even though the **Description** and **Source** fields are not compulsory we nevertheless recommend that you complete them since they are useful reminders when you come to reuse the vehicle at a later date.
2. Enter the **Vehicle type**. You may select from a variety of steered vehicles, an aircraft or a tram. You may not select a vehicle type Tram if you have not purchased the Rail version. Likewise, you may only select a vehicle type Tram if you only have a licence for the Rail version. Your selection here affects the data you have to supply. For example, if you select a tram your vehicle will have rail type wheels and you will be asked for details of the pantograph.
3. Enter the **Number of units**.

Note

A unit with a drawbar front axle is regarded as a single unit.

4. Click the **Advanced** button to go to the Vehicle Details dialog.
5. Click **Next** to move to the next page.

Note

Throughout the wizard, if you have an invalid value you will not be permitted to go to the next page. You can, of course, also move backwards through the wizard using the Back button but note this is not a cancel button and retains any edits that you make on the current page.

Vehicle wizard: Axles ⁽⁷⁰¹⁰⁾

The wizard assumes that new axles are identical and either Ackerman steered or fixed. To define non-identical axles or to add self steered or retracted axles click the Advanced button.

Number of front axles:

Front track width: m

Wheels on each axle:

Number of rear axles:

Rear track width: m

Wheels on each axle:

Click Next to continue

Advanced...

< Back Next > Finish Cancel Help

Vehicle Wizard: Axles tab

1. Enter the **Number of front axles**. The first unit must have at least a front axle and the last unit must have at least a rear axle.
2. **Drawbar trailers**: If you specify front axles on the trailer of a steered vehicle the wizard assumes you want a drawbar.
3. **Self-steered / retracted axles**: Click the **Advanced** button to use the advanced vehicle editor and tick the **Self-steered** and / or **Retracted** box on the relevant axles.
4. **Steering linkages**: Click the **Advanced** button to use the advanced editor and tick the **Linkage** box.
5. Enter the **Wheels on each axle**. This is the total number of wheels on each axle so if there is only one wheel on each side you should enter 2 in this field. Wheels are generally assumed to be at the ends of the axles except for aircraft main undercarriage wheels which are at specified spacing.
6. **Evenly spaced or specified spacing wheels**: Click the **Advanced** button to use the advanced vehicle editor and select **Evenly spaced** or **Specified spacing** from the wheel position drop down box on each axle.
7. Enter the **Front track width**. All axles are assumed to be identical. Track width must be non-zero.
8. **Non-identical track widths**: Click the **Advanced** button to use the advanced vehicle editor and set the **Outer face wheel track** on each axle.
9. Do the same for the rear axles.
10. Click **Next** to move to the next page.


Vehicle wizard: Wheelbase (7020)

Tractor Wheelbase

The wheelbase and axle spacing of a unit are the main factors in how much it will cut in. A unit with a long wheelbase and a single axle may have the same cut-in as a unit with a shorter wheelbase but several widely spaced axles.

Wheelbase m

Rear axle spacing m

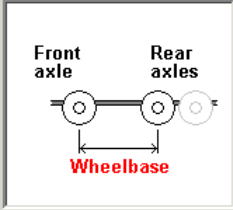

Click Next to continue

Vehicle Wizard: Wheelbase tab

1. Enter the **Wheelbase** - the distance between the innermost front and rear axles (or, if there are only axles at one end between the axles and the coupling at the other end). AutoTrack automatically calculates the centroids of the axle groups to calculate the effective wheelbase.
2. **Manual setting of the effective wheelbase:** Click the **Advanced** button and use the advanced editor to set the effective front and / or rear axle offset.
3. If you have more than one front or rear axles then you must enter appropriate values for **Front axle spacing** and **Rear axle spacing**. This is the distance between any two adjacent axles. The wizard assumes that the axles are evenly spaced, i.e. that the distance between all pairs of adjacent axles is the same.
4. **Unevenly spaced axles:** Click the **Advanced** button and use the advanced editor to set the offset of each axle.
5. Click **Next** to move to the next page.


Vehicle wizard: Drawbar ⁽⁷⁰⁵⁰⁾

Trailer 2 Drawbar

Drawbar dimensions are measured relative to the axle group pivot point.

Length of drawbar m

Drawbar articulation angle deg

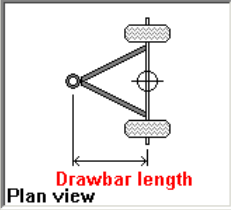

Click Next to continue

Vehicle Wizard: Drawbar tab

1. Any steered vehicle trailer that has front axles is assumed to be a drawbar trailer.
2. The **Length of drawbar** is measured from the coupling to the preceding unit to the centre of the axle pivot.
3. The **Drawbar articulation** angle must be non-zero.
4. Click **Next** to move to the next page.

Vehicle wizard: Steering (not Rail) ⁽⁷⁰³⁰⁾

The rate at which a vehicle can turn is determined by the time it takes to turn the steered wheels from lock to lock. This is assumed to be the same going forwards as reverse.

Steering: Front Axle

Lock to lock time: sec

Click Next to continue

Advanced...

< Back Next > Finish Cancel Help

Vehicle Wizard: Steering tab

1. Most vehicles will have front wheel steering but if your vehicle is one of the exceptions then select Rear Wheels or even Rear Coupling from the **Steering** drop down box.
2. Enter a value for the **Lock to lock time**. This is assumed to apply when the vehicle travels forwards or backwards and must be non-zero.
3. **Different lock to lock rates for forwards and reverse:** Click the **Advanced** button and use the advanced editor.

Tip

Lock to lock time is a term that Savoy Computing introduced way back in the eighties. Whilst it is a useful way to describe the steering characteristics of a vehicle it is nevertheless a parameter that is little used in the motoring industry. Far more common is the number of turns of the steering wheel lock to lock. Clearly the two parameters are closely related and it may be useful when defining new vehicles to think in terms of number of turns lock to lock. Of course the time it takes to complete one turn of the wheel may vary between vehicles according to steering wheel size, resistance to turning and other factors.

4. Click **Next** to move to the next page.


Vehicle wizard: Manoeuvrability (7040)

Tractor Manoeuvrability

The minimum turning circle radius (MTCR) determines how tight the unit can turn. It is commonly specified on manufacturers data sheets as either between kerbs or between walls. Otherwise, specify the max physical or virtual steering angle.

Turning radius measured kerb to kerb
 Turning radius measured wall to wall
 Maximum wheel angle (physical)
 Maximum steering angle (virtual)

Minimum turning circle radius m

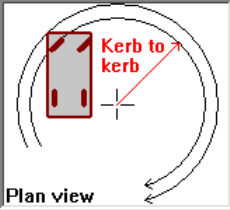

Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Vehicle Wizard: Manoeuvrability tab

1. Most source specify vehicle turning as either kerb to kerb radius or wall to wall radius. However it can also be specified as a maximum wheel angle or as a steering angle. Select the appropriate option and enter either the turning radius in the **Minimum Turning Circle Radius** field or the angle in the **Maximum Angle** field. Either must be greater than zero.
2. Click **Next** to move to the next page.

Vehicle wizard: Couplings (7060)

Tractor Couplings

You cannot remove intermediate couplings but you can adjust their locations and articulation angles. Couplings are all assumed to be fixed. To add a special type of coupling click the Advanced button.

This unit has a front coupling

Front coupling offset: m

Maximum articulation angle: deg

This unit has a rear coupling

Rear coupling offset: m

Maximum articulation angle: deg

Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Vehicle Wizard: Couplings tab

1. The wizard automatically adds a front coupling to all trailers and a rear coupling to all preceding units. The **Coupling offset** is measured from the innermost rear axle.
2. You may add an additional front coupling to the front unit or a rear coupling to the last unit if you wish.
3. The Maximum articulation angle must be non-zero.
4. Click **Next** to move to the next page.

Vehicle wizard: Body ⁽⁷⁰⁷⁰⁾

Vehicle Wizard: Tractor Body

The Rear Overhang is measured from the innermost rear axle. N.B. If the rear of the body is in front of the rear axle then the rear overhang will be negative.

Body length m

Body width m

Rear overhang m

Add wing mirrors

Body style

Click Next to continue

Vehicle Wizard: Body tab

1. Enter values for the **Body length** and **Body width**. Both must be greater than zero. You will be warned if the body comprises multiple shapes and given the opportunity to reduce them to a simple bounding rectangle.
2. **To create or edit bodies made up of multiple shapes:** Click the **Advanced** button to use the advanced editor and edit the shapes as necessary.
3. The **Rear Overhang** is measured from the innermost rear axle (or the rear coupling if there is no rear axle) and may be negative if the back of the body is in front of the rear axle.
4. The vehicles are all supplied without wing mirrors defined. If you would like to see the effect of wing mirrors tick **Add wing mirrors**.

Warning

The default wing mirrors will not be ideal for all vehicles and we recommend that you check the location and size if they are critical in your scheme.


5. Finally, select a **Body Shape** from the drop down list.
6. Click **Next** to move to the next page.

Vehicle wizard: Tractor body ⁽⁷⁰⁷⁵⁾

Vehicle Wizard: Tractor Body (Detail)

The articulated tractor body shape is visually more accurate but does not normally differ significantly from the path generated using a rectangular body shape.

Cab length * m
Chassis width * m

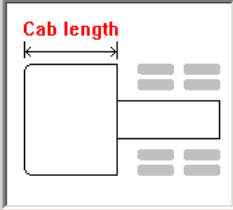

* Dimensions marked thus have been automatically calculated. Enter a value to override. Enter zero to set default.

Click Next to continue

Vehicle Wizard: Tractor Body


1. The Tractor body page allows you to create more realistic looking bodies for articulated vehicle haulers.
2. The **Cab length** is the length of the cab itself.
3. The **Chassis width** is the width of the chassis behind the cab.

Vehicle wizard: Tram body (trams only) ⁽⁷⁰⁸⁰⁾

Unit 1 Body end detail

Tram carriage bodies often have rounded or tapered ends. Use the fields on this page to define these refinements. To define a more precise outline click the Advanced button.

	Front	Rear
End radius	<input type="text"/>	<input type="text" value="-0.85"/> m
Taper width	<input type="text" value="0.425"/>	<input type="text" value="0"/> m
Taper length	<input type="text" value="2.1"/>	<input type="text" value="0"/> m

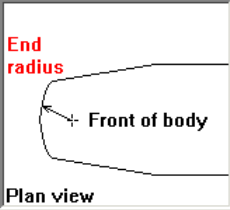

Click Next to continue Advanced...

< Back Next > Finish Cancel Help

Vehicle Wizard: Tram body tab

1. By default tram bodies are rectangular. This tab allows you to define more accurate end shapes for your trams.
2. The **Taper width** is amount by which the end of the tram body narrows on each side at the end. For example, if the uniform body width is 2m and the end width is 1m then the taper width is 0.5m.
3. The **Taper length** is the distance from the start of the body width reduction to the end of the tram body.
4. If you specify a negative **End radius** the end of the tram will be concave (i.e. curved inwards instead of outwards). This is used on the trams we provide to represent the inter-car turntable at articulation points.
5. Click **Next** to move to the next page.

Vehicle wizard: Aircraft wings (aircraft only) ⁽⁷⁰⁹⁰⁾

Aircraft Wings

The wing tip leading edge offset is a critical dimension that has a significant bearing on the swept envelope. We recommend that you over-ride the default value with the specific value.


Wing tip leading edge offset * m

Wing root leading edge offset * m

Wing tip taper m

Wing width at tip * m

Wing width at root * m

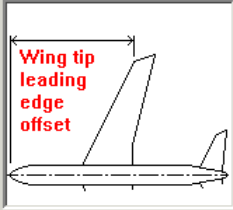

* Dimensions marked thus have been automatically calculated. Enter a value to override. Enter zero to set default.

Click Next to continue

Vehicle Wizard: Aircraft Wings tab


1. All except one of the fields on this tab have default values based upon the length or span of the aircraft. We must stress that none of the default values should be regarded as recommended or accurate in any way. Some will be more critical than others and we encourage you to overwrite them with accurate dimensions.
2. The **Wing Tip Leading Edge Offset** is a particularly important dimension and can have a significant effect on the swept envelope.
3. Click **Next** to move to the next page.

Vehicle wizard: Aircraft Tailplane (aircraft only) (7100)

Aircraft Tailplane

Please do not accept the default values if you have accurate data available. To define or import a more precise outline click the Advanced button.

Tail span *	<input type="text" value="14.0448"/>	m
Tail tip leading edge offset *	<input type="text" value="45.2602"/>	m
Tail root leading edge offset *	<input type="text" value="41.5274"/>	m
Tail tip taper	<input type="text" value="0"/>	m
Tail width at tip *	<input type="text" value="1.8664"/>	m
Tail width at root *	<input type="text" value="3.2662"/>	m

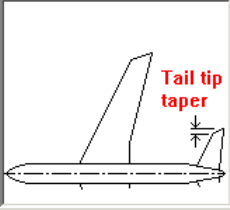

* Dimensions marked thus have been automatically calculated. Enter a value to override. Enter zero to set default.

Click Next to continue

Vehicle Wizard: Aircraft Tailplane tab

1. Again most of the fields on this tab have default values based upon the length or span of the aircraft. Whilst these dimensions are likely to be less critical than those of the wings, nevertheless we must stress that none of the default values should be regarded as recommended or accurate in any way and we encourage you to overwrite them with accurate dimensions.
2. Click **Next** to move to the next page.

Vehicle wizard: Aircraft Fuselage (aircraft only) (7110)


Aircraft Fuselage

Please do not accept the default values if you have accurate data available. To define or import a more precise outline click the Advanced button.

Fuselage width * m

Fuselage front taper length * m

Fuselage rear taper length * m

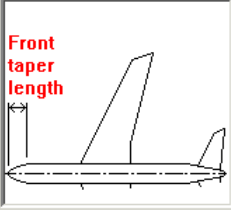

* Dimensions marked thus have been automatically calculated. Enter a value to override. Enter zero to set default.

Click Next to continue

Vehicle Wizard: Aircraft Fuselage tab

1. The dimensions on this screen are unlikely to be critical. Nevertheless, it is still worth entering accurate data.
2. Click **Next** to move to the next page.

Vehicle wizard: Pantograph (trams only) ⁽⁷¹²⁰⁾


Unit 3 Pantograph

These fields are optional. If you supply the data you will be able to envelope the path of the pantograph head.

This unit has a pantograph pickup

Pickup offset from front m

Pickup width m

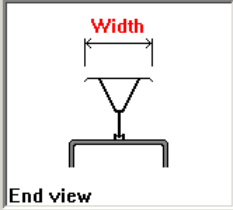

End view


NOTE: To see the pantograph on the vehicle diagram click the Show Other Outlines button on the vehicle diagram.

Click Next to continue

Vehicle Wizard: Pantograph tab

1. If the current tram unit has a pantograph pickup tick the box.
2. The **Pickup offset from front** is measured from the front of the tram body.
3. Click **Next** to move to the next page.

Vehicle wizard: Finish (7130)

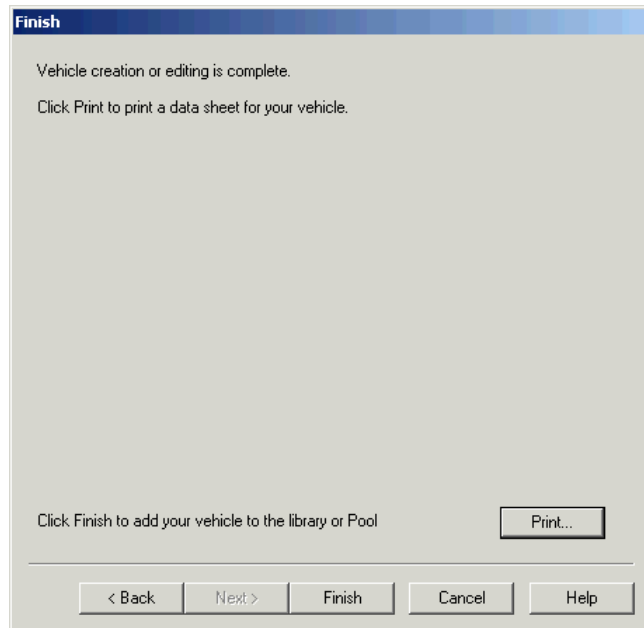

Vehicle Wizard: Finish tab

1. The Finish page allows you to print the details of your new vehicle. When you are ready click **Finish** to add the vehicle to the library or pool.

The Advanced Editor

The advanced editor has fewer restrictions than the wizard and allows you to define details that may not be possible using the wizard. However, the wizard preserves advanced settings defined using the advanced editor and consequently you can safely switch between editors as the need arises.

Vehicle Details dialog (4050)

The Vehicle Details dialog gives an overview of the complete vehicle, and lists the units that it comprises.

Unit	Name	Max Artic.
1 x	California Design Vehicle Tractor (15m MTC	N/A
2	California Design Vehicle 2-Axle Trailer	90

Vehicle Details dialog

1. The **Name**, **Type**, **Category** and **Classification** of the selected vehicle appear at the top of the dialog. Beneath that the units that comprise the vehicle are listed with the front unit at the top. Vehicle **Category** and **Classification** are merely sort criteria used in the Library Explorer and have no bearing on how the vehicle behaves. However, you will not be able to create vehicles of type tram unless you are licensed to use the AutoTram module; likewise you will not be able to create any of the various steered vehicle types unless you are licensed to use AutoTrack.
2. Click the button next to the **Name** field to enter **Source**, **Description** and **Notes**.
3. Select a unit and click the **View** or, if you have appropriate rights, the **Edit** button to check the details of a specific unit. The [Unit Details dialog](#) will appear.
4. Click **New** to add a Unit to the vehicle. This will display a blank unit details dialog for you to create a completely new unit (see [Unit Details dialog](#)). If you want to add an existing unit to the vehicle, then drag it onto the vehicle in the Library Explorer dialog.
5. Select a unit and click **Remove** to remove it from the vehicle.

6. You can reorder units using the **Move Up** button. Select a unit and click **Move Up**. The selected unit will be moved up one place.
7. The only editable column in the lower grid is **Max. Artic.**, the maximum articulation angle. This value is used in preference to those defined in the coupling details if it is lower.
8. The unit names can only be edited in the [Unit Details dialog](#).

Unit Details dialog (4060)

The Unit Details dialog shows the detailed dimensions and parameters of individual units. When defining units we recommend that wherever possible you enter the actual dimensions and allow AutoTrack to calculate the effective dimensions.

1. Click on the appropriate tab to view or edit details.

The screenshot shows the 'Unit Details' dialog box with the 'Unit' tab selected. The dialog is titled 'Unit Details (Dimensions: m, deg, sec, km/h)'. It has several tabs: 'Unit', 'Front Axles', 'Rear Axles', 'Steering', 'Body / Outlines', and 'Couplings'. The 'Unit' tab is active, showing the following fields:

- Name:** California Design Vehicle Tractor (15m MTCR)
- Type:** Tractor (with driver controlled steering)
- Body Style:** Articulated Vehicle Tractor (Large Sleeper Cab)
- Classification:** Savoy
- Datum:** Reference Datum: Front Primary Axle 1
- Front Axle:**
 - Innerness Front Axle (No.1): 0
 - Behind Datum: (Front Primary Axle 1)
 - Effective Front Axle Offset: 0
 - Use Calculated Value of: 0
- Rear Axles:**
 - Innerness Rear Axle (No.1): 5.5
 - Behind Datum: (Front Primary Axle 1)
 - Effective Rear Axle Offset: 5.5
 - Use Calculated Value of: 6.11

Buttons at the bottom include 'Print', 'OK', 'Cancel', and 'Help'.

Unit Details dialog: Unit tab

2. Enter values in the fields provided and click **OK** to confirm and close the dialog.
 3. Click **Apply** if you wish to confirm the changes but not close the dialog. Click **Cancel** to abort all changes since the last time you clicked **Apply**.
-

Unit Details: Unit

1. Click on the **Unit** tab.
55. **Name** may be anything but make sure that similar vehicles with different drive characteristics are clearly identified to prevent incorrect use. Click the button next to the **Name** field to enter **Source**, **Description** and **Notes**.
56. **Unit Type** may be Tractor, Trailer, Tractor Used as Trailer, Towbar, Suspended Unit or Tram / Guided Unit:-

Tractors are always the driven (and steered) unit and must therefore have at least a front axle and steering characteristics.

Trailers have no steering parameters and may front and rear or just rear axle groups.

Setting **Tractor Used as Trailer** forces AutoTrack to ignore the steering criteria for this unit and treat the remaining data as if it were a trailer.

Suspended Units have no axles and therefore no steering capability.

A **Tram / Guided Unit** is assumed to be guided by rails or similar and therefore has no steering capability. The unit may have front and / or rear axles or no axles but any axles must be guided.

A **Towbar** is essentially the same as a suspended unit and has neither front nor rear axles and no steering.

As you edit the Type the relevant data tabs will appear and disappear.

57. Vehicle **Category** and **Classification** are merely sort criteria used in the Library Explorer and have no bearing to how the unit behaves.
58. The **Datum** is the reference point for all dimensions on the unit. It may be set to the front most or rearmost point on the body, the front or rear primary axle, or the front or rear coupling.
59. If you unit has a front axle tick **Front Axle**. Likewise **Rear Axle**.
60. The distance from the datum to the **Innermost Front Axle** and **Innermost Rear Axle** must be specified. Obviously if the selected datum is one or other of these values then the appropriate dimension will be zero. The values are directional as indicated by the text that follows the field and the direction in which the unit is facing. You will not be able to edit the front axle offset if you have a drawbar front axle and a front coupling datum.

Note

*The difference between the **Innermost Front Axle** offset and the **Innermost Rear Axle** offset is the **Actual Wheelbase** referred to in WinTrack v2.x.*

61. Both front and rear axle groups are equivalenced to single effective axles. The position of these effective axles is dependent upon a number of factors including the axle and steering geometry and the tyre dimensions. It is the effective

axle positions that determine how the vehicle moves. By default AutoTrack calculates the positions of the effective axles for you but in some cases it is useful to specify the position manually.

Note

Since the effective axle positions determine how the unit turns so we recommend that you allow AutoTrack to calculate the value in most cases.


62. If you wish to set the **Effective Front Axle Offset** or **Effective Rear Axle Offset** manually then untick the relevant **Use Calculated Value** and enter the offset using the same direction convention as the Innermost Front Axle bearing in mind the direction drop down box.

Note

You cannot manually specify an effective axle offset to an axle that is linked.

Unit Details: Front Axles / Rear Axles (4070)

1. Click on the **Front Axles** tab (or **Rear Axles** tab).

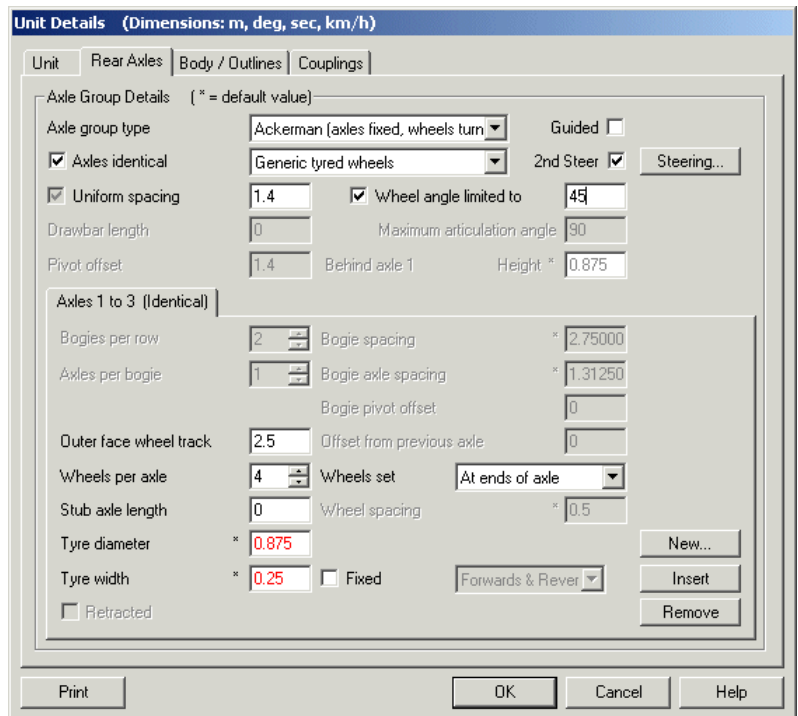

Unit Details dialog: Rear Axles tab

63. Select the **Axle group type** from the drop down list. If the axle group is steered then it probably uses the Ackerman steering principle whereby each wheel turns a different angle consistent with travelling along concentric arcs (see the chapter on Theory). Trailers may have drawbar front axles. Rear axles for most vehicles are fixed; those that steer must be linked to either the front axle (if there is one) or the front coupling.
64. Tick **Guided** if the axle is guided by rails or kerbs.
65. Select the wheel type from the dropdown list. You can choose from **Generic tyred wheels**, **Aircraft wheels**, **Car wheels**, **Truck wheels** and **Rail wheels**. Note, the difference between the various tyred wheels will only be apparent when animating the vehicle in 3D.
66. Tick **All axles identical** if all the axles have the same basic dimensions. When you tick this box the values for all axles will be set to same as the currently displayed axle (i.e. not necessarily axle 1) and the axles will be set to evenly spaced at the current **Uniform axle spacing**. Multiple tabs will be reduced to a single tab with text similar to Axle 1 to 3 (Identical).
67. Tick **2nd Steer** if this axle group turns but the turn angle is linked to the turn angle of another axle group or coupling. A rear axle group is automatically linked to the front axle group, if one exists, or the front coupling articulation angle, if not. A front axle group is similarly automatically linked to either the rear axle group or coupling. A unit cannot have both front and rear axle groups linked. The primary axle group cannot

have linked steering and neither can a fixed axle group.

Warning

If you create a linked Ackerman multi-axle group then even if you set a linkage ratio of zero some of the wheels will still turn reflecting the Ackerman axle type.

68. Click the **2nd Steer** button to enter details of the steering linkage ratios. See [Unit Details: Axle Groups: Secondary Steering Details](#) ⁽⁴⁰⁹⁰⁾ below.
69. Tick **Uniform axle spacing** if all the axles in the group are the same distance apart and enter a value in the field. Identical axles are deemed to be evenly spaced.

Note

Although a default value is provided for the axle spacing we strongly recommend that you obtain an accurate figure and overwrite this.

70. Tick **Wheel angle limited** if you know the maximum angle that any wheel in the group can turn and enter the angle in the field provided. Note that if the axle group is of the Ackerman type all wheels will turn by different amounts; in this case you should enter the greatest angle of any wheel in the group.

Note

You can only limit the turning of secondary steering or self-steered axles in this way. The primary steering limit may be adjusted on the Steering Details tab. See [Unit Details: Steering](#) ⁽⁴¹⁵⁰⁾.

Warning

When the limiting wheel angle is reached the steering is recalculated based upon the value of the controlling or primary steering angle and the limiting angle. This tends to force the cut-in point towards the limited axle.

71. If you are defining a drawbar axle group, then enter the **Drawbar length**. Note that the coupling (if any) at the end of the drawbar must be specified in the Couplings tab.
72. Also, if defining a drawbar, enter the **Maximum articulation angle** which is the angle between the drawbar and the unit to which it is permanently attached.
73. If you are defining a nosewheel, bogie or drawbar axle group then you must specify the **Axle group pivot offset**. This is the distance in front of axle 1 on front axle groups and the distance behind axle 1 on rear axle groups.
74. On units with tyred wheels the **Outer face wheel track** is measured over the outer faces of the outermost tyres on an axle. It is most important that this value is correct if you are specifying steering turn angle by kerb to kerb turning circle radius. Note that on **Pendel axles** this dimension is measured to the outer faces of each sub-axle.

On units with rail wheels the **Rail gauge** is measured between the faces of the wheels in contact with the inner faces of the rails.

75. Certain vehicles can have axles lifted from road contact when unloaded. Tick **Retracted** to specify an axle of this type. Note that you cannot define all axles in a group as retracted so by definition you cannot change this setting if the group only consists of one axle or if all axles are identical. The only exception to this rule is the primary steered axles of a tractor used as a trailer which may be retracted.
76. **Bogies per row** and **Bogie spacing** apply only to **Pendel axles** and each tab represents a row of bogies. **Bogies per row** is the number of bogies in each row across the width of the unit. **Bogie spacing** is the distance between the pivot points of each bogie. You can specify irregular spacings by entering values as "1.5, 2.1, 1.5". In this case the first spacing is the distance between the outermost bogie and the adjacent bogie, the second value is the distance between the next two bogies and so on. The last value is assumed to apply to any remaining bogie spacings. The row of bogies is assumed to be symmetrical so you only need to specify spacings for the bogies on one side.
77. **Axles per bogie**, **Bogie axle spacing** and **Bogie pivot offset** apply to **Tandem bogies** which have multiple pivots along the centerline of the unit. Each tab represents a bogie. Axles per bogie is the number of axles in a single bogie. Bogie axles are all identical and **Bogie axles spacing** is the distance between any two. **Bogie pivot offset** is the distance from the natural centre of the bogie to the actual pivot position. This is zero by default.
78. If the axles are not equally spaced then tick **Offset from previous axle**, and enter a value in the field. Note that axle 1 has no offset.
79. On non-turning axle groups (e.g. fixed, undercarriage) you may tick **Self steered** to allow selected wheels to rotate freely about their vertical axis (much like the wheels of a shopping trolley) on the Ackerman principle. This will affect the AutoTrack calculation of effective axle offset on multi-axle groups. Select the directions in which the self-steering applies.

It is widely assumed that self-steered axles have no effect on the position of the effective axle but if you consider that they have some effect you may wish to specify the effect of the axle compared to a fixed axle with the same wheels by specifying a **Self steered friction factor**. A zero friction factor means the self-steered axle has no effect on the effective axle position. A value of 100% means the self-steered axle has the same effect as a fixed axle. In addition, the wheel angle will be adjusted by the same friction factor.

80. On axle groups that include Ackerman steered wheels you may tick **Fixed** to prevent selected wheels from turning. Select the directions in which the axle is fixed.

Note

Currently axles fixed in this way are only drawn fixed and are still considered as turning for the purposes of calculating the effective axle position.

81. **Total wheels per axle / subaxle** can be any positive value, odd or even. If you specify an odd value the odd wheel will

be drawn at the centre irrespective of the wheel placement specified in the next field.

82. **Wheel placement** defines how the wheels are positioned along the axle. It can be set to **At Ends of Axle, Evenly Spaced** or **Specified Spacing**. If you select Specified Spacing you must provide the **Wheel spacing**, the distance between centres of the wheels. The default is twice the wheel width.
83. If you are defining an Ackerman axle with wheels located at the ends of the axles then you have the option to set a **Stub axle length**. The stub axle length is the distance from the centre of the wheel group to the pivot at the opposite end of the stub axle.
84. On units with tyred wheels the **Tyre diameter** is measured to the tread surface for units with tyres. Note that this does not affect path prediction where all axles are identical but may affect the calculated effective axle offset when the track widths of each axle in a group varies and therefore affect the resultant path.

On units with rail wheels the **Wheel diameter** is measured to the surface in contact with the rail.

A default value is provided but if you know the actual value then overwrite the default.

85. On units with tyred wheels the **Tyre width** is measured at the contact point. Note that this does not affect path prediction where all axles are identical but may affect the calculated effective axle offset when the track widths of each axle in a group varies and therefore affect the resultant path.

On units with rail wheels the **Wheel width** is measured to the outer faces of the wheel.

A default value is provided but if you know the actual value then overwrite the default.

86. Click the **New** button to add an axle after the last one currently defined, i.e. if you have 3 axles defined the new axle will be axle 4. The new axle will be initialised with the same values as the current axle.
 87. Click the **Insert** button to insert an axle at the current location, i.e. if you are displaying axle two of three the inserted axle will be numbered 2. The inserted axle will be initialised with the same values as the current axle.
 88. Click the **Remove** button to remove the currently displayed axle from the group. Note that you cannot remove axle 1, instead you must untick Front Axles or Rear Axles on the Unit tab to remove the axle group completely.
-

Unit Details: Axle Groups: Secondary Steering Details (4090)

1. Secondary steering includes both linked steering and manually controlled secondary steering. Secondary steering may comprise a linkage with manual over-ride or just manual control of a second set of steered wheels.
2. Linkage rules can apply in both directions at all speeds or you can define rules that only apply in one or other direction from certain speeds and/or angles.

Unit Details: Axle Groups: Secondary Steering dialog

3. Tick **The {position} axles are linked** to specify axles whose angle is controlled by a **linkage** to an articulation or wheel angle. The linkage ratio is then the ratio of the secondary wheel angle to the controlling wheel angle. If this option is unticked then the axles will be set as manually controlled and vice versa, i.e. secondary steering must be either a linkage axle or a manually controlled axle.
4. Select the **Scope** of the linkage from the drop down list. You may select Forwards Only, Reverse Only or Forwards & Reverse.
5. Enter the **Angle** from which the linkage applies. Note that the first entry in the table always has a starting angle of 0.0, which cannot be edited. If you have an angular linkage that starts from a greater angle click **New** to add a new linkage.

6. The **Basis** determines whether a factor is applied directly to the angles, i.e. the linked angle is directly proportional to the angle of the item to which it is linked; or to the tangents of the angles, i.e. the tangent of the linked angle is proportional to tangent of the angle of the item to which it is linked; or whether the linkage is defined as an effective wheelbase. Select **Angles**, **Tangents** or **EWB** as appropriate.
7. Linkages by **Angles** or **Tangents**:-
Enter the linkage **Factor**, which is the amount by which the linked wheels turn expressed as a proportion of the angle of the item to which it is linked. Note that the factor can be applied to either the tangents of the angles or the angles themselves (see Basis below). The linkage factor is assumed to vary linearly to the next specified angle. The linkage factor does not increase beyond that assigned to the highest angle listed.

Note

If you need the linkage factor to change in steps rather than linearly you should create two entries at each angle, the first with the factor set to the value for the previous angle and the second with the factor set to the new value.

8. Linkages by effective wheelbase or **EWB**:-
Enter the **EWB**, which is the distance from the effective steered axle to the effective fixed axle. The EWB is assumed to vary linearly to the next specified angle. The EWB does not increase beyond that assigned to the highest angle listed.

Note

If you need the EWB to change in steps rather than linearly you should create two entries at each new angle, the first with the EWB set to the value for the previous angle and the second with the offset set to the new value.

9. If there are speed dependent linkages tick **These linkages are also speed dependent**.
10. Select the **Scope** of the speed related linkage from the drop down list. You may select Forwards Only, Reverse Only or Forwards & Reverse.
11. Enter the **Speed** from which the linkage applies. Note that the first entry in the table always has a starting speed of 0.0, which cannot be edited. If you have a speed linkage that starts from a higher speed click **New** to add a new linkage.
12. Enter the speed linkage **Factor**, which is the amount by which the linked wheels turn expressed as a proportion of the angle of the item to which it is linked. The linkage factor is assumed to vary linearly to the next specified speed. The linkage factor does not increase beyond that assigned to the highest speed listed. If you have a speed linkage that starts from a greater speed click **New** to add a new speed linkage.

Note

If you need the linkage factor to change in steps rather than linearly you should create two entries at each new speed, the first with the factor set to the value for the previous speed and the second with the factor set to the new value.

13. If the linkage ratio can be controlled by the driver then tick **This linkage can be overridden at drive time**. Tick **Forwards** if the linkage ratio can be adjusted while travelling forwards and **Reverse** if it can be adjusted while reversing. If there is a limiting speed in either direction tick **Below speed of** and enter the limiting speed.
14. Finally, enter the range within which the linkage ratio can vary. Note that this is always expressed as the ratio between the limiting angles of the linked wheels and the angles of the item to which they are linked (typically the articulation angle), so the minimum ratio will give the greatest off-tracking and the maximum ratio the smallest off-tracking.
15. Tick **The {position} axles can be manually controlled** to specify wheels whose **angle** can be set independently of the primary steered axles. If this option is unticked then the axles will be set as linked and vice versa, i.e. secondary steering must be either a linkage axle or a manually controlled axle.

Note

The angles of linked axles may also be manually controlled but only if the linkage ratio cannot also be over-ridden.

16. The **Maximum secondary steering angle** is the maximum angle of any wheel in the secondary steered axle group.
17. By default the **Secondary lock to lock time** is zero meaning that there is no delay in the application of changes in the secondary steering angle. However, we recommend that a value is entered if known.

Unit Details: Steering ⁽⁴¹⁵⁰⁾

1. Click on the **Steering** tab.

The screenshot shows the 'Unit Details' dialog box with the 'Steering' tab selected. The 'Steering Details' section includes a dropdown for 'Primary steering' set to 'Front Axle', and input fields for 'Lock to lock time forwards' (6) and 'Lock to lock time reverse' (6). The 'Maximum steering angle' is set to 0, with a checked option 'Use calculated value of' set to 35.4. Below this, the 'Basis for calculation of maximum steering angle' section has three radio buttons: 'Kerb to kerb radius' (selected) with a value of 6.87 and a dropdown set to 'All Axles' at 0 (speed); 'Wall to wall radius' with a value of 0 and a dropdown set to 'Body only' at 0 (speed); and 'Maximum Wheel Angle' with a value of 0. The 'Driver / Pilot' section has input fields for 'Longitudinal offset' (0.11 behind datum), 'Lateral offset' (0.6 from centreline), and 'Height' (1 above ground). A checked checkbox 'Move driver / pilot to the Left when the convention is to drive on the Right' is also present. At the bottom are 'Print', 'OK', 'Cancel', and 'Help' buttons.

Unit Details dialog: Steering tab

2. The **Primary steering** is determined by the design of rest of the unit. AutoTrack assumes that the primary steering is applied at the steerable axle or coupling that is not linked to any other. If there are no such axles or couplings (or more than one) you will be warned. Thus if the unit has steering on both front and rear wheels then one of the axles must be specified as linked.
3. The lock to lock time is the time taken to turn the primary steering from full left lock to full right lock (or vice versa). You may specify a different value for **Lock to lock time forwards** and **Lock to lock time reverse**. Note that this value can be over-riden by disabling the steering rate limits in the Model.

Tip

Lock to lock time is a term that Savoy Computing introduced way back in the eighties. Whilst it is a useful way to describe the steering characteristics of a vehicle it is nevertheless a parameter that is little used in the motoring industry. Far more common is the number of turns of the steering wheel lock to lock. Clearly the two parameters are closely related and it may be useful when defining new vehicles to think in terms of number of turns lock to lock. Of course the time it takes to complete one turn of the wheel may vary between vehicles according to steering wheel size, resistance to turning and other factors.

4. The **Maximum steering angle** is the angle of an imaginary wheel at the centre of the steering (axle or coupling). If you do not have this information to hand AutoTrack is able to calculate it for you in one of three ways. Tick **Use**

calculated value if you want AutoTrack to calculate the maximum steering angle.

5. If you know the relevant radius then we recommend that you select either **Kerb to kerb radius** or **Wall to wall radius** as the basis for the maximum steering angle calculation.

If you selected **Kerb to kerb radius** you should now specify whether the radius is based upon **All Axles** or just **Active Axles**. The latter ignores retracted axles.

If you selected **Wall to wall radius** then you should specify whether the radius is based upon **Body Only** or **Body and Loads**. Usually a wall to wall radius is measured to the outer limits of the vehicle body excluding any loads being carried. If this is the case select **Body Only**.

Finally, if you have speed related linkages defined then you will also need to specify the speed at which the radius applies. If you do not have any speed related linkages defined then leave the speed at zero.

6. If you do not know either the kerb to kerb or wall to wall radius then you should use the **Maximum wheel angle** or **Maximum artic angle**. The Maximum Wheel Angle is the maximum angle of any wheel on the primary axle group (front or rear). The Maximum Artic. Angle is the maximum coupling articulation in the case of vehicles with steerable couplings. The value is taken from the **Wheel angle limited to** box on the appropriate axle group tab or from the **Maximum horizontal angle** box on the coupling tab.


Warning

*The **Maximum wheel angle** represents the maximum angle of any wheel in the axle group, unlike previous versions of AutoTrack in which it referred to an imaginary centre line wheel. The imaginary centre line wheel angle is now referred to as Maximum Steering Angle.*

7. The **Longitudinal offset** is the distance of the driver (specifically his eye) in front of axle 1.
8. The **Lateral offset** is the distance of the driver's eye from the centreline of the vehicle looking towards the front of the vehicle. You may specify a negative lateral offset if the driving convention requires it. Refer to [Drawing Settings: Scale](#).
9. The **Vertical offset** is the height of the driver's eye above ground level and is used in driver's eye viewpoint animations.
10. The position of the driver on the left or right is defined for the driving convention currently set. If you want the driver to be relocated for the opposite driving convention then tick **Move the driver/pilot to the ... when the convention is to drive on the ...**

Unit Details: Body / Outlines (4120)

1. Click on the **Body / Outlines** tab.

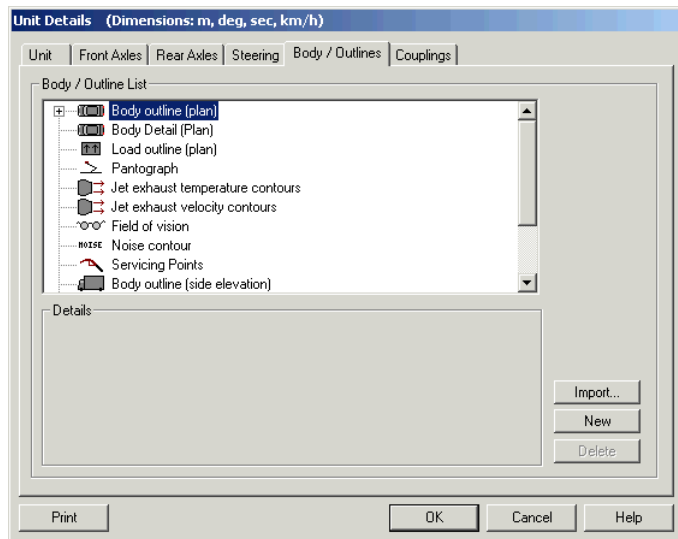

Unit Details dialog: Body/ Outlines tab

2. Outlines are categorised into different types, body, load etc. This allows you to switch the different types of outline on or off later when analysing the swept path. Furthermore, within each type of outline you can define different groups of shapes. So, for example, you might define a low loader trailer with two shapes in the Load Outline group, one representing an excavator (called Excavator) and another representing a dumper truck (called Dumper). Like the outline groups these can be independently switched on and off later.
3. To add a new outline, highlight the type, e.g. Body outline, Load outline etc, or group, and click the **New** button. A blank shape will be added either in a new default group or in the group you selected.
4. The top window contains an expanding tree view of the defined outline types. Each may contain zero or more groups of shapes. Two groups, **Body outlines** and **Load outlines** are special types that are referenced elsewhere in the unit details. Body outlines typically contains at least one group of shapes that defines the shape of the body of the unit. The Load outline may contain a shape group that represents a load.
5. The lower frame lists the details of the currently selected entry in the tree view. As you move the cursor over different objects in the tree the details change.
6. To add a new body outline highlight the Body outline type and click the **New** button. A new shape group containing a single shape will appear. Select the required shape **Type** from the drop down list box (Rectangle, Circle, Arc, Arc Segment, Line, Tram body, Tractor body, Aircraft body, Jet Exhaust Contour, Wing Mirror or Text) and enter the requested values.

To enter data for **Line** shapes click the **Vertices** button. The

Vertices dialog will appear. See below.

To enter data for **Tram body** shapes click the **Tram Body** button. The Tram dialog will appear. See below.

To enter data for **Tractor body** shapes click the **Tractor Body** button. The Tractor dialog will appear. See below.

To enter data for **Aircraft body** shapes click the **Aircraft Body** button. The Aircraft dialog will appear. See below.


To enter data for **Jet Blast contour** shapes click the **Jet Blast Contour** button. The Jet Blast Contour dialog will appear. See below.

7. Enter the **X Offset** and **Y Offset** to position the shape as required. Note that certain shapes have a **Mirror about the X-axis** check box. Use this to copy an asymmetrically placed shape about the X-axis.
8. You can if you wish import shape outlines from your drawing rather than defining them from scratch. Highlight the outline type that you wish to add and click the **Import** button. The Import dialog will appear. See below.
9. To remove a single shape or group of shapes highlight it in the tree view and then click the **Remove** button. You cannot remove outline types (i.e. Body outline etc) from the tree view.
10. New shape groups or shapes are given default names. To change the name of a shape or shape group simply highlight it and then click once.
11. Load outline shapes represent objects that are not part of the base vehicle. The good example is an excavator being carried on a low loader. Shapes of this type may optionally be excluded from calculations of steering angle that are based upon wall to wall turning circle.
12. Groups of shapes may be offset from the unit datum and individual shapes may be offset from the shape group datum. This allows you to move a group of shapes without having to move each individual shape.

Height and ground clearance

If you intend to perform a vertical clearance path analysis for the vehicle then you will need to either enter a custom side elevation or set the overall height and ground clearance to use the default vehicle type elevation adjusted for these values. You may enter a side elevation just like any other outline (see above). To use the default outline...

1. Highlight Body outline (side elevation).

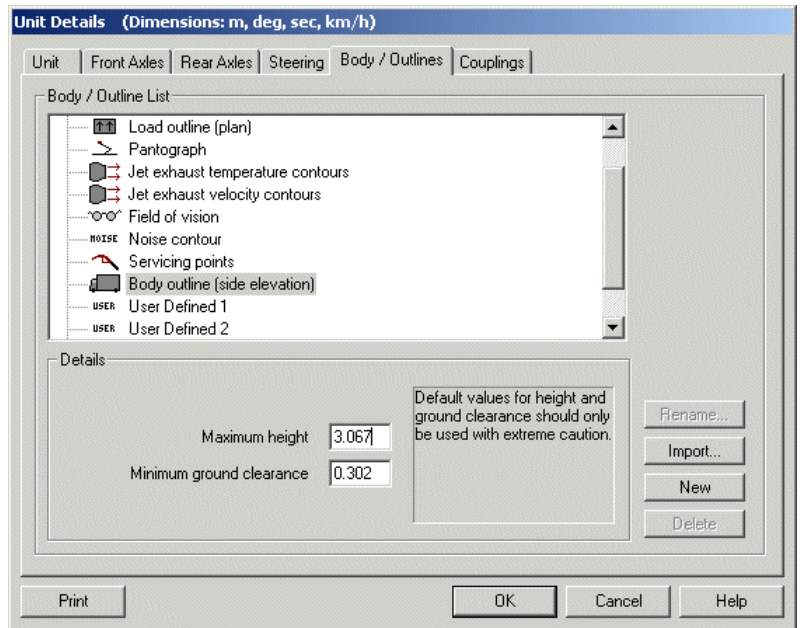

Unit Details dialog: Body / Outlines tab

2. Enter the **Maximum height** and **Minimum ground clearance** in the Details section at the bottom.
3. Click **OK** to confirm. The side-elevation will 'stretch' such that the highest and lowest points correspond to the values you provide.

Warning

*If you do not enter these values defaults will be used. It is unlikely that the default values will be precisely correct so to obtain useful results you **MUST** enter these values unless you define a custom side elevation.*

3D body shapes for animation


If you are running a system capable of 3D animation, you will need a 3D body shape for your vehicle. By default AutoTrack automatically creates a 3D body shape from the information supplied but you can define a more detailed shape if you wish.

The 3D body should be defined in AutoCAD as a block with the origin at the centre of the front coupling (or the centre of the rearmost front axle if there is no front coupling). The shape should be oriented with the spine of the vehicle running along the x-axis (increasing towards the back of the vehicle), the width on the y-axis and the height on the z-axis (increasing with height).

If the block has units defined then AutoTrack will adjust the block to comply with the drawing units set in AutoTrack. If not then AutoTrack assumes that the block is drawn in millimetres.

To use the new shape...

1. Ensure that the AutoCAD drawing containing the block is placed in the `Library\Blocks` directory.
2. Highlight Body outline (side elevation).

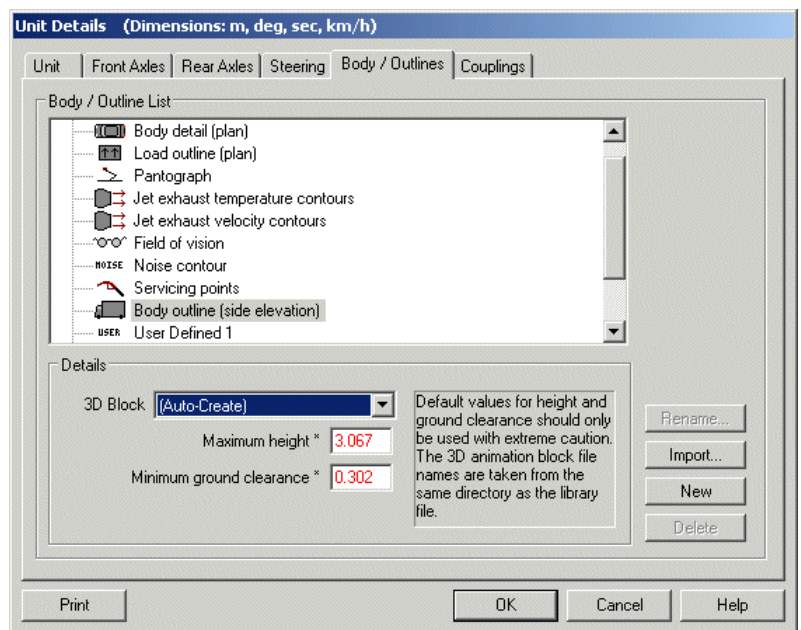

Unit Details dialog: Body / Outlines tab


3. Select the drawing from the drop down list.
4. Click **OK** to confirm.

Note

*Only the name of the 3D block is stored in the drawing. This means that if you send a vehicle to a third party, either in the form of a library or as a drawing, you will need to send them the custom block as well. If AutoTrack cannot find a named block it will use the **Auto-Create** option.*

Editing vertices (Vertices dialog) ⁽⁴¹⁸⁰⁾

1. The vertices are listed in order. You cannot edit the vertex number.

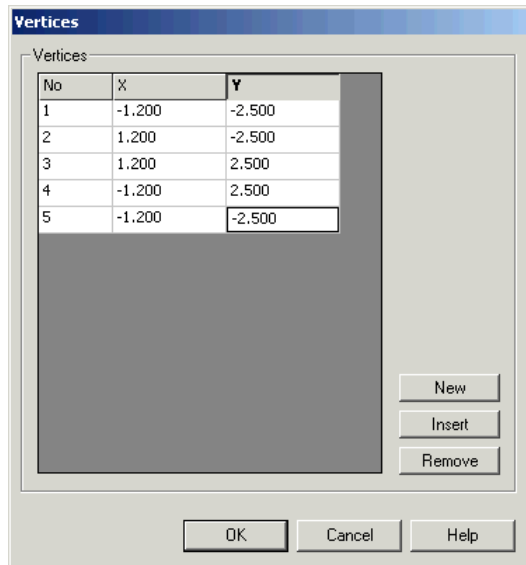


Vertices dialog

2. Click **New** to add a new vertex at the end of the list.
 3. Click **Insert** to insert a new vertex at the current position.
 4. Click **Remove** to remove a vertex from the list.
-

Editing Tractor bodies (Tractor body dialog) ⁽⁴²²⁰⁾

1. The Tractor body shape is defined with four dimensions.

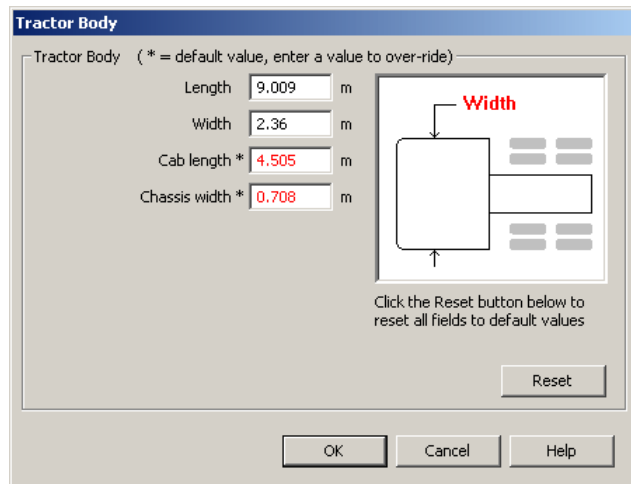


Body dialog

2. The **Length** and **Width** define the overall length and width respectively of the body.
3. The **Cab length** is the length of the cab itself and defaults to half the overall body length.
4. The **Chassis width** is the width of the chassis behind the cab and defaults to one third of the overall body width.
5. The **Front radius** is the radius of the front of the body.
6. The **Wing radius** is the radius of the two front corners of the body.

Editing Tram bodies (Tram Body dialog) ⁽⁴²⁰⁰⁾

1. The Tram Body shape is defined with eight dimensions.

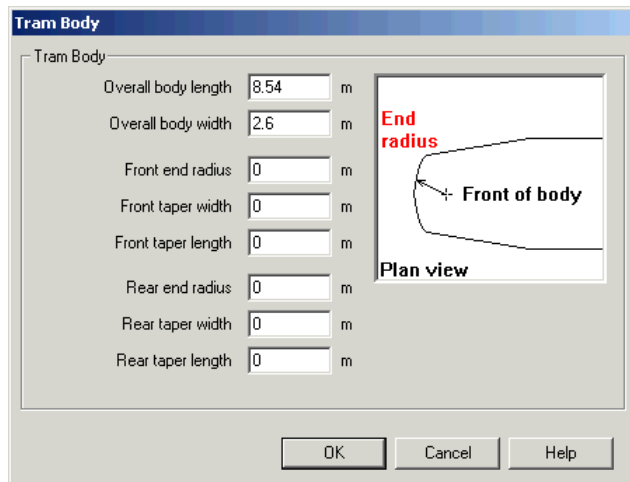


Tram Body dialog

2. The **Overall body length** and **Overall body width** define the basic rectangular body.
3. The **Front taper width** is amount by which the front of the tram body narrows *on each side* at the end. For example, if the uniform body width is 2m and the end width is 1m then the taper width is 0.5m. Likewise **Rear taper width**.
4. The **Front taper length** is the distance from the start of the body width reduction to the end of the tram body. Likewise, **Rear taper length**.
5. The **Front end radius** defines a curve of the front of the body. If the front end radius is less than half the end width (defined as the overall body width minus twice the front taper width) a semi-circle will be added. If you specify a negative front end radius the front of the tram will be concave (i.e. curved inwards instead of outwards). This is used on the trams we provide to represent the inter-car turntable at articulation points. Likewise, **Rear end radius**.

Editing Aircraft bodies (Aircraft Body dialog) ⁽⁴²¹⁰⁾

1. The Aircraft Body shape is defined with 16 dimensions. Many of these default to a reasonable value if the field is zero. Default values are shown in red with an asterisk beside the field. Obviously, some dimensions will be more critical than others but you are strongly advised to replace all of the default values with accurate data.

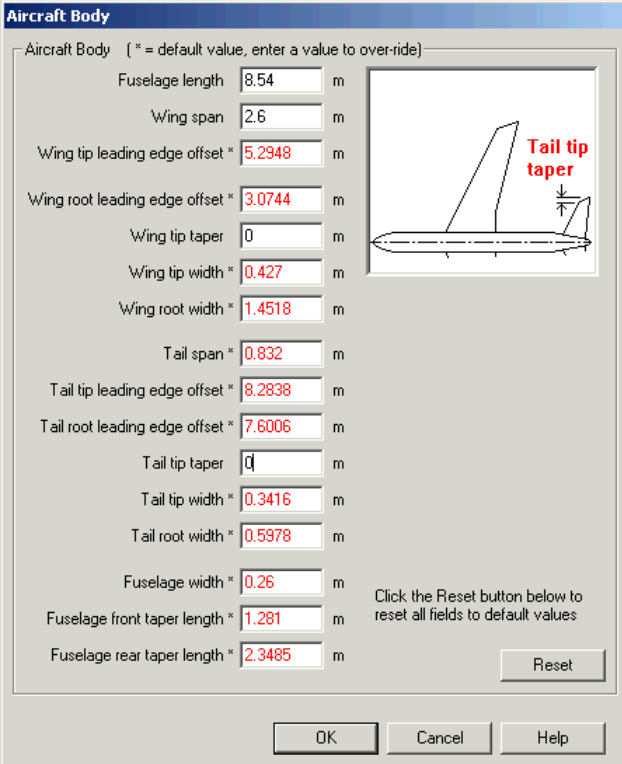

The screenshot shows the 'Aircraft Body' dialog box with the following fields and values:

Field	Value	Unit
Fuselage length	8.54	m
Wing span	2.6	m
Wing tip leading edge offset *	5.2948	m
Wing root leading edge offset *	3.0744	m
Wing tip taper	0	m
Wing tip width *	0.427	m
Wing root width *	1.4518	m
Tail span *	0.832	m
Tail tip leading edge offset *	8.2838	m
Tail root leading edge offset *	7.6006	m
Tail tip taper	0	m
Tail tip width *	0.3416	m
Tail root width *	0.5978	m
Fuselage width *	0.26	m
Fuselage front taper length *	1.281	m
Fuselage rear taper length *	2.3485	m


The dialog also includes a diagram of an aircraft with a red arrow pointing to the tail tip taper, a 'Reset' button, and 'OK', 'Cancel', and 'Help' buttons at the bottom.

Aircraft Body dialog

2. The **Fuselage length** and **Wing span** must be provided. As soon as these values are entered a default outline will appear.
3. The **Wing tip leading edge offset** is a critical value since it locates the point that is often critical in determining the swept envelope.
4. Enter as many values as you can.

Editing Jet Blast contours (Jet Blast Contour dialog) ⁽⁴²³⁰⁾

1. The jet blast contour shape is defined with up to 9 dimensions.

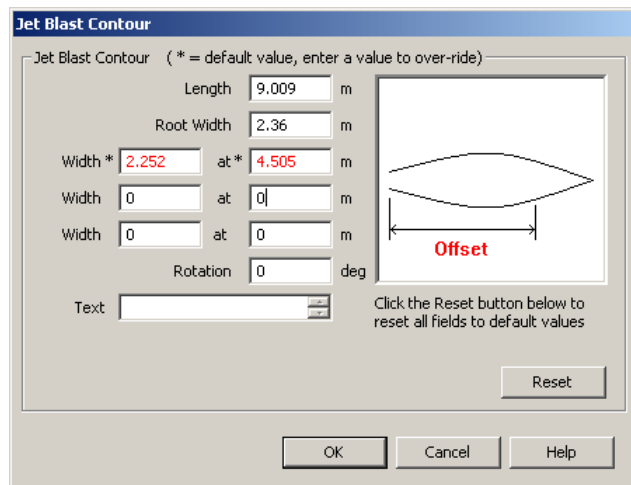


Jet Blast Contour dialog

2. The **Length** is the length of the contour from root to tip.
3. The **Root Width** is the width of the contour at the end closest to the engine.
4. At least one pair of **Width at** fields must be provided. Default values are provided for these. Up to two further pairs may optionally be added to adjust the shape of the curve.
5. The **Rotation** is the angle of the contour from the X-axis.
6. Optionally text may be assigned to the contour.

Importing outlines (Import Outlines dialog) (not MicroStation version) ⁽⁴¹⁹⁰⁾

1. You may either import a shape as a text file or as a graphic entity from the current drawing.

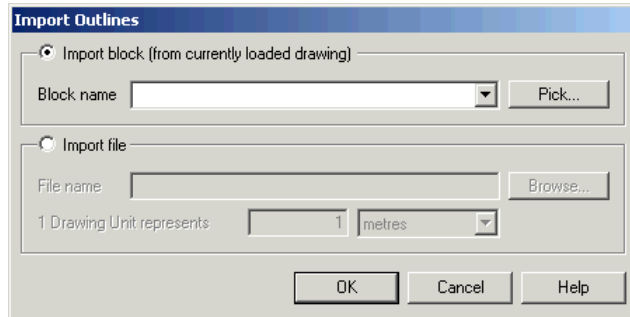

Import Outline dialog

2. Select **Import block** to import a graphic from the current drawing and then either select the block name from the drop down list or use the **Pick** button to select a polyline using the mouse.
3. If you use this feature you will need to ensure that the shape is correctly aligned with respect to the axis system and reference datum of the parent unit. Thus, assuming zero offset, your shape should be oriented facing to the left with the origin at the reference datum (usually the primary front axle or front coupling).
4. If you use this feature to define side elevations note that the reference datum is assumed to be the road surface. Thus, again assuming zero offset, your shape should be defined with the lower edge at the height of the required ground clearance.
5. Select **Import file** to import an AutoCAD drawing file (see next section), or an ASCII text file (comma or space delimited) and click the **Browse** button. When the Open File dialog appears, select the appropriate file type and browse to find your file. Click **Open** to get the data into the table.

Note

A delimited format should be simply a list of coordinate pairs either comma (CSV) or space delimited (TXT), e.g.:-

X1 , Y1

X2 , Y2

etc...

Importing AutoCAD drawing files

Note

This feature is not available in the MicroStation version.

1. The facility to import outline data from drawing file allows you to import data for both plan view and side elevation (and any other outline types) in one operation. However, to ensure that the right elements go in the right outlines you must follow a layering convention.
2. The layer naming convention is as follows:-

{Outline Type}{Shape Group}

where **{Outline Type}** is one of the following:-

```
BODYOUTLINEPLAN  
BODYDETAILPLAN  
LOADOUTLINEPLAN  
PANTOGRAPH  
JETEXHAUSTTEMPERATURE (or JETTEMP)  
JETEXHAUSTVELOCITY (or JETVEL)  
FIELDOFVISION  
NOISE  
SERVICING  
BODYOUTLINESIDE  
USERDEFINED1  
USERDEFINED2  
USERDEFINED3
```

and **{Shape Group}** is entirely at your discretion.

3. AutoTrack strips off any outline type prefixes that it recognises from the list above and uses the remainder as the name of the shape group. If there is no text remaining after the prefix has been removed AutoTrack supplies a default name for the shape group.

Example 1

All entities on layer `BODYOUTLINESIDEWINGMIRRORS` in the imported drawing will be placed in the outline type **Body outline (side)** in a shape group called **WingMirrors**.

Example 2

All entities on layer `BODYOUTLINEPLAN` in the imported drawing will be placed in the outline type **Body outline (plan)** in a default shape group called **Body**.

4. Draw a circle on layer `UxORIGINPLAN` and `UxORIGINSIDE` to specify an offset unit origin in plan and side views respectively where x represents the unit number. Thus the centre of a circle drawn on layer `U1ORIGINSIDE` is assumed to be the origin of the side view of unit 1.
-

Unit Details: Couplings (4140)

1. Click on the **Couplings** tab.

Unit Details (Dimensions: m, deg, sec, km/h)

Unit | Rear Axles | Body / Outlines | **Couplings**

Front Coupling

Front coupling type: Generic

Capability: Can Tow or be Towed

Coupling offset: 0 In front of datum Height: 0.373

Maximum horizontal angle: 90 Maximum vertical angle: 10

Assume coupling height matches rear coupling on previous unit

Rear Coupling

Rear coupling type: Generic

Capability: Can Tow or be Towed

Coupling offset: 3.814 Behind datum Height: 0.373

Maximum horizontal angle: 90 Maximum vertical angle: 10


Print OK Cancel Help

Unit Details dialog: Couplings

2. Tick **Front Coupling** and / or **Rear Coupling** to include front and rear couplings respectively.
3. The **Type** of coupling dictates what other units can be connected to this unit, i.e. the coupling types must match. The exception is that any coupling type can be linked to a generic coupling. Coupling type Active Steerable Coupling allows users to model vehicles with no conventional steered wheels but instead a articulation point whose angle is controlled by the driver, e.g. by hydraulic rams. A unit may only have one coupling of this type and it is always the primary steering.
4. The **Capability** of the coupling specifies whether it can tow other units, be towed or both.
5. The position of the coupling is defined by the **Coupling offset** which is measured relative to the datum point.
6. The **Coupling height** is used for vertical clearance analysis and defaults to a proportion of the wheel diameter. Enter an accurate figure if you have one.
7. The **Maximum horizontal angle** is the maximum possible articulation angle between the two connected units in the horizontal plane. Note that when this unit is coupled to another the articulation angle specified in the vehicle details form takes precedence if it is lower. Thus, a vehicle uses the lower of the articulation angle defined in the vehicle details and these values.
8. The **Maximum vertical angle** is the maximum possible articulation angle between the two connected units in the vertical plane and is used for vertical clearance analysis.
9. Tick **Assume coupling height matches rear coupling on previous unit** if the front coupling is able to adjust to suit the height of the coupling on the towing unit.

Units Details: Doors (Aircraft only) (4125)

1. Click on the **Doors** tab.

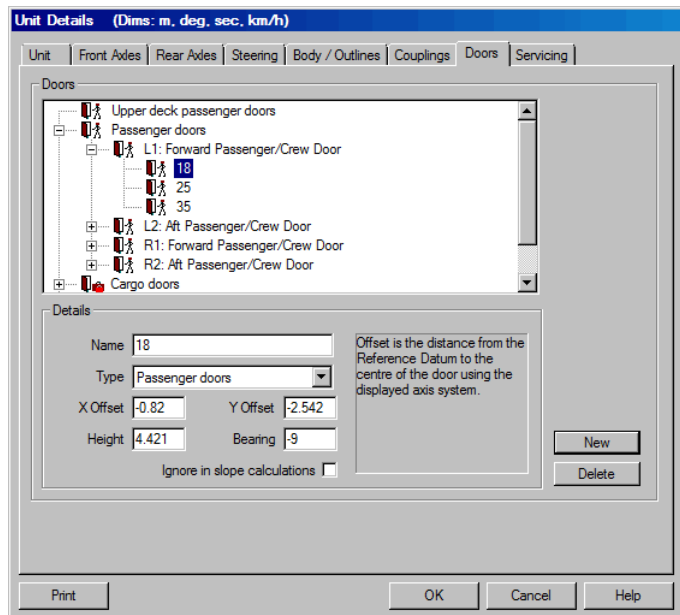

Unit Details dialog: Doors


89. The doors are grouped into Upper Deck Passenger doors, Passenger doors, Cargo doors and Service doors.
90. To add a door move the cursor over the type you wish to add and click **New**.
91. Enter a **Name** for the door. The convention for passenger doors is to number them from front to back and prefixed with an 'L' for port (left) doors and an 'R' for starboard (right) doors. So port doors would be numbered L1, L2.....Ln.
92. Enter the **X Offset** & **Y Offset** of the door relative to the Reference Datum. X ordinates increase towards the back of the aircraft and the Y ordinates are positive to the right of the centreline and negative to the left.
93. Enter a **Bearing** for the door in degrees relative to the spine of the aircraft. Zero is due East.
94. To delete a door, highlight it and click **Delete**.
95. If you add a door to the wrong type, simply select the correct **Type** from the drop down list and the door will move.

Multiple heights

96. To add a copy of a door at a different height, highlight the door and click **New**.
97. Enter the **Height** of the door. All the other details will be copied automatically from the parent.
98. Finally, to omit selected door heights from boarding bridge slope calculations simply tick **Ignore in slope calculations**.
99. To delete a door height, highlight it and click **Delete**.

Unit Details: Servicing (Aircraft only) ⁽⁴¹²⁵⁾

1. Click on the **Servicing** tab.

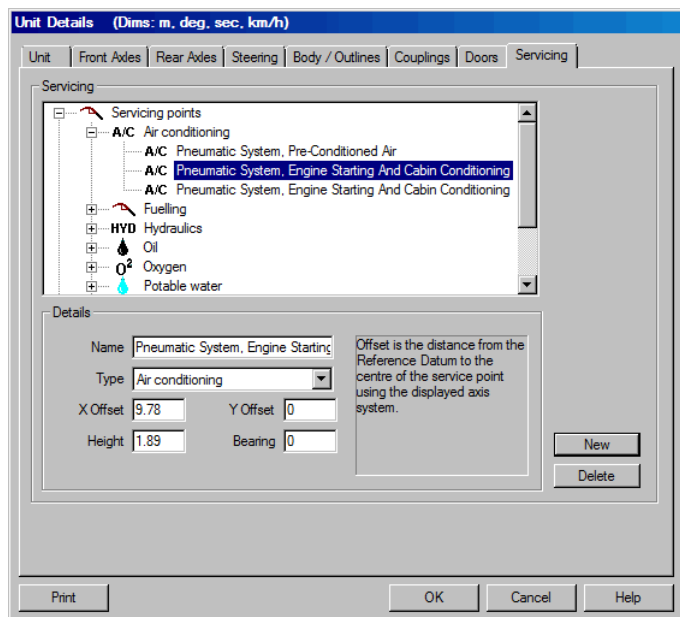

Unit Details: Servicing

2. The servicing is divided into Servicing Points and Servicing Vehicles and then further into each type of service .
3. To add a service point or vehicle highlight the type you wish to add and click **New**.
4. Enter a **Name** for the service point or vehicle.
5. Enter the **X Offset & Y Offset** of the service point or the front axle of the service vehicle relative to the Reference Datum. X ordinates increase towards the back of the aircraft and the Y ordinates are positive to the right of the centreline and negative to the left.
6. Enter a **Bearing** for the service point or vehicle in degrees relative to the spine of the aircraft. Zero is due East.
7. To delete a service point or vehicle, highlight it and click **Delete**.
8. If you add a service point or vehicle to the wrong type, simply select the correct **Type** from the drop down list and the service will move. It is not possible to move an entry from service points to vehicles or vice versa.

Multiple heights

9. To add a copy of a service point at a different height, highlight the service point and click **New**.
10. Enter the **Height** of the service point. All the other details will be copied automatically from the parent.
11. To delete a service point height, highlight it and click **Delete**.

Parking: Creating and editing parking areas

AutoTrack defines a parking area as a collection of parking rows each of which consists of individual bays. Each row is created in accordance with a standard. In most cases rows within a parking area use the same basic standard.

Placing rows of bays

A row of bays is considered to be a single or double sided row of bays with any number of bends. All the bays on each side of a double row must have the same properties but they may differ from those of the other side. Rows may be placed freehand or parallel to other rows or objects.

To place a row of bays freehand



*Place Row of Bays
button*

1. Select **Place Row of Bays** from the AutoTrack, Parking Layout menu or click the **Place Row of Bays** button on the Parking Layout toolbar.
2. If this is the first row placed in the current drawing, and you do not have a default standard set, the Parking Standard Explorer will appear for you to select the required standard (see [Viewing a standard in a parking standard file or the pool \(Parking Standard Explorer dialog\)](#)⁽⁴⁴⁰⁰⁾). If you do not have a default standard set you may then be offered the chance to set it as your default (see [Default Parking Standard dialog](#)⁽⁴⁶⁹⁰⁾). Finally, you will be asked to give the standard a unique name for easy reference in the current drawing (see [Unique parking standard names](#)).
3. The Row Properties dialog will appear non-modally, i.e. you can still access the main CAD window without closing the dialog first.
4. Set the row properties. Refer to [Editing rows \(Parking Row Properties dialog\)](#) for more details of this process.
5. Move the cursor to where you want the row baseline to start and left click to confirm.

Note

You may use snap to help you locate the precise start position.

6. Move the cursor to end of the row and left click to confirm.
7. Repeat this process, placing a point at each vertex or bend on the row.
8. When you have placed the last point right click to exit.
9. Finally you should select which side you want bays, either left, right or both. The red arrow that is displayed halfway along each row segment shows the current setting. Move the cursor to the left of the row to select bays only on the left, to the right to select bays only on the right or over the row baseline to select bays on both sides.

Note

*To disable the row side selection while the Parking Row Properties dialog is displayed untick **Skip row side selection** before placing the row.*

To place a parallel row of bays



Place Parallel Row of Bays button

1. You can place rows of bays parallel to existing rows using the Place Parallel Row tool. Rows placed in this way are automatically extended or shortened according to the angles of the end islands, which themselves reflect the angle of the access road.
2. Select **Place Parallel Row of Bays** from the AutoTrack, Parking Layout menu or click the **Place Parallel Row of Bays** button on the Parking Layout toolbar. The Parking Row Properties dialog will appear non-modally, i.e. in such a way that you can still access the CAD window without closing the dialog first.
3. If this is the first row placed in the current drawing, and you do not have a default standard set, the Parking Standard Explorer will appear for you to select the required standard (see [Viewing a standard in a parking standard file or the pool \(Parking Standard Explorer dialog\)](#) ⁽⁴⁴⁰⁰⁾). If you do not have a default standard set you may then be offered the chance to set it as your default (see [Default Parking Standard dialog](#) ⁽⁴⁶⁹⁰⁾). Finally, you will be asked to give the standard a unique name for easy reference in the current drawing (see [Unique parking standard names](#)).
4. Set the properties of the parallel row. Refer to [Editing rows \(Parking Row Properties dialog\)](#) for more details of this process.
5. Select the row or line to which the new row will be parallel. The new row will appear and move as you move the cursor.
6. The dashed line from the end of the existing row to the cursor represents the distance of the baseline of the new row from the baseline of the existing row. Move the cursor until the row is positioned as you want it and then left click to confirm.

Note

The row cannot be placed closer to the existing row or line than the minimum clearance zone allowed by the standard.

7. Finally you should select which side you want bays, either left, right or both. The red arrow that is displayed halfway

along each row segment shows the current setting. Move the cursor to the left of the row to select bays only on the left, to the right to select bays only on the right or over the row baseline to select bays on both sides.

Note

To disable the graphical row side selection tick **Skip row side selection** on the Parking Row Properties dialog before placing the row.

Tick **Always skip row side selection** if you want this feature disabled until further notice.

Unique parking standard names (Parking Standard Name dialog)

In order to make it easier to identify standards, and the parking bays that use them, we recommend that each standard used has a unique name. Therefore, when you place a new row (either freehand or parallel), that uses a standard not previously used within the current drawing, the Parking Standard Name dialog will appear offering a unique name of the form "Area n based upon {Parking Standard}". You may edit this name but it must be unique. If you cancel the Parking Standard Name dialog the default name that was initially offered will be used.

To subsequently change the name of a standard, open the **Parking Standard Explorer**, select the required standard, right click and select **Edit**. Now you can change the name. See also [To edit a parking standard](#).

Placing access roads (4430)

Access roads can be placed cutting through existing parking rows. These roads may be at any angle and may cut through as many parking rows as you wish.

To place an access road freehand



Place Access Road
button

1. Select **Place access road** from the AutoTrack, Parking Layout menu, click on the **Place access road** button on the AutoTrack Parking Layout toolbar or type `ATRAPLACEACCESSROAD` on the command line.
2. The access road is defined by the left kerb, the right kerb or the centreline. Use the mouse to pick the start of the access road followed by the end. Note that the points you pick are only used for alignment purposes and their locations are otherwise unimportant. The Access Road Properties dialog will appear.



Access Road Properties dialog

3. The width of the road may either be determined from a standard or entered explicitly.
4. Select the **Standard**, **Service type** and **Flow type** and the **Width from standard** will be displayed. If you want to override this value tick **Custom width** and enter the required width.
5. Set the **Line alignment** according to the alignment points you picked.
6. Click **OK** to confirm. AutoTrack will place the access road trimming any parking rows that your alignment crosses and calculating new end islands where necessary.

To place an access road on a line



Place Access Road on Line button

1. Select **Place access road on line** from the AutoTrack, Parking Layout menu, click on the **Place access road on line** button on the AutoTrack Parking Layout toolbar or type `ATRACREATEACCESSROADFROMLINE` on the command line.
2. Select a line representing the alignment of the left kerb, the right kerb or the centreline. The Access Road Properties dialog will appear.



Access Road Properties dialog

3. The width of the road may either be determined from a standard or entered explicitly.
4. Select the **Standard**, **Service type** and **Flow type** and the **Width from standard** will be displayed. If you want to override this value tick **Custom width** and enter the required width.
5. Set the **Line alignment** according to the alignment points you picked. Note that the access road will be drawn from start to finish of the line that you picked so if this line represents a kerb you should make sure you know which end is the start. If you get it wrong then use Undo and rerun the

command specifying the opposite kerb.

- Click **OK** to confirm. AutoTrack will place the access road trimming any parking rows that your alignment crosses and calculating new end islands where necessary.

Parking Report (4410)

The Parking Report is a dynamically updated bay count by any or all of the following:- parking standard, bay style, service type, vehicle class and / or parking zone.

To display the parking report



Parking Report button

- Select **Parking Report** from the AutoTrack, Parking Layout menu, click the **Parking Report** button on the AutoTrack Parking Layout toolbar or type `ATRAPARKINGREPORT` on the command line. The Parking Report dialog will appear.

Standard	Stall Type	Service ...	Vehicle ...	Zone	Count	%
DB32	Normal	Standard	Standard	(Unnam...	58	100.00%
Total Stalls					58	100.00%

Parking Report dialog

- Click **Close** when you no longer need it.

To customise the parking report

- Click the **Customise** button on the Parking Report dialog. The Customise Parking Report dialog will appear.

Show all columns

Show selected columns

Show parking standard

Show parking bay type

Show service type

Show vehicle class

Show parking zone

Show bay count

Show bay type percentages

Customise Parking Report dialog

- Either select **Show all columns** or select **Show selected columns** and then the specific criteria you wish to report by. The Parking Report will change when you click **OK**.

To export a parking report

1. Click the **Export** button on the Parking Report dialog. A Save As dialog will appear.
2. Select the type of delimited file you wish to save from the **Save as type** drop down list.
3. Browse to the directory in which you wish to save the file.
4. Name the file without the extension and click **Save**.
5. The saved file may be read into Excel or any other program that supports comma or tab delimited files.

Editing rows (Parking Row Properties dialog) ⁽⁴⁴⁵⁰⁾


Parking rows may comprise back to back bays or a single row of bays accessible from one or both sides. Back to back bays may differ in size, style and angle. Twin rows and single rows with single access may optionally have a kerb side access footpath. Dual access single rows of bays cannot have a footpath. If you need to have varying bay styles within a row then you should set the row style to the predominant style on each side and use the bay editing tool to change the style of those that differ.

To edit a parking row

1. Select **Edit Parking Row** from the AutoTrack, Parking Layout menu or click the **Edit Parking Row** button on the AutoTrack Parking Layout toolbar. The Parking Row Properties dialog will appear.



Edit Parking Row button

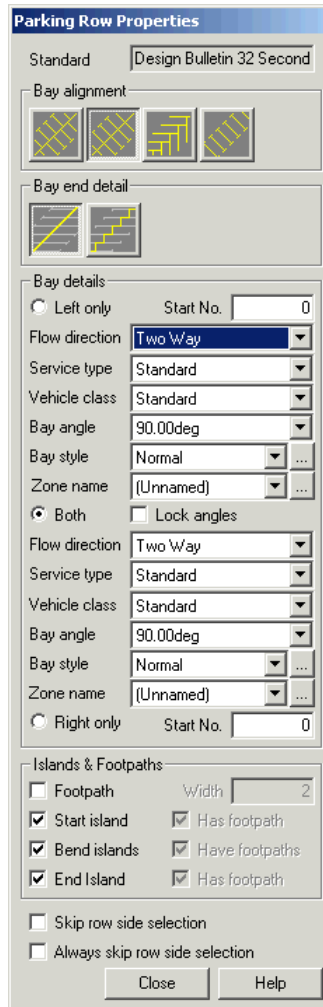

Parking Row Properties dialog

2. The bay alignment and end detail settings define the type of parking and in some cases restrict the bays to single or double row. If a double row is selected each side may have different properties.
3. The vehicle **Flow direction** in conjunction with the **Bay angle** determines how close the row can be placed to other rows or obstacles.
4. The **Vehicle class** and **Vehicle type** determine the basic size of the bay. However, the basic dimensions are often modified by the **Bay style**, so for example a disabled bay is generally wider than a standard bay.
5. The **Zone name** merely provides a means to divide a parking area into areas or zones. The Parking report can be set to report by zone name.
6. If you want the same bay angles on each side of a double row tick **Lock angles**.
7. Set the **Start No.** for each side to force a bay numbering sequence.
8. Each row may have islands and / or footpaths. Tick **Footpath** and enter a **Width** to specify a footpath running along the baseline, i.e. between the two sides on a double row or 'behind' a single row.

9. Tick **Start island** or **End island** to add islands at the start or end of the row. If you want a footpath to continue through the island tick **Has footpath**.
10. Tick **Bend islands** to add islands at every bend in the row. If you want a footpath to continue over the bend islands tick **Have footpaths**.

Editing individual bays (Parking Bay Properties dialog) (4440)

Individual parking bays within a row may vary from the default bay type for the row. However, every bay must be of a defined type for reporting purposes. Thus, for example, if you wanted one bay within a row to have a wheel stop you would first have to define that bay type and then set the bay to that type.

To edit a parking bay



Edit Parking Bay button

1. Select **Edit Parking Bay** from the AutoTrack, Parking Layout menu or click the **Edit Parking Bay** button on the AutoTrack Parking Layout toolbar. Select the row you want to edit. Grips will appear in each bay and the Parking Bay Properties dialog will appear.

Parking Bay Properties dialog

2. As you move the cursor over each bay the properties dialog updates to show the bay type. The other fields merely show what features comprise the selected bay type. All values will be displayed as read-only, i.e. non-editable.
3. As soon as you select a bay the **Bay type** drop down list box should become active, i.e. editable. If you select a different bay type the other fields will change to reflect the settings for the new type. The underlying bay type defined for the row is shown as (Default).

Note

If you want to change the bay type for most or all of a row then you should consider editing the row properties.

Editing islands (Parking Island Properties dialog) ⁽⁴⁴⁶⁰⁾

Parking islands are placed at the ends of each row of bays and at each change of direction of the row. End islands and bend islands may have different default properties and thereafter any island may be edited such that it becomes unique.

To edit a parking island



Edit Parking Island button

1. Select **Edit Parking Island** from the AutoTrack, Parking Tools menu or click the **Edit Parking Island** button on the AutoTrack Parking Layout toolbar. Select the row you want to edit. Grips will appear in each island and the Parking Island Properties dialog will appear.

Parking Island Properties dialog

2. As you move the cursor over each island the properties dialog updates to show the island properties. All values will be displayed as read-only, i.e. non-editable.
3. As soon as you select an island the properties will become active, i.e. editable.
4. Tick **Footpath** if you want a row footpath to continue through the selected island. The same footpath option is shown on the row properties dialog and each updates when the other is changed.

Note

If you tick this box but the row has no footpath defined, no footpath will be added to the island.

5. If you want the island to differ from the standard tick **Custom**

non-standard properties and change appropriate values.

6. The angles of ends of the start and end islands may be adjusted. This is often useful if an access road passes the end of the row. You can also edit the left side of the island separately from the right side if necessary. If the end of the island is angled uniformly across the width tick **Lock left and right access road angles**, and enter just the **Left access road angle**. If the left and right angles vary untick this box and additionally enter the **Right access road angle**.

Editing parking row layout

To move a row of bays



*Move Parking Row
button*

1. Select Move Parking Row from the AutoTrack, Parking Tools menu or click the **Move Parking Row** button on the AutoTrack Parking Tools toolbar.
2. Select the row you wish to move.
3. Select the base point for the move.
4. Select the new position for the base point. The row will be redrawn in the new location.

To rotate a row of bays



*Rotate Parking Row
button*

1. Select Rotate Parking Row from the AutoTrack, Parking Tools menu or click the **Rotate Parking Row** button on the AutoTrack Parking Tools toolbar.
2. Select the row you wish to rotate.
3. Select the base point about which the row will be rotated.
4. Select the rotation angle. The row will be redrawn in the new location.

To copy a row of bays



*Copy Parking Row
button*

1. Select Copy Parking Row from the AutoTrack, Parking Tools menu or click the **Copy Parking Row** button on the AutoTrack Parking Tools toolbar.
2. Select the row you wish to copy. A copy of the row will appear.
3. Place the new row as you wish.

To explode a row of bays



*Explode Parking Row
button*

After a row of parking bays has been exploded it cannot be edited using AutoTrack parking tools. We therefore recommend that you **do not** explode your parking data without first making a backup copy.

1. Select Explode Parking Row from the AutoTrack, Parking Tools menu or click the **Explode Parking Row** button on the AutoTrack Parking Tools toolbar.
 2. Select the row you wish to explode. The row will be exploded into simple drawing entities.
-



Delete Parking Row
button

To delete a row of bays

1. Select Delete Parking Row from the AutoTrack, Parking Tools menu or click the **Delete Parking Row** button on the AutoTrack Parking Tools toolbar.
2. Select the row you wish to delete. The row will be deleted without further warning.



Join Parking Row button

To join two rows of parking bays

1. Select Join Parking Rows from the AutoTrack, Parking Tools menu or click the **Join Parking Rows** button on the AutoTrack Parking Tools toolbar.
2. Select the two rows you wish to join. The two rows will be extended or shortened, without changing the alignment of the rows, until they meet.



Extend Parking Row
button

To extend a row of parking bays

1. Select Extend Parking Row from the AutoTrack, Parking Tools menu or click the **Extend Parking Row** button on the AutoTrack Parking Tools toolbar.
2. Select the row you wish to extend. An arrow will appear at the end of the row closest to the cursor. As you move the cursor closer to the other end it will move to that end.
3. Move the cursor until the arrow is at the end you wish to extend and left click.
4. Now as you move the cursor the row will lengthen and shorten until you left click again. Notice that you can use this command to shorten a row beyond a bend.



Add Parking Row Vertex
button

To add a vertex to a row of parking bays

1. Select Add Parking Row Vertex from the AutoTrack, Parking Tools menu or click the **Add Parking Row Vertex** button on the AutoTrack Parking Tools toolbar.
2. Select the row you wish to extend. An arrow will appear at the end of the row closest to the cursor. As you move the cursor closer to the other end it will move to that end.
3. Move the cursor until the arrow is at the end you wish to extend and left click.
4. Now as you move the cursor a new segment will be created from the end you selected.



Adjust Parking Row
button

To adjust a parking row

This is really a multi-purpose command that is available in AutoCAD and SavoyCAD by simply selecting a row.

1. Select Adjust Parking Row from the AutoTrack, Parking Tools menu or click the **Adjust Parking Row** button on the AutoTrack Parking Tools toolbar.
2. Select the row that you wish to adjust.

3. Small squares or “grips” will appear at various locations along the row. Each may be used to adjust a different aspect of the row.
 4. Select the single green grip to move the entire row.
 5. Select the grip furthest from the end of the row to extend the row with a new segment. If you select the next grip in you can extend the row in line. Finally, select the grip exactly at the end of the row to move or extend the end of the row in any direction.
 6. Select the outermost grips on the sides of the end islands to adjust the angle of that side of the end island. Use the next grip in to adjust both sides together.
 7. At one end of the row there are grips beside each of the first bays. Use these to change the bay angle. Note that you can only set an angle defined in the selected standard.
 8. Select the grip at each bend vertex to adjust the position of the bend.
 9. Select the grips on the direction arrows to specify a different flow direction. To set the direction one way select the grip, move the cursor in the direction you want the flow and left click to confirm. To set two-way traffic, select the arrow, move the cursor alongside it and left click to confirm.
-

Parking: Creating and editing standards

AutoTrack parking standards define the geometric rules for the layout of parking rows and bays.

AutoTrack parking standards

All parking layouts are created in accordance with defined rules or standards.

A number of standards are provided with the program and these may be used as the basis for your own company standards. The standards are grouped by nationality so, for example, the UK parking standards are held within a file called `UK_xxx.ATP`, where `xxx` is the most recent version of AutoTrack that can read it, e.g. `UK_890.ATP`. Additional parking standards are available for different markets and can even be created by users themselves. However, to ensure that the details do not change arbitrarily, there are restrictions on who can edit them. These restrictions require that users identify themselves if they wish to access a standard to make changes. No password is needed simply to use a standard.

Access to parking standards

Access to parking standards is restricted using a username / password system such that before a standard file can be opened for editing they must enter his or her name and password. Only if the user is authorised will they be allowed to open the standard file. There are three levels of access:-

None

You may list the standards but cannot access the details. This is the status of any standards that have not been purchased.

Read Only

You may use the standard file but may not change them or add new standards. All standard files are initially opened Read Only.

Full Access

You may use, copy, edit, or create new standards and add or edit the users.

All Savoy parking standards are Read Only.

Refer to [Viewing a standard in a parking standard file or the pool \(Parking Standard Explorer dialog\)](#) and [Creating a new parking standard file \(Parking Standard File dialog\)](#) for details of how to open standards files and maintain users.

Access to parking standards in the Pool

Unlike vehicles, parking standards, once in the Pool, may be edited even if they have been used.

Note


If you make a copy of a standard in the same standard file it's name is prefixed with the words 'Copy of' to distinguish it from the original standard.

Viewing a standard in a parking standard file or the pool (Parking Standard Explorer dialog) ⁽⁴⁴⁰⁰⁾



Parking Standards button

1. Select **Parking Standard Explorer** from the AutoTrack, Parking Layout menu or click the **Parking Standard Explorer** button on the AutoTrack Parking Layout toolbar. The Parking Standard Explorer will appear. For details of the standards see [Viewing or editing parking standards](#).

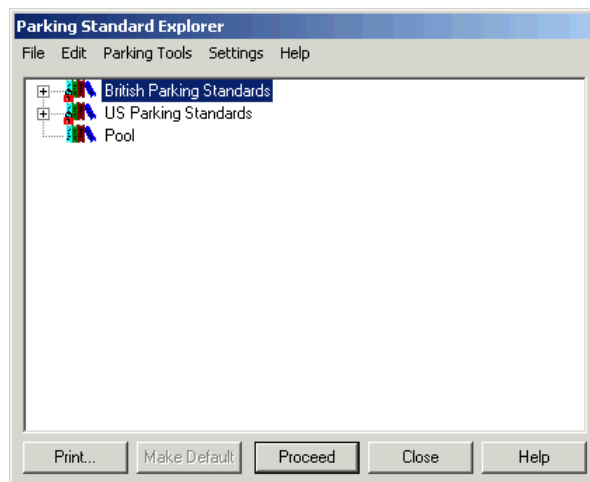

Parking Standard Explorer dialog

2. If the standard that you require is not loaded then select **Open Parking Standard** from the **File** menu in the Parking Standards Explorer, browse to find the standards file and click **Open**. A new Parking Standards File icon will appear in the Parking Standards Explorer with the name of the standard file beside it.
 3. Click on the + symbol to expand the standard file or the pool.
 4. Standards may be listed under different groups. If they are then click the + symbol to expand the required group.
 5. Highlight the required standard (indicated by a check list icon) and select **Edit** (or **View** if the standards file is locked) from the **Edit** menu. The Parking Standard dialog will appear.
 6. If you wish to edit a Standard Group then highlight it and select **Edit** (or **View** if the standards file is locked) from the
-

Edit menu. The Parking Standard Group dialog will appear.

7. To create a new parking standard, highlight the parent file or group and select **New Parking Standard** from the File menu.
8. To print a standard highlight it and select **Print** from the File menu or click the **Print** button. For more details refer to ??.

Creating a new parking standard file (Parking Standard File dialog)



*Parking Standards
button*

1. Select **Parking Standards** from the AutoTrack, Parking Layout menu or click the **Parking Standards** button on the AutoTrack Parking Layout toolbar. The Parking Standard Explorer dialog will appear.
2. Select **New Parking Standard File** from the File menu in the Parking Standard Explorer. The Parking Standard File dialog will appear.

Parking Standard File dialog

3. Click the appropriate tab to edit or view the settings.
4. Edit the data as required and click **OK** to confirm when you are satisfied. Click **Cancel** to abort all changes and close the dialog.

Parking Standard File: Parking Standard File


1. Click the Parking Standard File tab.
2. Give the standard file a meaningful Name.
3. The Version and Notes fields are provided for additional information and may be used at your discretion.
4. The **File Name** is read only and will be filled in when the file is saved.

Parking Standard File: Users

Note

You may only add new users or edit existing users in standard files to which you have full access rights.

1. Click on the **Users** tab.

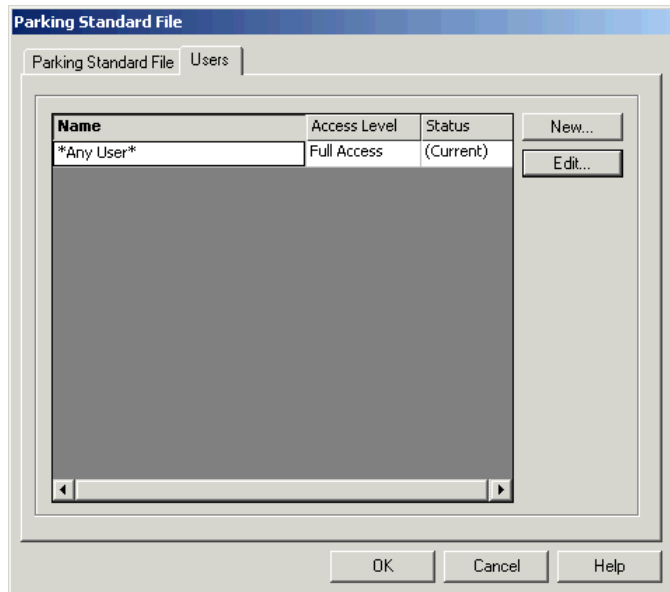


Parking Standard File: Users

2. On a new standard file all users have full access as indicated by the default entry in the Users table. At least one user in the table must have full access before you may downgrade the default Any User rights.

To add a new user

1. On the Parking Standard File dialog click **New**. The New User dialog will appear.

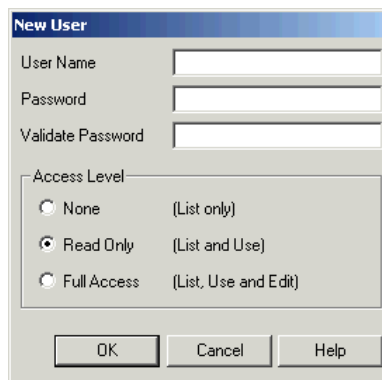

New User dialog

2. Enter the new **User Name**. Depending upon how you want to restrict access, this may be a specific person or a department name.
3. Enter the **Password** and then repeat it in the **Validate Password** field. This checks that you typed the password correctly. If you do not enter a password the named user will be able to unlock the standard file without typing a password.
4. Finally set the **Access Level**. We recommend that you add

any users that you want to have full access and then downgrade the default Any User to Read Only.


5. Even tighter restrictions can be placed by downgrading Any User to No Access and adding Read Only users as required. However, this may prove problematic in practice.

To edit an existing user (Maintain User dialog)

Note

You may only add new users or edit existing users in libraries to which you have full access rights.

1. On the Parking Standard File dialog highlight the user that you wish to edit and click **Edit**. The Maintain User dialog will appear.

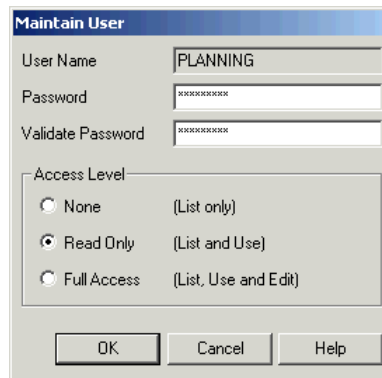

Maintain User dialog

2. Change the **Password** and / or set a new **Access Level** and click **OK** to confirm. If you do not enter a password the named user will be able to unlock the standard file without typing a password.
3. Click **Cancel** to abort any changes.

Note

You cannot delete users; instead you must set their access level to **None**.

Saving a parking standard file



Parking Standards button


1. Select **Parking Standards** from the AutoTrack, Parking Layout menu or click the **Parking Standards** button on the AutoTrack Parking Layout toolbar. The Parking Standard Explorer will appear.
2. Highlight the standard that you want to save, right click and select **Save Parking Standard File As** from the drop down menu that appears. The Save Parking Standard File As dialog will appear.
3. Browse to the required storage directory, enter the filename and click **Save**.
4. If the standard file already has a name then you can use **Save Parking Standard File**.

Sharing a parking standard (Share Data dialog)



Vehicle Library button

1. Select **Parking Standards** from the AutoTrack, Parking Layout menu or click the **Parking Standards** button on the AutoTrack Parking Layout toolbar. The Parking Standard Explorer will appear.
2. Highlight the standard that you want to share, right click and select **Share Data** from the drop down menu that appears.
3. The Share Data dialog will appear.

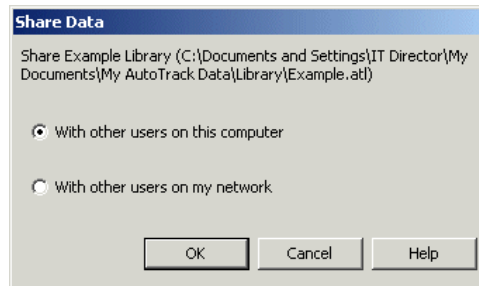

Share Data dialog

4. Select who you want to share the standard with and click **OK**.

If you select **With other users on this computer** a copy will be placed in the public data directory on your computer.

If you select **With other users on my network** a copy will be placed in the shared data directory (if one is defined).

Copying standards and units using drag and drop


Parking standards are automatically copied to the Pool when they are used but you may wish to edit a standard before using it or indeed build your own parking standards.

To copy a parking standard to the pool, select it, drag it over the Pool symbol and drop it. If you wish to copy it to another standard you will need full access rights in the destination parking standard file. The cursor will change to a no entry symbol to indicate areas where you may not drop the standard.

You can also make copies of parking standards within parking standard files in the same way; in this case the name of the standard is prefixed with the words 'Copy of ', to distinguish it from the original.

Unlocking a parking standard file (Unlock Parking Standard File dialog) ⁽³⁵⁵⁵⁾

1. Highlight the parking standard file that you want to unlock, right click and select **Unlock Parking Standard File** from the drop down menu that appears. If a password has been set for the standard file, the Unlock Parking Standard File dialog will appear. Otherwise, the standard file will be unlocked and you should refer to step 3.
-

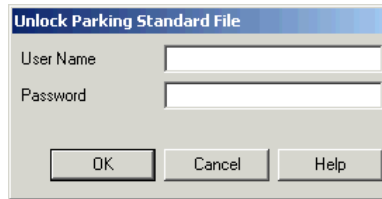

Unlock Parking Standard File dialog

2. Enter your **User Name** and **Password** and click **OK**.
3. You will be granted whatever rights you have within the standard file. Thus, if you have full access rights within the current standard file then you will be able to change values in the unlocked standards; if, on the other hand you only have read only rights then you will only be able to use and copy the standards.

Creating a new group




Parking Standards button

1. Select **Parking Standards** from the AutoTrack, Parking Layout menu or click the **Parking Standards** button on the AutoTrack toolbar. The Parking Standard Explorer will appear.
2. Highlight the parking standard file that you want to add a group to.
3. Right click and select **New, Parking Standard Group** from the menu. The [Parking Standard Group dialog](#) will appear.
4. Edit the details and click **OK** to confirm.

Parking Standard Group dialog (4670)

1. The Parking Standard Group dialog lists the parking standard group details.

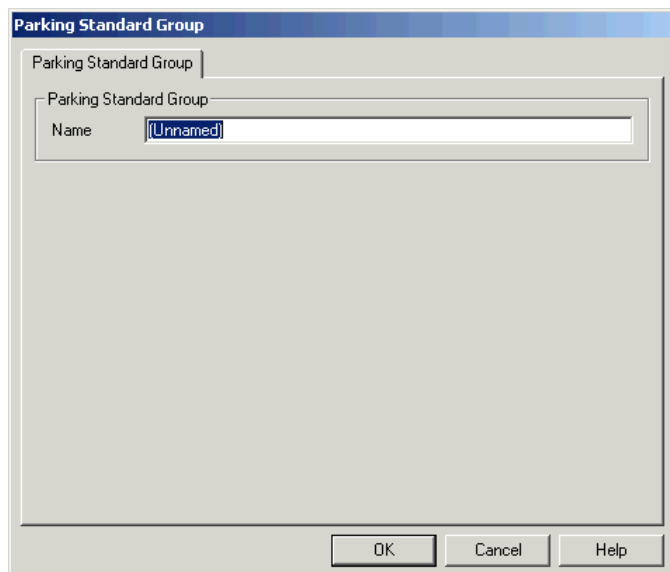

Parking Standard Group dialog

2. Edit the **Name** and click **OK** to confirm.


Selecting a Parking Standard

To set a default parking standard

1. Highlight the parking standard that you want to set as your default and click the **Make Default** button.
2. The next time you place a parking bay or row this standard will be used.

Default Parking Standard dialog ⁽⁴⁶⁹⁰⁾

1. AutoTrack allows you to define a default parking standard, i.e. a standard that will be used every time you place a parking bay unless you actively select an alternative. This can be very useful if you regularly use the same standard. If you select a standard to use and you do not have a default standard set the Default Parking Standard dialog will appear.

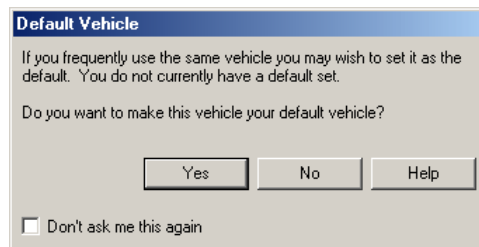

Default Parking Standard dialog

2. If you select **Yes** then this standard will be selected automatically next time you place a parking bay. If you select **No** then you will be asked this again the next time you select a standard in similar circumstances.
 3. If you don't want to be asked again then tick **Don't ask me this again**.
-

Viewing or editing parking standards

Parking standards supplied by Savoy can only be edited once they have been selected for a project. Then, any changes you make to the standard will affect not only new bays but also any bays that have already been placed. Once you have used a standard all bays placed will use that standard.


You may edit parking standards that you create. However, in order to prevent accidental changes, they will be locked when you close AutoTrack and you will need to unlock them to make any changes.

To edit a parking standard



*Parking Standards
button*

1. Select **Parking Standards** from the AutoTrack, Parking Layout menu or click the **Parking Standards** button on the AutoTrack Parking Layout toolbar. The Parking Standard Explorer dialog will appear.

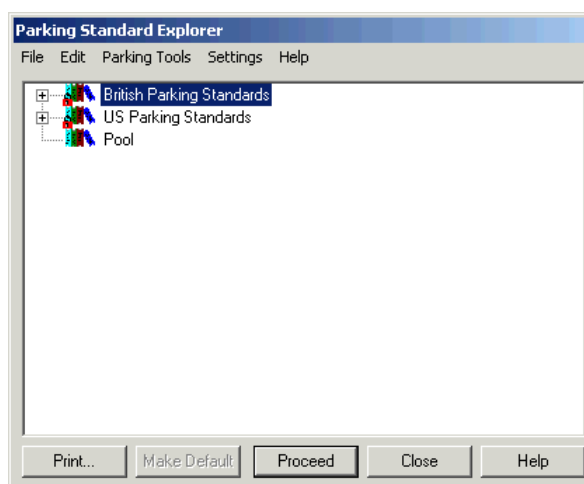


Parking Standard Explorer dialog

2. If the standard file that you require is not loaded then select **Open Parking Standard** from the **File** menu in the Parking Standard Explorer, browse to find the standard file and click **Open**. A new parking standard icon will appear in the Parking Standard Explorer with the name of the standard file beside it.
3. Click on the + symbol to expand the standard file or the pool.
4. Click the + symbol adjacent to the required group if necessary.
5. Highlight the required standard (indicated by a check sheet symbol dependant) and select **Edit** (or **View** if the Standard is locked) from the Edit menu. The Parking Standard dialog will appear.
6. If you wish to edit a parking standard group then highlight it and select **Edit** (or **View** if the standard file is locked) from the **Edit** menu in the Parking Standard Explorer. The Parking Standard Group dialog will appear.
7. To create a new parking standard highlight the parent file or group, right click and and select **New Parking Standard** from the menu that appears.

Parking Standard: General (4500)

1. Click on the **General** tab.

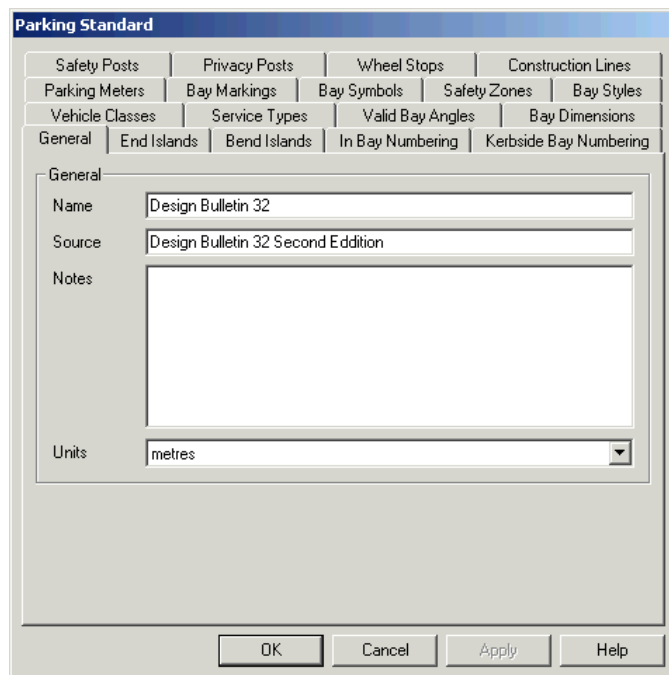

The screenshot shows a software dialog box titled "Parking Standard". At the top, there is a grid of tabs: Safety Posts, Privacy Posts, Wheel Stops, Construction Lines, Parking Meters, Bay Markings, Bay Symbols, Safety Zones, Bay Styles, Vehicle Classes, Service Types, Valid Bay Angles, Bay Dimensions, General, End Islands, Bend Islands, In Bay Numbering, and Kerbside Bay Numbering. The "General" tab is selected. Below the tabs, the "General" section contains the following fields:

- Name:** Design Bulletin 32
- Source:** Design Bulletin 32 Second Edition
- Notes:** A large empty text area.
- Units:** A dropdown menu currently set to "metres".

At the bottom of the dialog box, there are four buttons: OK, Cancel, Apply, and Help.

Parking Standard: General tab

100. The **Name**, **Source** and **Notes** allow you to specify the standard. Even though these fields are not compulsory we nevertheless recommend that you complete them since they are useful reminders when you come to reuse the standard at a later date.
 101. Set the preferred **Units** using the drop down list box.
-

Parking Standard: End Islands (4480)

1. End islands are placed at the ends of a row of parking bays.
102. Click on the **End Islands** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'End Islands' tab selected. The dialog has a title bar 'Parking Standard' and a tabbed interface. The 'End Islands' tab is active, showing various configuration options. The 'General' tab is also visible. The 'End Islands' section includes the following fields and options:

- Offset to adjacent bay: 0.1
- Bayside corner radius: 0.025
- Outer corner radius: 0.6
- Minimum internal width: 0.5
- Minimum width at kerb: 2
- Hatch
- Angle: 45
- Spacing: 0.5
- Line style: (dropdown menu)
- Allow width to increase
- Draw island
- Cross hatch
- Angle: -45

Buttons at the bottom: OK, Cancel, Apply, Help.

Parking Standard: End Islands tab

103. Set the **Offset to adjacent bay** to the distance from the start of the end island to the side marking of the last bay.
104. Set the **Bayside corner radius** to the radius of the corners of the island that meet the bay.
105. Set the **Outer corner radius** to the radius of the corners of the island that are adjacent to the access road.
106. Set the **Minimum internal width** to the minimum width of the island at any point.
107. Tick **Allow width to increase** to allow the island stretch sideways.
108. Set the **Minimum width at kerb** to the minimum width of the island where it meets the kerb, i.e. on the baseline.
109. Tick **Draw island** to show the island. Note that even if this option is not ticked the island is still calculated and the space allocated.
110. Tick **Hatch** and / or **Cross hatch** to display a hatch pattern within the island. You may adjust the hatch **Spacing** and **Angle**.
111. Click the **Attributes** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: Bend Islands (4470)

1. Bend islands are placed at changes in direction of a row of parking bays.
112. Click on the **Bend Islands** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'Bend Islands' tab selected. The dialog has a title bar 'Parking Standard' and a menu bar with the following items: Safety Posts, Privacy Posts, Wheel Stops, Construction Lines, Parking Meters, Bay Markings, Bay Symbols, Safety Zones, Bay Styles, Vehicle Classes, Service Types, Valid Bay Angles, Bay Dimensions, General, End Islands, Bend Islands, In Bay Numbering, and Kerbside Bay Numbering. The 'Bend Islands' tab is active, showing the following settings:

- Offset to adjacent bays: 0.1
- Bayside corner radius: 0.025
- Outer corner radius: 0.6
- Minimum internal width: 0.1
- Minimum width at kerb: 0.5
- Line style: (dropdown menu)
- Hatch
- Angle: 45
- Spacing: 0.5
- Allow width to increase
- Draw island
- Cross hatch
- Angle: -45

At the bottom of the dialog are buttons for OK, Cancel, Apply, and Help.

Parking Standard: Bend Islands tab

113. Set the **Offset to adjacent bays** to the distance from the start of the island to the side marking of the adjacent bays.
114. Set the **Bayside corner radius** to the radius of the corners of the island that meet the bay.
115. Set the **Outer corner radius** to the radius of the corners of the island that are adjacent to the access road.
116. The **Minimum internal width** is the minimum width of the island at any point.
117. Tick **Allow width to increase** to allow the island stretch sideways.
118. Set the **Minimum width at kerb** to the minimum width of the island where it meets the kerb, i.e. on the baseline.
119. Tick **Draw island** to show the island. Note that even if this option is not ticked the island is still calculated and the space allocated.
120. Tick **Hatch** and / or **Cross hatch** to display a hatch pattern within the island. You may adjust the hatch **Spacing** and **Angle**.
121. Click the **Attributes** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: In Bay Numbering ⁽⁴⁵¹⁰⁾

1. In bay numbering is when bay numbers are painted within the area of the parking bay.
122. Click on the **In Bay Numbering** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'In Bay Numbering' tab selected. The dialog has a title bar 'Parking Standard' and a tabbed interface. The tabs include: Safety Posts, Privacy Posts, Wheel Stops, Construction Lines, Parking Meters, Bay Markings, Bay Symbols, Safety Zones, Bay Styles, Vehicle Classes, Service Types, Valid Bay Angles, Bay Dimensions, General, End Islands, Bend Islands, In Bay Numbering (selected), and Kerbside Bay Numbering. The 'In Bay Numbering' tab contains the following controls:

- In Bay Numbering** (Section Header)
- Width of number**: Input field with value 0.
- Height of number**: Input field with value 0.6.
- Line style**: A button with a red line icon.
- Number first bay**
- Number last bay**
- Number intermediate bays**
- Offset from end of bay**: Input field with value 0.3.
- or **Place in centre**
- Place number at kerb end of bay**
- Rotation**: Input field with value 0. (zero is towards the front of the bay)

At the bottom of the dialog are buttons for **OK**, **Cancel**, **Apply**, and **Help**.

Parking Standard: In Bay Numbering tab

123. Set the **Width of number** to the preferred width of each character.
124. Set the **Height of number** to the preferred height of each character.
125. Tick **Roman numerals** to display the number in roman numeral format.
126. Tick **Number first bay**, **Number last bay** and / or **Number intermediate bays** to specify which bays should be numbered in the bay.
127. Set the **Offset from end of bay** to the distance from the end of the bay to the centre of the number.
128. Tick **Place in centre** to place the number centrally in the bay.
129. Tick **Place number at kerb end of bay** to offset the number from the kerb end of the bay instead of from the entrance end.
130. Set the **Rotation** to the required orientation for the number. If set to zero the number will face the driver entering the bay.
131. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: Kerbside Bay Numbering ⁽⁴⁵²⁰⁾

1. Kerbside bay numbering is when bay numbers are painted either beside or at the end of the parking bays.
132. Click on the **Kerbside Bay Numbering** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'Kerbside Bay Numbering' tab selected. The dialog has a grid of tabs at the top: Safety Posts, Privacy Posts, Wheel Stops, Construction Lines, Parking Meters, Bay Markings, Bay Symbols, Safety Zones, Bay Styles, Vehicle Classes, Service Types, Valid Bay Angles, Bay Dimensions, General, End Islands, Bend Islands, In Bay Numbering, and Kerbside Bay Numbering. The 'Kerbside Bay Numbering' tab is active and contains the following settings:

- Kerbside Bay Numbering**
- Width of number: Line style:
- Height of number: Roman numerals
- Number first bay Number last bay Number intermediate bays
- Offset from end of bay: Offset from kerb
- Offset from side of bay: Place in centre
- Rotation: (zero is facing away from an incoming driver)

At the bottom of the dialog are buttons for OK, Cancel, Apply, and Help.

Parking Standard: Kerbside Numbering tab

133. Set the **Width of number** to the preferred width of each character.
134. Set the **Height of number** to the preferred height of each character.
135. Tick **Roman numerals** to display the number in roman numeral format.
136. Tick **Number first bay**, **Number last bay** and / or **Number intermediate bays** to specify which bays should be numbered in the bay.
137. Set the **Offset from end of bay** to the distance from the end of the bay to the centre of the number.
138. Tick **Offset from kerb** to measure the offset from the kerb rather than the end of the bay.
139. Set the **Offset from side of bay** to the distance from the drivers side line to the centre of the number.
140. Set the **Rotation** to the required orientation for the number. If set to zero the number will face the driver entering the bay.
141. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: Vehicle Classes ⁽⁴⁶⁴⁰⁾

1. Vehicles that might use the parking area are split into groups known as vehicle classes. Typically each vehicle class has different parking requirements.
142. Click on the **Vehicle Classes** tab.

The screenshot shows the 'Parking Standard' application window with the 'Vehicle Classes' tab active. The window contains a grid of tabs at the top, including 'Safety Posts', 'Privacy Posts', 'Wheel Stops', 'Construction Lines', 'Parking Meters', 'Bay Markings', 'Bay Symbols', 'Safety Zones', 'Bay Styles', 'General', 'End Islands', 'Bend Islands', 'In Bay Numbering', 'Kerbside Bay Numbering', 'Vehicle Classes', 'Service Types', 'Valid Bay Angles', and 'Bay Dimensions'. The 'Vehicle Classes' tab is selected. Below the tabs is a list box containing the entry 'Standard'. To the right of the list box are 'New' and 'Delete' buttons. Below the list box are three input fields: 'Class name' with the value 'Standard', 'Default bay length' with the value '4.8', and 'Default bay width' with the value '2.4'. At the bottom of the window are 'OK', 'Cancel', 'Apply', and 'Help' buttons.

Parking Standard: Vehicle Classes tab

143. The defined vehicle classes are listed in the large window. As you move the cursor between the entries the edit boxes beneath show the values associated with the selected vehicle class.
144. Set the **Vehicle class** to the name of the class.
145. Set the **Default bay length** to the length of bay required for this class of vehicle.
146. Set the **Default bay width** to the width of bay required for this class of vehicle.
147. Click **New** to add a new vehicle class. Highlight a vehicle class and click **Duplicate** to create a copy of an existing class or click **Delete** to delete the selected class.

Parking Standard: Service Types ⁽⁴⁵⁷⁰⁾

1. Each parking area has particular access requirements which for ease of reference are called service types.
148. Click on the **Service Types** tab.


The screenshot shows the 'Parking Standard' software window with the 'Service Types' tab active. The window title is 'Parking Standard'. The 'Service Types' tab is selected, showing a list of service types with 'Standard' selected. Below the list are input fields for 'Service type name', 'One way aisle width', 'Two way aisle width', 'Footpath width', 'One way access road width', and 'Two way access road width'. Buttons for 'New', 'Delete', 'Duplicate', 'OK', 'Cancel', 'Apply', and 'Help' are visible.

Parking Standard: Service Types tab

149. The defined service types are listed in the large window. As you move the cursor between the entries the edit boxes beneath show the values associated with the selected service type. Note that the aisle widths listed here are the base values used to create the bay dimensions table.
150. Set the **One way aisle width** to the width of aisle required for one way vehicle circulation past the entrances to the bays.
151. Set the **Two way aisle width** to the width of aisle required for two way vehicle circulation past the entrances to the bays.
152. Set the **One way access road width** to the minimum width of road required for one way circulation in the access roads feeding the row aisles.
153. Set the **Two way access road width** to the minimum width of road required for two way circulation in the access roads feeding the row aisles.
154. Set the **Footpath width** to the preferred width of footpath between back to back parking bays.
155. Click **New** to add a new service type. Highlight a service type and click **Duplicate** to create a copy of an existing type or click **Delete** to delete the selected type.

Parking Standard: Valid Bay Angles ⁽⁴⁶³⁰⁾

1. In order to create an optimum parking layout it is normally desirable to limit the angles at which vehicles may park.
156. Click on the **Valid Bay Angles** tab.

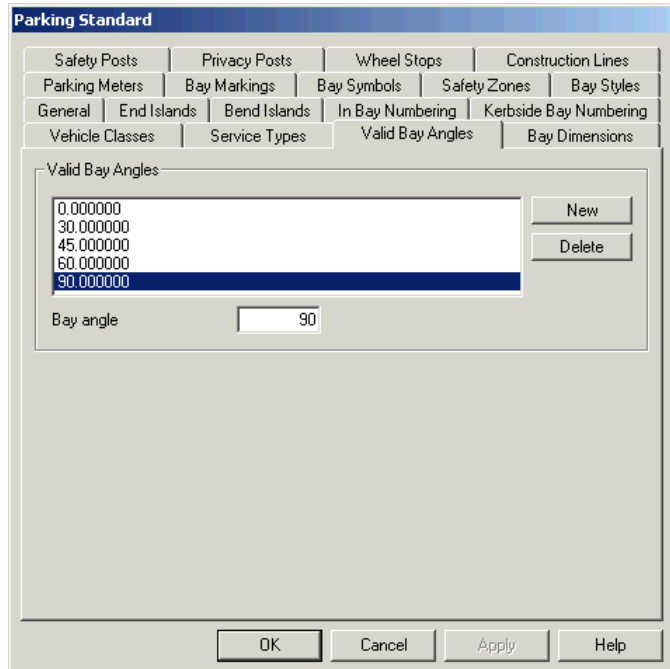

Parking Standard: Valid Bay Angles tab

157. Valid angles are listed in the large window.
158. To edit an angle highlight it in the list and edit the value in the **Bay angle** edit box beneath.
159. Click **New** to add a new angle.
160. Highlight an angle and click **Delete** to remove an angle from the list.

Parking Standard: Bay Dimensions (4600)

1. The principal bay dimensions are simply the length and width. Default values for these vary according to the vehicle class, service type, and bay angle.
161. Click on the **Bay Dimensions** tab.

Service	Standard	Standard	Standard	Standard	Standard
Vehicle	Standard	Standard	Standard	Standard	Standard
Angle	90.00Deg	60.00Deg	45.00Deg	30.00Deg	0.00Deg
Width	2.40	2.40	2.40	2.40	6.00
Length	4.80	4.85	4.81	4.84	2.40
Depth	4.80	5.40	5.10	4.50	2.40
1 Way	6.00	4.20	3.60	3.60	5.40
2 Way	6.00	4.20	3.60	3.60	5.40

Parking Standard: Bay Dimensions tab

162. The window shows the bay dimensions for every combination of service type, vehicle class and bay angle. The default **Length** and **Width** are taken from the values for the vehicle class. The **Depth** (the distance from the baseline to the entrance line) is calculated from simple geometry based upon the bay angle. Any or all values may be over-written with preferred values.
163. The default **1 Way** and **2 Way** aisle widths are taken from the values for the service type. They may be over-written with preferred values.
164. All values taken from the standard are shown in **blue**, calculated values are shown in **red** and explicitly entered values are shown in black.
165. Current parking standards often require that the default values are over-ridden. For example, the aisle width required for angled bays is normally less than that required for 90 degree bays. To change a value simply click in the field and enter the new value.

Parking Standard: Parking Meters (4530)

1. This dialog defines the characteristics of parking meters (if provided).
166. Click on the **Parking Meters** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'Parking Meters' tab selected. The dialog has a title bar 'Parking Standard' and a tabbed interface. The 'Parking Meters' tab is active, showing the following settings:

- Post diameter: 0.05
- Meter width: 0.05
- Meter length: 0.1
- Offset from end of bay: 0.5
- Offset from side of bay: 0
- Line style: A green line with a white border.
- Offset from kerb: (unchecked)
- Place in centre: (unchecked)
- Shared meters: (unchecked)
- Meter head spacing: 0.075


Buttons at the bottom: OK, Cancel, Apply, Help.

Parking Standard: Parking Meters

167. The **Post diameter**, **Meter width** and **Meter length** allow you to define a shape representing the meter.
168. The **Offset from end of bay** is the distance of the meter from the kerb end of the bay.
169. Tick **Offset from kerb** to offset the meter from the kerb rather than the end of the bay. Note that this only affects angled bays.
170. The **Offset from side of bay** is the distance of the meter from the drivers side line.
171. Tick **Place in centre** to display the parking meter in the centre of the bay.
172. Tick **Shared meters serving adjacent bays** to place double headed meters.
173. Set **Meter head spacing** to show the twin meter heads.
174. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: Bay Markings (4580)

1. The bay markings include the line types and colours, the hatch format and the T-marking size.
175. Click on the **Bay Markings** tab.

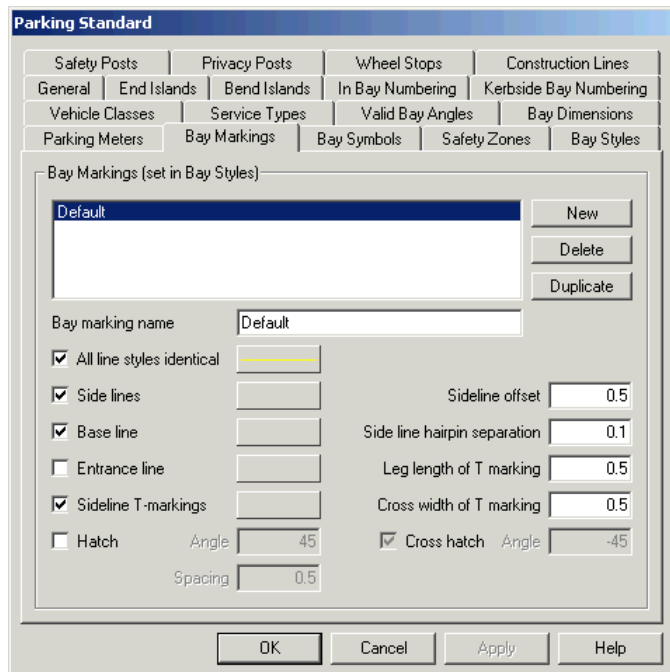

Parking Standard: Bay Marking tab


176. The defined bay markings are listed in the large window. As you move the cursor between the entries the edit boxes beneath show the values associated with the selected bay marking.
177. Tick **All line styles identical** if all bay markings use the same colour, line type and line weight. This will disable all the other attribute buttons. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
178. Tick **Side lines** if you want a line full length down each side of each bay. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
179. The **Sideline offset** is the distance from the baseline to the start of each of the side lines.
180. Some places the side lines are drawn double joint at the baseline and called hairpins. The **Sideline hairpin separation** is the spacing of the two side lines.
181. Tick **Base line** if you want a line drawn along the kerb end of each bay. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
182. Tick **Entrance line** if you want a line drawn across the entrance of each bay. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
183. Tick **Sideline T markings** if you want T marking at the intersection of the sides and entrance of each bay. Note that

this may be in addition to, or instead of, side and / or entrance lines. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

184. The **Leg length of T marking** is the length of the vertical of the T marking.
185. The **Cross width of T marking** is the width of the horizontal of the T marking.
186. Tick **Hatch** and / or **Cross hatch** to display a hatch pattern. You may adjust the hatch **Spacing** and **Angle**.
187. Click **New** to add a new bay marking. Highlight a bay marking and click **Duplicate** to create a copy of an existing bay marking or click **Delete** to delete the selected marking.

Parking Standard: Bay Symbols (4620)

1. This dialog allows you to define bay symbols and includes type (e.g. disabled markings), size, colour and location. It also caters for additional text.
188. Click on the **Bay Symbols** tab.

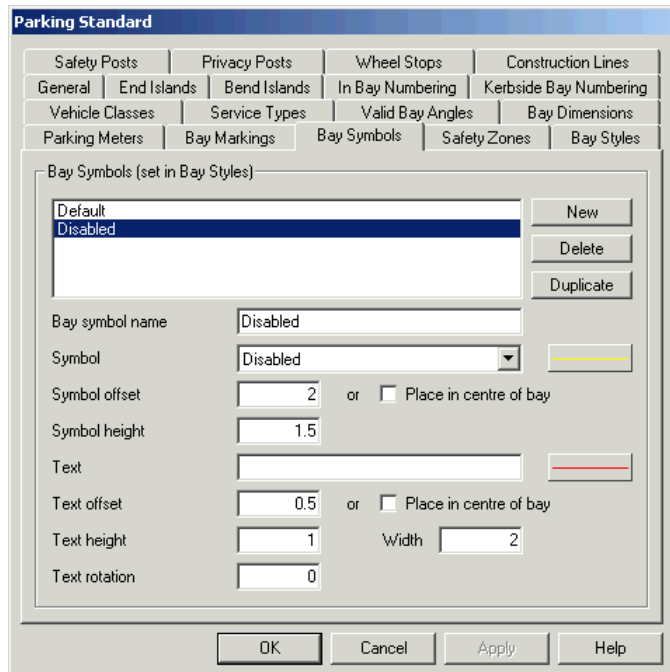

Parking Standard: Bay Symbols tab


189. The defined bay symbols are listed in the large window. As you move the cursor between the entries the edit boxes beneath show the values associated with the selected bay symbol.
 190. The **Symbol** is the icon that will be drawn in the bay. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
 191. The **Symbol Offset** is the distance from the entrance line to the centre of the symbol.
 192. Tick **Place in centre of bay** to place the symbol halfway between the entrance line and the baseline.
 193. The **Symbol height** is the overall height of the selected symbol. The symbol proportions are constrained so there is no need to enter a width.
 194. You may place a text instead of, or as well as, a symbol. The **Text** is the text that will be displayed in the bay. Click the adjacent button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
 195. The **Text Offset** is the distance from the entrance line to the centre of the text.
 196. Tick **Place in centre of bay** to place the text halfway between the entrance line and the baseline.
 197. The **Text height** is the text character height.
-

198. The **Width** is the overall width of the text string, not the individual character width.
199. The **Text Rotation** is the orientation of the text. If set to zero the text will face the driver entering the bay.

Parking Standard: Safety Zones (4560)

This dialog allows you to define extra space around parking bays for special uses, e.g. for disabled drivers.

1. Click on the **Safety Zones** tab.

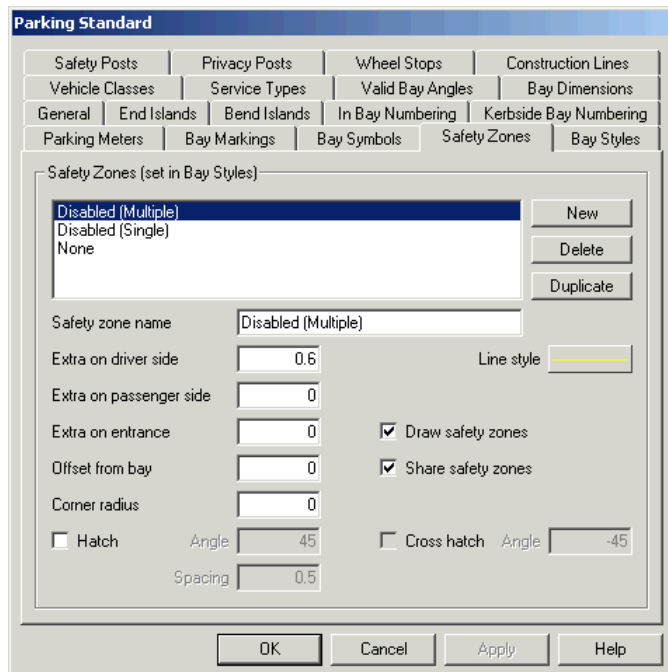

Parking Standard: Safety Zones tab

200. The defined safety zones are listed in the large window. As you move the cursor between the entries the edit boxes beneath show the values associated with the selected safety zone.
201. The **Extra on driver side** is the extra width required on the driver's side of the bay.
202. The **Extra on passenger side** is the extra width required on the passenger's side of the bay.
203. The **Extra on entrance** is the extra length required at the entrance of the bay.
204. The **Offset from bay** is the distance from the bay side line to the start of the safety zone markings.
205. The **Corner radius** is the radius to be applied to the corners of the safety zone.
206. Tick **Draw safety zones** to show the safety zone markings. Note that this option merely switches off the display of the markings, the safety zone area is still calculated and taken into account when determining bay layout.
207. Tick **Share safety zones** to allow the extra area allocated for adjacent safety zones to overlap.
208. Tick **Hatch** and / or **Cross hatch** to display a hatch pattern within the safety zone. You may adjust the hatch **Spacing** and **Angle**.

209. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
210. Click **New** to add a new safety zone. Highlight a safety zone and click **Duplicate** to create a copy of an existing safety zone or click **Delete** to delete the selected zone.

Parking Standard: Bay Styles ⁽⁴⁶¹⁰⁾

This dialog lets you define bay styles by combining bay markings, safety zones, bay symbols, etc.

1. Click on the **Bay Styles** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'Bay Styles' tab selected. The dialog has a title bar and a menu bar with the following tabs: Safety Posts, Privacy Posts, Wheel Stops, Construction Lines, General, End Islands, Bend Islands, In Bay Numbering, Kerbside Bay Numbering, Vehicle Classes, Service Types, Valid Bay Angles, Bay Dimensions, Parking Meters, Bay Markings, Bay Symbols, Safety Zones, and Bay Styles. The 'Bay Styles' tab is active, showing a list of bay styles with 'Normal' selected. Below the list are fields for 'Bay style name', 'Bay marking', 'Safety zone', and 'Bay symbol', each with a 'More' button. There are also checkboxes for 'Custom bay width', 'Allow width to increase', 'Number bay', 'Number kerb', 'Ignore this bay style for reporting', 'Wheel stop', 'Safety post', 'Privacy post', and 'Parking meter'. At the bottom are 'OK', 'Cancel', 'Apply', and 'Help' buttons.

Parking Standard: Bay Styles tab


211. The defined bay styles are listed in the large window. As you move the cursor between the entries the edit boxes beneath show the values associated with the selected bay style.
212. The **Bay marking** is the bay marking to be used with the selected bay style. To add a marking to the list click the **More** button (...) adjacent to the drop down list.
213. The **Safety zone** is the safety zone to be used with the selected bay style. To add a safety zone to the list click the **More** button (...) adjacent to the drop down list.
214. The **Bay symbol** is the bay symbol to be used with the selected bay style. To add a bay symbol to the list click the **More** button (...) adjacent to the drop down list.
215. Tick **Custom bay width** to set a non-standard width and set **Width**.
216. Tick **Allow width to increase** to ensure that a proportion of any extra space available is added to the width of bays of this type.
217. Tick **Number bay** and / or **Number kerb** to add bay numbering in the bay or on the kerbside. The numbering format is defined within the standard. Note that, depending upon the numbering definition in the standard, not all bays will necessarily be numbered.

218. Tick **Wheel stop**, **Privacy post**, **Safety post** and / or **Parking meter** to add these features to the selected bay type.

Parking Standard: Safety Posts (4550)

Safety posts are generally placed at the ends of bays and prevent vehicles from accidentally hitting pedestrians.

1. Click on the **Safety Posts** tab.

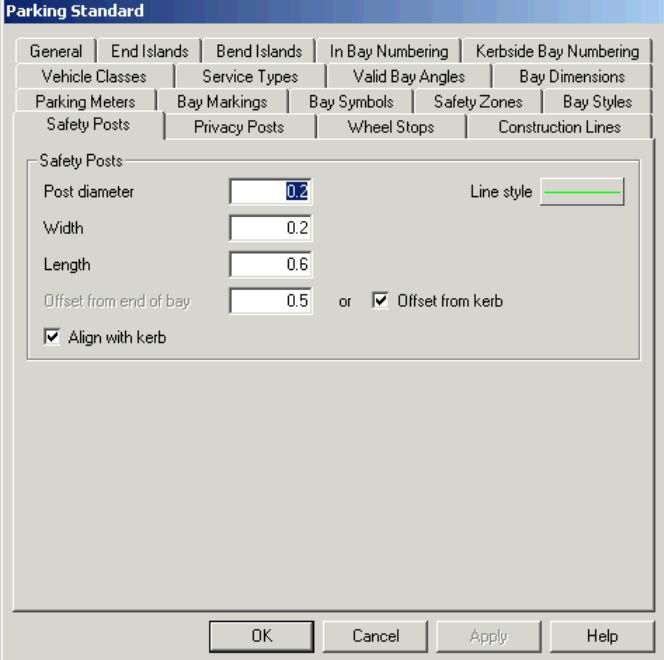

The screenshot shows the 'Parking Standard' dialog box with the 'Safety Posts' tab selected. The dialog has a title bar 'Parking Standard' and a tabbed interface. The 'Safety Posts' tab is active, showing the following settings:

- Post diameter: 0.2
- Width: 0.2
- Length: 0.6
- Offset from end of bay: 0.5
- Offset from kerb: (checked)
- Align with kerb: (checked)
- Line style: A green line with a white border.

Buttons at the bottom: OK, Cancel, Apply, Help.


Parking Standard: Safety Posts tab

2. The **Post diameter** is the diameter of the safety post.
3. The **Width** is the width of the safety barrier, i.e. the distance measured in the direction of the bay width.
4. The **Length** is the length of the safety barrier, i.e. the distance measured in the direction of the bay length.
5. The **Offset** is the distance from the centre of the safety post to the end of the bay.
6. Tick **Offset from kerb** to measure the offset from the kerb instead of the end of the bay. Note this will only affect angled bays.
7. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: Privacy Posts (4540)

Privacy posts are placed at the entrances to personal parking bays to prevent unauthorized use.

1. Click on the **Privacy Posts** tab.

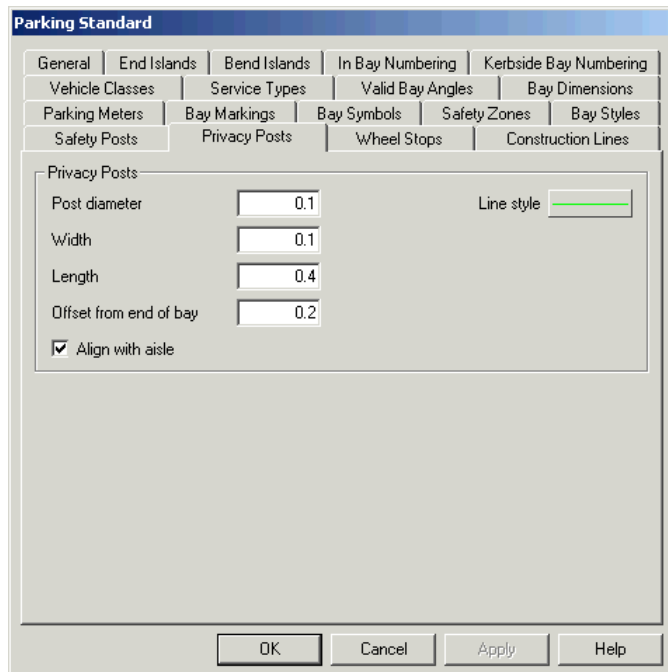

The screenshot shows the 'Parking Standard' dialog box with the 'Privacy Posts' tab selected. The dialog has a title bar 'Parking Standard' and a tabbed interface. The 'Privacy Posts' tab is active, showing the following settings:

Property	Value	Property	Value
Post diameter	0.1	Line style	[Green line icon]
Width	0.1		
Length	0.4		
Offset from end of bay	0.2		

There is also a checked checkbox for 'Align with aisle'.

At the bottom of the dialog are buttons for 'OK', 'Cancel', 'Apply', and 'Help'.

Parking Standard: Privacy Posts tab

219. The **Post diameter** is the diameter of the privacy post.
220. The **Width** is the width of a privacy barrier, i.e. the distance measured in the direction of the bay width.
221. The **Length** is the length of a privacy barrier, i.e. the distance measured in the direction of the bay length.
222. The **Offset** is the distance from the centre of the privacy post to the end of the bay.
223. Tick **Offset from kerb** to measure the offset from the kerb instead of the end of the bay. Note this will only affect angled bays.
224. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Parking Standard: Wheel Stops ⁽⁴⁶⁵⁰⁾

Wheel stops are placed a short distance back from the end of the bay and prevent vehicles from overhanging the end.

1. Click on the **Wheel Stops** tab.

The screenshot shows the 'Parking Standard' dialog box with the 'Wheel Stops' tab selected. The dialog has a title bar 'Parking Standard' and a tabbed interface. The 'Wheel Stops' tab is active, showing a sub-dialog titled 'Wheel Stops (always perpendicular to bay sides)'. This sub-dialog contains several input fields and checkboxes:

- Width:** Input field with value 0.2. To its right is a 'Line style' button with a blue line icon.
- Length:** Input field with value 0.5. To its right is a checkbox labeled 'Stretch to fill bay width' which is currently unchecked.
- Top width indent:** Input field with value 0.05. To its right is a checked checkbox labeled 'Shared wheel stops'.
- Top length indent:** Input field with value 0.05.
- Offset from end of bay:** Input field with value 0.76.
- Offset from side of bay:** Input field with value 0.1. To its right is a checkbox labeled 'Place in centre of bay' which is currently unchecked.

At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.


Parking Standard: Wheel Stops tab

2. The **Width** of the wheel stop is measured in the direction of the length of the bay.
 3. The **Length** of the wheel stop is measured in the direction of the width of the bay.
 4. Tick **Stretch to fill bay width** to place wheel stops across the entire width of the bay.
 5. Tick **Shared wheel stops** to place wheel stops on the dividing line between two adjacent bays. If you tick this option then you will no longer be able to place the wheel stop using **Offset from side of bay** or **Place in centre of bay**.
 6. The **Top width indent** is the taper in the width of the wheel stop, e.g. if the base width is 0.3m and the width at the top is 0.2m then the top width indent is 0.05m.
 7. The **Top length indent** is the taper in the length of the wheel stop, e.g. if the base length is 1.5m and the length at the top is 1.4m then the top length indent is 0.05m.
 8. The **Offset from end of bay** is the distance from the centre of the wheel stop to the end of the bay.
 9. The **Offset from side of bay** is the distance from the centre of the wheel stop to the bay side line on the driver's side.
 10. Tick **Place in centre of bay** to position the wheel stop in the middle of the bay width.
 11. Click the **Line Style** button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
-

Parking Standard: Construction Lines (4490)

Construction lines are generally used only in setting out the parking area and then switched off.


1. Click on the **Construction Lines** tab.

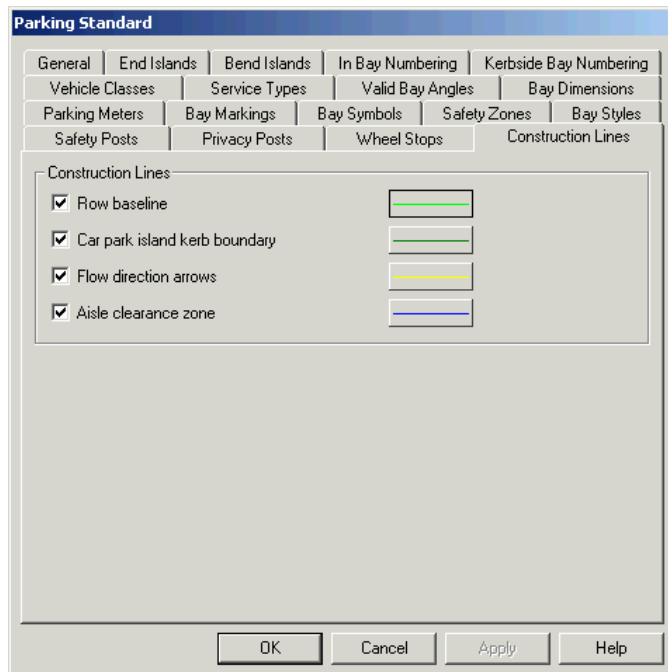

Parking Standard: Construction Lines tab

225. Tick **Row baseline** to show the baseline construction line. Click the Attributes button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
226. Tick **Car park island kerb boundary** to show guidelines at the outer face of the start and island. Click the Attributes button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
227. Tick **Flow direction arrows** to show arrows in the aisles indicating the direction of vehicle movement. Click the Attributes button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).
228. Tick **Aisle clearance zone** to show a line representing the minimum distance from the bay entrance lines to the nearest obstruction. Click the Attributes button to modify the **Colour**, **Line type** and **Line weight** in the [Attributes dialog](#).

Attributes dialog

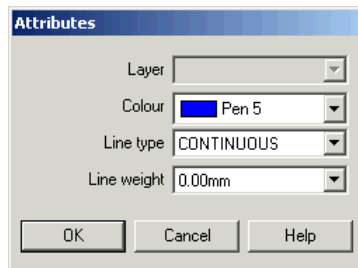

Attributes dialog

1. Select the **Colour** from the drop down list of 254 pens. To set a custom colour select {custom} and click on the colour swatch.
2. Select the **Line type** from the drop down list. The line types listed are those currently available in your CAD system. If you wish to add a line type you should cancel this dialog and create the line type in your host CAD system.
3. Select the **Line weight** from the drop down list. Note that line weights are real world dimensions so if you select a line weight of 2mm the object will be drawn with 2mm thick lines.

Review

AutoTrack Review includes the tools you need to view, edit, assess and validate your AutoTrack projects.

If you only have the Review product then you will only be able to view data and not change it.

Properties



Properties button

The Properties command lets you look at the details of any AutoTrack entity in your drawing.

1. Select **Properties** from the AutoTrack drop down menu or click the **Properties** button on the AutoTrack Review toolbar. The Properties dialog appropriate to the entity you are editing will appear.
2. If you are editing a path then refer to [Viewing the properties of a path \(Path Properties dialog\)](#) for more details.
3. If you are editing a parking row then refer to [Editing rows \(Parking Row Properties dialog\)](#)⁽⁴⁴⁵⁰⁾ for more details.


Drawing Explorer ⁽³³⁰⁰⁾

Sometimes you need to view or edit more than one path. For example, to apply the same colours and report settings to all paths. The Drawing Explorer allows you to edit all paths in all drawings.



Drawing Explorer button

1. Select **Drawing Explorer** from the AutoTrack drop down menu or click the **Drawing Explorer** button on the AutoTrack toolbar. The Drawing Explorer dialog will appear.

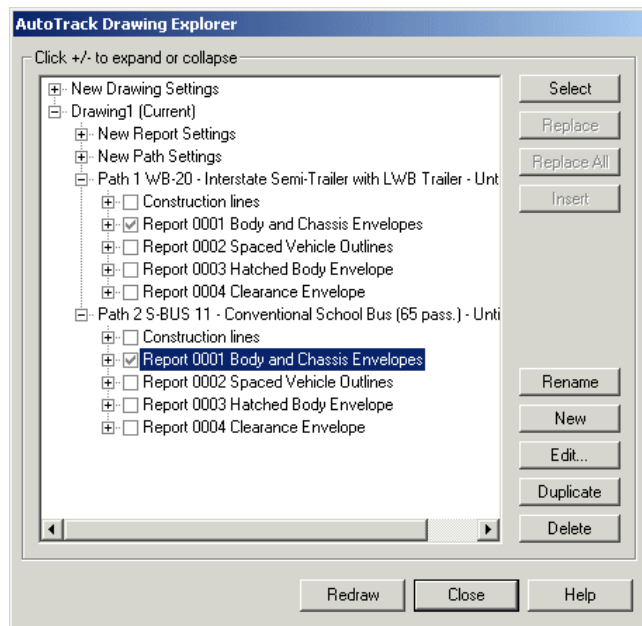

Drawing Explorer dialog

2. At the top of the window are the New Drawing Settings. This expands to display New Path Report Settings and New Path Settings. These are the default swept path settings **for new drawings**; i.e. the values stored in the settings files. The New Path Report Settings are used when you create a new report and the New Path Settings are used when you create a new path.
3. Underneath the New Drawing Settings are listed all the drawings that are currently open. Each one expands to display New Path Report Settings, New Path Settings and a list of AutoTrack entities. The New Path Report Settings and New Path Settings are the defaults used when you create a new report or path **in the current drawing**.
4. To edit an entity, currently either a Path or a Parking Row, highlight it and click **View** or **Edit**. The properties dialog appropriate to the entity type will appear. Refer to [Viewing the properties of a path \(Path Properties dialog\)](#) or [Editing rows \(Parking Row Properties dialog\)](#)⁽⁴⁴⁵⁰⁾ for more details.
5. Each Path expands to display the Construction Lines and a list of Reports used by that path. This is the same list that you see when you edit a single path by clicking **Properties, Reports**. To view a report or construction line element highlight it and click **View** or **Edit**.

The following editing functionality is not available in the Review only product:-

6. To edit a report or construction line element highlight it and click **Edit** exactly as you do when you edit a single path using **Properties**.
7. To add a copy of a report, highlight it and click **Duplicate**. You can then use **Edit** to modify it.
8. To rename a report highlight the report and click **Rename**.
9. To add a new report based upon the new report settings for that drawing, highlight the report and click **New**.

10. To remove a report from the list, highlight it report and click **Delete**.
11. To apply the properties of a report element, a set of reports or a path to another like element, highlight the element you want to copy and click **Select**. Now go to the destination report element and click **Replace**. You can apply the properties to as many elements as you wish by highlighting them and clicking **Replace** or click **Replace All** to apply the properties to all the elements.
12. If the destination element is more senior in the hierarchy (a drawing contains paths and paths contain reports) then the properties of all child elements in the destination of the same type as the source element will be replaced with the source. This is best illustrated by a few examples:-

Example 1

If you select a report and replace a different report, the properties of the replaced report will simply be changed to match the selected report, i.e. the sub-reports that are selected, the colours, etc.

Example 2

If you select a report and replace a path, all reports in the replaced path will be removed and replaced by the selected report.

Example 3

If you select a report and replace a drawing, all the reports associated with all the paths in the drawing (including the New Path Settings and the New Report Settings) will be removed and replaced by the selected report.

Example 4

If you select a path and replace a drawing, all the properties of all the paths in the drawing (including the New Path Settings) will be replaced by those of the selected path.

13. If you want to add a report to another path or drawing, highlight the report you want to copy and click **Select**. Now highlight the destination path or drawing and click **Insert**. A copy of the selected report will be inserted into the path or into all paths in the drawing (including the New Path Settings and New Report Settings). As with **Replace** you can continue to click **Insert** to add the report to other paths or drawings.
14. As you will have realised by now, the extra power of the Drawing Explorer comes from the ability to replace or add reports to any or all paths within a drawing. In fact this ability extends beyond the current drawing and you can also replace reports or properties in any of the drawings listed in the explorer.
15. Most of the changes will only appear after you close the Drawing Explorer. If you want to see the effect of a change without closing the explorer click **Redraw**. However, you should note that every redraw adds data to the drawing to allow Undo to work so don't get carried away using Redraw for every little change or you drawing may become bloated.

Simple animations (Basic Animation dialog) ⁽⁸⁰⁰⁰⁾




Animate button

1. Select the path or paths that you wish to animate. If you do not select any paths, AutoTrack will use the previous animation selections. If you have not run an animation this session and have not selected a path, all paths will automatically be selected.

Note

If you are running the Review only product you may only play back existing animations.

2. Select **Animate** from the AutoTrack drop down menu or click the **Animate** button on the AutoTrack toolbar. The Animation dialog will appear.

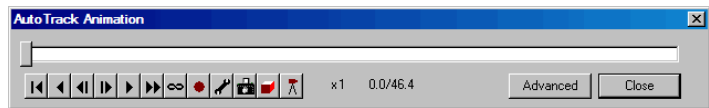

Animation dialog

3. The slider represents the complete animation and is effectively a time line with the start of the animation at the left hand side and the end of the animation at the right. You will notice how similar the buttons are to those on the Windows Media Player. Just to the left of the Advanced button you will see two figures separated by a backslash. These represent the current animation time and the total animation time.
4. Click the **Play** or **Play Backwards** button to start the animation. The button will stay depressed until either the animation ends or you click it again to stop the animation.
5. You can speed up the animation by clicking the **Fast Forward** button. Each click doubles the speed up to 32x and then it reverts to 0.25x, 0.5x and then normal speed. The current fast forward speed is displayed to the right of the **Record** button.
6. Alternatively, click the **Single Step** or **Single Step Back** buttons to move forwards and backwards along the animation one frame at a time, subject to the current fast forward speed, e.g. if fast forward is set to 4x it moves four times normal speed.

Note

During animation the vehicle is drawn at stored intervals only. Since the "step" referred to is time based (one tenth of a second at normal speed) and not distance based, the vehicle may not move at every step.

7. Finally, you can animate the vehicle using the using the slider bar.
8. Use the **Reset** button to restart the animation.
9. To play the animation indefinitely, depress the **Loop** button.
10. Click the **Record** button to record your animation. Refer to [Recording an AVI file ^{\(8050\)}](#).
11. Click the **Animation Settings** button (AutoCAD & MicroStation only) to change the 3D animation settings.



Play button



Play backwards button



Fast Forward button



Record button



Single Step button



Single Step Back button



Reset button



Loop Button



Animation Settings button



Snapshot button



3D Button



Fly-By Camera button

Refer to [Drawing Settings: Animations \(not AutoCAD Lite\) \(2150\)](#).

- Click the **Snapshot** button to take a screenshot. You will be prompted to save the image as a JPG file.

The following functionality is not available in the Review only product:-

- Click the **3D button** (AutoCAD & MicroStation only) to view your animation in 3D. Refer to [3D Animations \(AutoCAD & MicroStation only\)](#).
- Click the **Fly By Camera** button to view (AutoCAD & MicroStation only). Refer to [Fly-By Camera control \(AutoCAD & MicroStation only\) \(8060\)](#).

Advanced animation options (Advanced Animation dialog) ⁽⁸⁰⁰⁵⁾


Note

You may only playback existing animations and may not change animation options if you only have the Review product.

- Select a path and then select **Animate** from the AutoTrack drop down menu or click the **Animate** button. The Animation dialog will appear.




Animate button

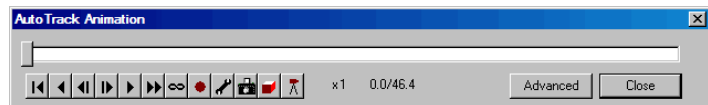

Animation dialog

- Click the **Advanced** button. The Animation dialog advanced options will appear.

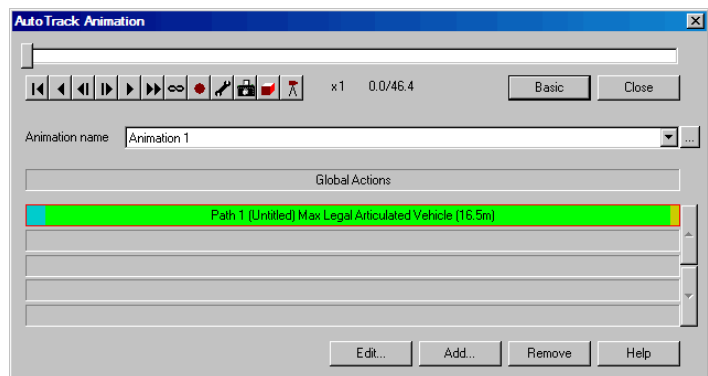

Animation dialog: Advanced options

- You should see six horizontal bars. The lower five with the scroll buttons to the right represent potential paths to be animated. Unused bars are completely blank. Paths to be animated are shown as green and contain the name of the vehicle followed by the title of the path. If none of the bars is green then close the dialog, select a path and click Animate again.
- To change the current animation, if you have more than one defined, select the required animation from the **Animation Name** drop down box.

The following functionality is not available in the Review only product:-

5. To edit one of the paths, highlight the relevant bar and click the **Edit** button (or just double click on the bar). The Path Animation dialog will appear (see [Path Animation dialog](#)).
6. To add a path, click the **Add** button. The Path Animation dialog will appear (see [Path Animation dialog](#)⁽⁸⁰²⁰⁾). Select the path that you wish to add from the drop down list, adjust the settings if required (see [Path Animation dialog](#)⁽⁸⁰²⁰⁾) and click **OK**. The path will appear in the next available horizontal bar.

Tip

If you want to create a traffic queue add the same path several times each with a greater start delay.


7. To remove a path from the current animation, highlight the path and click the **Remove** button.
8. To add, remove or edit a sound, annotation or CAD command, double click on the **Global Actions** bar. The Animation Commands dialog will appear (see [Animation Commands dialog](#)).
9. To add a new animation click the ... button alongside the **Animation Name** drop down box. The Animation list will appear (see [Animations dialog](#)).

Path Animation dialog ⁽⁸⁰²⁰⁾

Note

This option is not available on the Review only product.

1. On the Animation dialog highlight one of the path bars and click **Edit** or just double-click on the bar. The Path Animation dialog will appear.

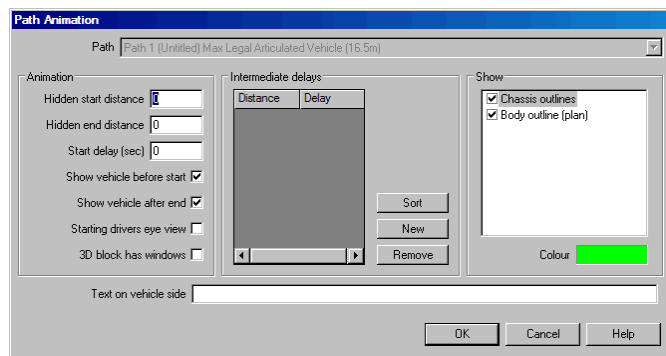

Path Animation dialog

229. Tick the relevant boxes in the **Show** frame to change the content or the colours of the animation. Note that in AutoCAD only 3D animations are in colour.

Note

You will only see tick boxes here for the outline types defined for the vehicle, e.g. you will typically not see a jet exhaust velocity tick box for a car.

230. If you wish to animate only a section of this path you should set the **Hidden start distance** and **Hidden end distance**. The vehicle will not be animated over the hidden length of path. You may have to experiment a little with the distances.
231. If you are animating more than one vehicle you may wish to delay the start of one. To do this, enter a **Start delay** in seconds. Again, you may need to experiment with this.
232. By default the vehicle is shown at the start of the path before the animation starts and at the end after the animation ends. If instead you want the vehicle to appear when it is due to start moving then untick **Show vehicle before start** and / or **Show vehicle after end**.
233. Tick **Starting driver's eye view** if you want the 3D animation to start with a driver's eye view from the vehicle on the selected path. Note that you can only animate one driver's viewpoint at a time so setting this option on one path unsets it on all others.
234. By default AutoTrack does not draw the tractor unit when animating the driver's eye view because it is normally an opaque block and visibility would be restricted! However, if you are using a custom 3D block that has a transparent windscreen for the tractor unit, you may wish to tick **3D block has windows**. This will ensure that AutoTrack draws the tractor unit.
235. The Intermediate Delays table allows you to pause the vehicle part way along the path. Click **New** to insert a pause at the current slider position. Edit the delay time and / or distance as required.
236. To remove an unwanted intermediate delay highlight it and click **Remove**.
237. Intermediate delays are listed in the order they are added. Click **Sort** to list them in order of distance from the start of the path.

Note

The delays are sorted automatically every time the Path Animation dialog appears.


238. To display a text string on the side of your vehicle enter the text in the **Text on vehicle side** box.

Animation Commands dialog ⁽⁸⁰⁴⁰⁾

Note

This option is not available on the Review only product.

1. On the Animation dialog highlight the Global Actions bar and click **Edit** or just double-click on the Global Actions bar. The Animation Commands dialog will appear.

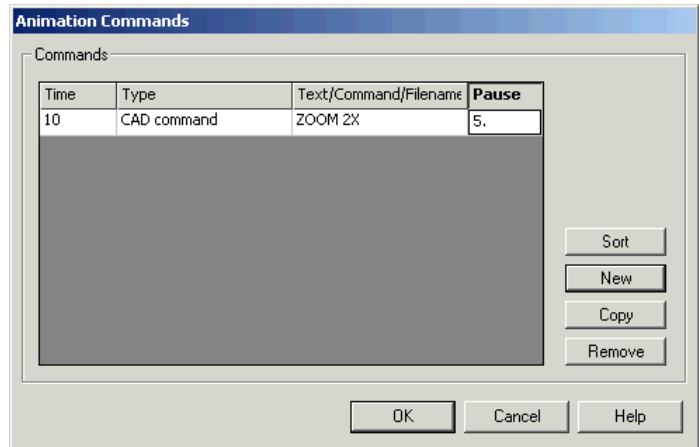

Animation Commands dialog

2. To insert a new command click **New**. The new command will be inserted at the current time in the animation but may be modified.
3. To insert a CAD specific command, for example, to zoom in, set the command **Type** to **CAD command**, click in the next field and enter the command in the edit window. If you want to pause the animation after the command, enter a time in the **Pause** field.
4. To display a comment set **Type** to **Display annotation**, click in the next field and enter the text of the comment in the edit window. Your text will appear in the same window on playback so adjust the size and position of the window accordingly. If you want to pause the animation after the command, enter a time in the **Pause** field.
5. To play a wave file set the **Type** to **Play a sound**, click in the next field and browse to select the wave file. The sound file will play while the animation continues unless you enter a delay time in the **Pause** field.
6. (AutoCAD & MicroStation only) To specify a 3D camera showing the view of the driver of one of the animation paths, set the **Type** to **Driver's eye camera** and click in the next field to select the animation path.
7. (AutoCAD & MicroStation only) To specify a fixed camera position set the **Type** to **Fixed camera** and click in the next field to select the camera. Note that **{BASE VIEW}** and **{DEFAULT 3D VIEW}** are always defined and represent the view before entering 3D mode (i.e. before clicking the 3D button) and the view immediately after entering 3D mode (i.e. immediately after clicking the 3D button).
8. Initially new commands are added to the end of the list but you can use the **Sort** button to reorder the entries chronologically.
9. To remove a command simply highlight it and click **Remove**.
10. To duplicate an existing command highlight it and click **Copy**.
11. When you click **OK** to confirm the Global Commands bar will update to display icons representing each of your commands.


Animations dialog ⁽⁸⁰¹⁰⁾

You can even create more than one animation, maybe to show different aspects of the same manoeuvre.

Note

This option is not available in the Review only product.

1. On the Animation dialog, click the **More** button next to the **Animation Name** drop down box.
239. The Animations dialog will appear.

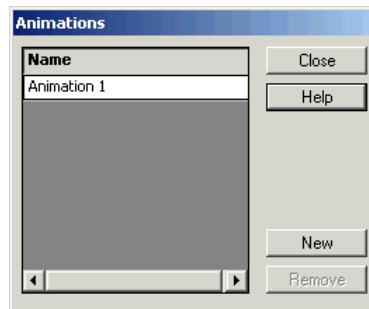

Animations dialog

240. At this point you can edit the names of the animations simply by placing the cursor in the relevant field.
241. To add a new animation click the **New** button and edit the name as required.
242. To remove an animation simply highlight it and click **Remove**.

3D Animations (AutoCAD & MicroStation only)

Note

This option is not available in the Review only product.

1. To view your animation in 3D click the **3D button**.
2. By default the viewpoint will change and the animation will be displayed in perspective 3D. However, you can change the animation settings to control how and when the viewpoint changes. Refer to [Drawing Settings: Animations \(not AutoCAD Lite\)](#) ⁽²¹⁵⁰⁾ for more information.
3. The vehicles will be displayed as wireframe, hidden line, Gouraud, basic, conceptual or realistic shaded according to your animation settings. The image style can be changed from the animation settings. Refer to [Drawing Settings: Animations \(not AutoCAD Lite\)](#) ⁽²¹⁵⁰⁾ for more information.

Tip

AutoTrack creates the 3D model of any vehicle automatically but you can also define your own block for use in 3D animations. Refer to [3D body shapes for animation](#) to learn how to do this.

4. You can play, single step, fast forward and even record animation just as in 2D.
5. If you deselect the 3D button the view will revert to the view prior to selection and you will be asked if you wish to save the camera position for future use. Saved camera positions



3D Button

may be specified in the [Animation Commands dialog](#) ⁽⁸⁰⁴⁰⁾.

Fly-By Camera control (AutoCAD & MicroStation only) (8060)




Fly-By Camera button

Note

This option is not available in the Review only product.

1. To view your animation using the fly-by camera click the **Fly-By Camera** button. The **Camera Control** dialog will appear.

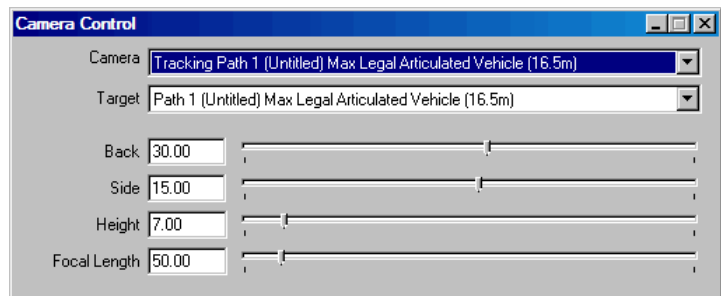

Camera Control dialog

2. Use the **Camera** drop down list to set the camera position. Options are Fixed, Tracking or Drivers Eye.
3. Use the **Target** drop down list to set what the camera is looking at. The options available depend upon the camera location:-

a fixed camera can be set to look at a vehicle on a path, a point or in a direction,

a tracking camera can only be set to be set to look at a vehicle on a path, and

a drivers-eye camera can be set to look straight ahead or down at point on the path ahead.

4. The four sliders are used to control the position of both the camera and the target. The mouse scroll wheel provides a convenient way to adjust the values by small amounts – first place the cursor in the field you wish to edit.
5. Fixed camera

Use the **X, Y & Z** sliders to control the position of the camera in real world coordinates and the **Focal Length** slider to control how large the image appears in the window.

If the camera target is a fixed point in space then depress the **Camera Target Point** button and use the sliders to specify this point.

Similarly if the camera target is a fixed direction then depress the **Camera Target Point** button and use the sliders to specify this direction.

6. Tracking camera
-

Use the **Back**, **Side & Height** sliders to control the position of the camera relative to the vehicle in real world coordinates and the **Focal Length** slider to control how large the image appears in the window.

7. Drivers-Eye camera

Depress the **Mirror View When Reversing** button to display what the driver would see in the wing mirror on the inside of the turn when reversing.

If the camera is set to look down at the path then use the **Look Ahead** slider to control the distance of the viewpoint along the path.

Recording an animation as an AVI file ⁽⁸⁰⁵⁰⁾

Note

This option is not available in the Review only product.


Recording an animation can take some time depending upon the speed of your computer and the length and complexity of the animation.

The record option records everything in the selected area so we recommend that you switch off screen savers and do not use other applications whilst recording.



Record button

1. Having prepared an animation click the **Record** button in the AutoTrack Animation dialog. The **AVI Options** dialog will appear.

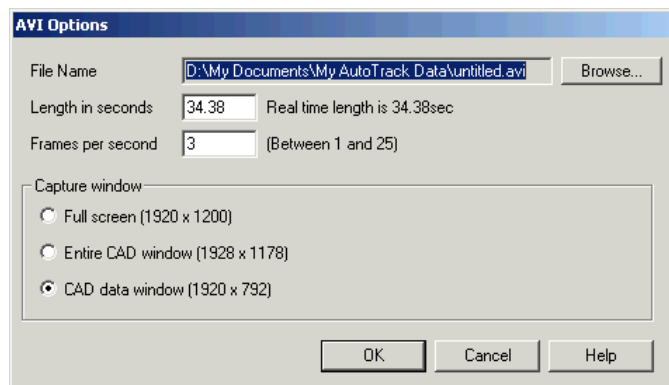

AVI options dialog


2. Use the **Browse** button to specify the **File Name**. The File Name field is read only. By default AutoTrack will create the AVI file in the same directory as the drawing file. If the drawing file has not been saved then it will create the file in your current directory.
3. **Length in seconds** is the duration of the resulting AVI movie. This is set by default to the real time length which is also shown in the adjacent text.
4. **Frames per second** is set by default to 3. Increasing this value will give you smoother movie but it will take longer to generate and the file size will be larger. Depending upon the design speed, you may also need to reduce your storage interval. We do not recommend a setting lower than 3 since

this results in a jerky playback.

Tip

A rule of thumb is that your frame rate should be less than the design speed divided by the storage interval. You may wish to adjust the storage interval in order to allow a higher frame rate.

5. Normally we suggest that the **Capture window** be set to **CAD data window**. This omits the CAD system window, including caption, frame, CAD toolbars and docked controls and edit windows. Bear in mind that for best results the AVI file should be played back at the same size as it is recorded and typical playback monitors may have much smaller screen area than a typical CAD system. The option **Entire CAD window** includes the host CAD system controls and **Full screen** includes everything visible on the screen.
6. Click **OK**. The Video Compression dialog will appear.

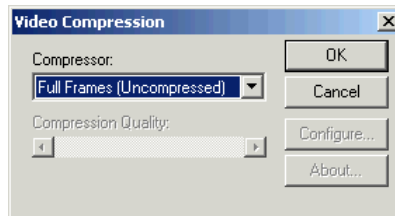

Video Compression dialog

7. The **Compressor** drop down lists all the compression codecs installed on your computer. Select the one you wish to use and click **OK** to start the AVI writing process, or **Cancel** to cancel the changes and return to the Animation dialog.

Tip

*We recommend the use of the **XviD video compression codec** which is supplied with AutoTrack. This codec is extremely fast and efficient and produces high quality results of a size that can be emailed.*


8. If you do not use the XviD codec there are a number of others supplied as standard with Windows not all of which can be used to create compressed video, some permit playback only. Various codecs are supplied as standard with Windows which may be used to create video files including *Cinepak Codec by Radius, Microsoft Video 1, Indeo Video 5.1 & Intel Indeo Video 4.5.*
9. Some codecs are configurable (the configure options are codec dependent) and in these cases the **Configure** button and/or the **Compression Quality** slider will be enabled as soon as you select a codec.
10. Click **OK** to confirm and generate the AVI file. Do not make changes to the screen at this stage as they will all be recorded.

Audit

The Audit tool lets you check your AutoTrack objects for basic errors. It can be used equally well by engineers at design stage to check their own work and later by checking authorities using the Review product. Changes to the audit results are saved with the drawing.

Audit dialog ⁽⁸²¹⁰⁾

1. Save your drawing and then click the **Audit** button. The Audit Exceptions dialog will appear.

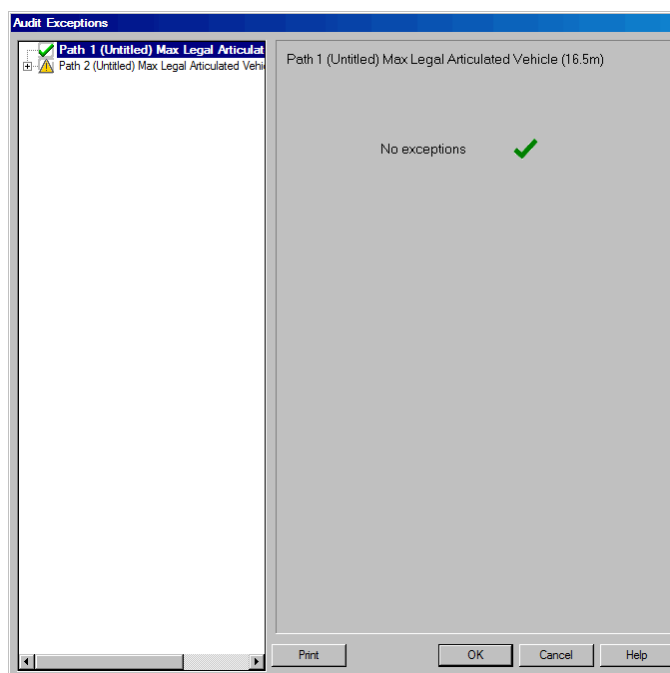

Audit dialog

2. The left hand pane lists every AutoTrack entity in the drawing.

entities with no exceptions or with exceptions that have been approved are listed with a green tick,

entities with one or more exceptions that have been rejected are listed with a red cross, and

entities with one or more exceptions that are awaiting assessment are listed with an orange warning triangle and the exceptions are listed as 'children' in the tree view.

3. The content of the right hand pane varies according to what is selected in the tree view.


If you highlight an AutoTrack entity in the left hand pane then the right pane shows summary data for that entity, i.e. the name of the entity, the total exceptions and the exception status breakdown.

If you highlight an exception in the left hand pane then the right pane shows the detail of that exception.

4. To print an Audit report click the **Print** button. Refer to [Print Audit Options dialog \(8220\)](#).

Audit dialog: Exception Details ⁽⁸²⁰⁰⁾

1. Highlight an exception in the left hand pane and the Exception Details will appear in the right hand pane.

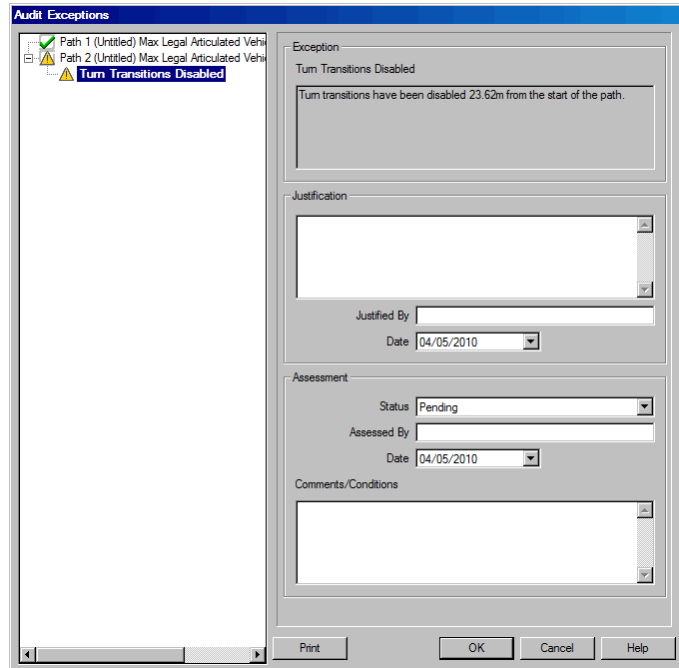

Audit dialog: Exception Details

243. Exceptions can have one for four statuses:-

Pending: An exception that has yet to be assessed,

Approved: An exception that has been assessed and approved unconditionally,

Approved With Conditions: An exception that has been assessed and approved subject to stated conditions, and

Rejected: An exception that has been assessed and rejected.


244. The top frame contains the details of the exception and, where appropriate, a location on the entity.
245. The middle section allows the engineer to provide a justification for, or explanation of, the exception together with space for a name or initials and a date.
246. Finally the lower section is for the checking authority to grant an approval status.

Note

The Status can be changed regardless of whether any justification has been provided.

Print Audit Options dialog ⁽⁸²²⁰⁾

1. Click the **Print** button on the Audit dialog. The Print Audit options dialog will appear.

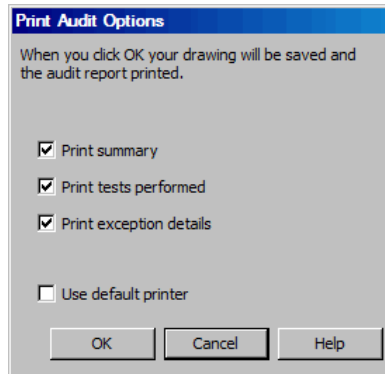

Print Audit Options dialog

247. Tick **Print Summary** to include a summary of the audit results including number of entities and number of exceptions grouped by status.
248. Tick **Print Tests Performed** to list all the tests carried out.
249. Tick **Print Exception Details** to include full details of each exception.


Managing AutoTrack data

AutoTrack generates the same data regardless of the operating system or CAD system but it is stored in the CAD system native drawing format and CAD systems cannot always read each others drawing files.

However, AutoTrack incorporates a system to transfer data. Basically, data is exported from one CAD system and then imported in the receiving CAD system.

Exporting AutoTrack data (Export AutoTrack Data dialog) ⁽⁵⁰⁹⁰⁾

1. Select **Export AutoTrack data** from the AutoTrack Utilities menu. The Export AutoTrack data dialog will appear.

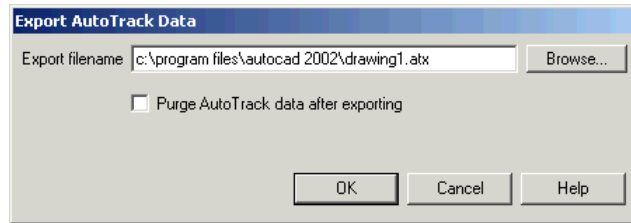


Export AutoTrack data dialog

2. By default AutoTrack will assume that you want to create an export file in the same directory and with the same base name as the current drawing. If you wish to specify a different file use the **Browse** button and edit box to specify the export filename.
 3. Tick **Purge AutoTrack data after exporting** to effectively transfer the AutoTrack data to another drawing. This will write the transfer file and then remove all AutoTrack data from the source drawing.
-

Importing AutoTrack data (Import AutoTrack Data dialog) ⁽⁵⁰⁸⁰⁾

1. Select **Import AutoTrack data** from the AutoTrack Utilities menu. The Import AutoTrack Data dialog will appear.

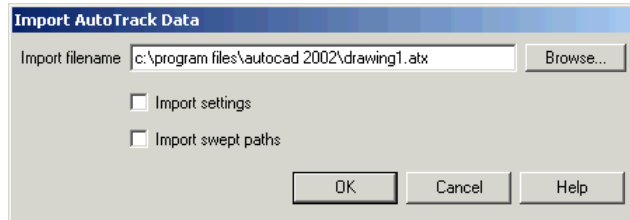


Import AutoTrack data dialog

2. AutoTrack will look in the current directory for an AutoTrack export file with the same base name as the one currently loaded. If it finds one it will display it as the default. If you wish to import a different data file then use the **Browse** button to find it.
3. Tick **Import Settings** if you want the imported settings to replace your current AutoTrack settings.
4. Tick **Import Swept Paths** if you want to import the swept paths.
5. If you tick neither box no data will be imported.

Using Export / Import for personal settings

You can save personal settings on a computer used by several people by enabling the option to save settings to your "My Documents" folder (See [System Settings: Start Up](#)). However, if you do not want to enable this option you can use Export and Import to give the same result...

1. Run AutoTrack and set your preferences.
2. Select **Export AutoTrack Data** from the AutoTrack Utilities menu. The Export AutoTrack Data dialog will appear.

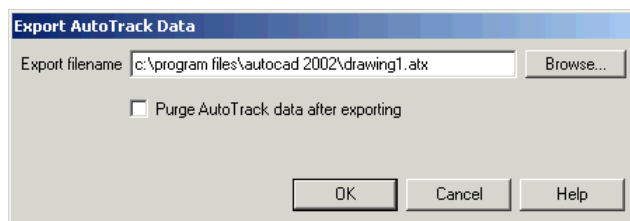

Export AutoTrack data dialog

3. Browse to your personal area (e.g. your personal documents and settings directory or personal area on the file server).
4. By default AutoTrack creates an export file with the same name as the current drawing so we recommend that you change the filename to something more appropriate, maybe something like `ATR_SETTINGS`.
5. Click **OK** to save the file.

6. When you next run AutoTrack select **Import AutoTrack data** from the AutoTrack Utilities menu.
7. When the Import AutoTrack data dialog appears tick only the **Import settings** box before clicking **OK** to load the settings.

Drawing file size

AutoTrack data is stored in the host CAD drawing allowing you a number of benefits. However, as you use AutoTrack the host system frequently needs to make temporary copies of data. Most of these copies may be removed but, depending upon how your CAD system is configured, they often are not.

Luckily there are ways that you can recover the space taken by the working data.

Recovering space in AutoCAD drawings

By default AutoCAD does an incremental save of the drawing using **QSAVE**. This does not remove all deleted and temporary objects.

Use **PURGE** to remove all unused objects or **SAVEAS** to perform a full save and remove superseded data.

Recovering space in MicroStation drawings

Use **COMPRESS DESIGN** to remove superseded AutoTrack data.

Repair AutoTrack data

Under certain circumstances and on rare occasions AutoTrack data links can become broken. So, for example, a layer used by an AutoTrack path may be deleted. The Repair AutoTrack data function is used to reinstate these links. It is very simple to use.


1. Select **Repair AutoTrack data** from the AutoTrack Utilities menu.
250. AutoTrack will scan all AutoTrack objects and try to repair any broken data links.

Purging AutoTrack data (Purge AutoTrack dialog) ⁽⁵⁰⁶⁰⁾

The following procedures will remove ALL AutoTrack data from your drawing, including vehicles and reports. You will be given the option to retain the reports as AutoCAD entities but you should note that they will no longer be editable using AutoTrack.

AutoCAD version

1. Load the drawing that you wish to purge into AutoCAD.
2. Select **Purge AutoTrack** from the AutoTrack, Utilities menu.
3. Alternatively, type `PURGEAUTOTRACK` on the command line.
4. The Purge AutoTrack dialog will appear.

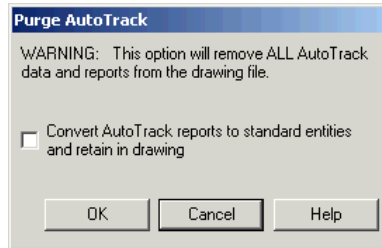


Purge AutoTrack dialog

5. Check the **Convert AutoTrack reports** box if you wish to leave any AutoTrack reports in your drawing as simple lines.
6. Click **OK**.

MicroStation version

1. Load the drawing that you wish to purge into MicroStation.
2. Select **Purge AutoTrack** from the AutoTrack, Utilities menu.
3. Alternatively, select Key in from the Utilities menu. The Key in dialog will appear. Select `ATRACK` from the first column and `PURGE` from the second. Click **Key in**.
4. The Purge AutoTrack dialog will appear.

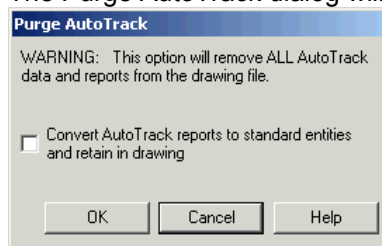

Purge AutoTrack dialog

5. Check the **Convert AutoTrack reports** box if you wish to leave any AutoTrack reports in your drawing as simple lines.
6. Click **OK**.

Glossary of Terms

Active Hitch

A type of rear axle consisting of a drawbar with the bar facing rearwards linked to the front axle or articulation point (hence 'active').

Actual Wheelbase

The distance between the innermost axles on a tractor, or the distance from kingpin or drawbar pivot point to the innermost rear axle on a drawbar or semi-trailer.

Apron (or Overrun Area) (Parking)

A zone provided outside the Central Island for larger vehicles to track over.

Note: The Apron is considered by some standards to be a part of (i.e. within) the Central Island and by others as part of the Circulatory Width (i.e. outside the Central Island). Either way, the outer limit of the Apron is the normal offside limit for normal vehicles turning 270 degrees.

AutoDrive

A means of driving the vehicle in which the path from a given position is calculated automatically as you move a target point (the cursor).

Authorisation code

A code needed to update the hardware lock to run each new version. May also be needed when you purchase extra features.

Axle Spacing

The distance between adjacent axles in a multi-axle group at the front or rear of a component.

Baseline

The baseline is the line that passes along the back of a row of parking bays.

Bay markings

The bay markings include the painted lines, symbols and hatching used to delineate the preferred position of the car.

Bay style

Each different composition of markings, safety zones, symbols and parking accessories is call a bay style.

Bay symbol

Bay symbols are the graphics painted within the bay and used to indicate, for example, bay usage.

Bend island

Bend islands are placed where a row of parking bays changes direction.

Castor Steering

Wheels that are part of a fixed axle group but that are free to rotate. Sometimes referred to as self-steered wheels.

Cats Whiskers

See [Predictive Turning](#).

Central Island (or simply Island)

The normal offside limit (possibly kerbed) for vehicles turning 270 degrees.

Note: In some standards there may be an Apron within the Central Island. AutoTrack treats the Central Island as the limit of turning for all vehicles if there is no apron or the apron is defined outside the island and as the limit for normal sized vehicles if there is an apron defined inside the island.

Circulatory Width

The Inscribed Circle radius minus the Island radius.

Note: The preferred physical vehicle path limit will typically be inside this.

Cramp Angle

A term (seemingly used only by US fire departments) for the maximum wheel angle. See also 'Wheel Cut'.

Cut-in Point

The point at which the spine of the element is tangential to the arc that it transcribes.

Cut-in Radius

The radius of the arc traversed by the Cut-in Point.

Definition Line

A virtual line representing a roadway limit. The physical Kerb Line may coincide with this line or maybe offset outside it.

Dongle

Slang name for a Hardware Lock.

Drag Lines

Lines drawn from the grips used to extend the path to the front most and rearmost grips on the vehicle. These lines vary in length according to the vehicle size and can be switched off.

Drawbar

A rigid towing bar attached rigidly to an axle. The bar and axle turn as one unit.

Drawbar Articulation Angle

The angle subtended at the axle pivot of a drawbar by the drawbar and associated trailer spine.

Drawbar Length

The length of a drawbar is measured from the centre of turning of the relevant axle group to the physical end of the drawbar. The coupling at the remote end must be defined separately in AutoTrack.

End island

End islands are non-parking areas placed at the ends of rows of parking bays.

DXF File

DXF stands for Drawing Exchange Format, a text file format used to transfer data between dissimilar CAD systems. Supported by many CAD systems.

Dynamic Edit

See Dynamic Editing.

Dynamic Editing

Editing a path by dragging the grips at target points (and / or intermediate points) to new locations. The path updates automatically when the grip is dropped.

Effective Fixed Axle

The effective fixed axle is the single axle that would have the same effect on the vehicle swept path as the fixed axle group. It is the centroid of the

group after the effects of retracted and self-steered axles are taken into account.

Effective Front Axle Offset

The offset of the effective front axle from the reference datum. Positive if the effective axle position is behind the reference datum.

Effective Front Track Width

The distance between outer faces of the front wheels to be used in path calculations.

Effective Rear Axle Offset

The offset of the effective rear axle from the reference datum. Positive if the effective axle position is behind the reference datum.

Effective Rear Track Width

The distance between outer faces of the rear wheels to be used in path calculations.

Effective Steered Axle

The effective steered axle offset is the single axle that would have the same effect on the vehicle swept path as a given steered axle group. It is the outermost axle of the steered axle group, i.e. the furthest forward on a front axle group and the furthest back on a rear axle group.

Effective Wheelbase

The distance between the Effective Front and Rear Axles.

Envelope

A single line representing the maximum body or wheel movement. In the case of vehicle bodies it is the outer limit of movement of any point on any body. In the case of wheels it is the outer limit of travel of any wheel.

Exit Overturn

An exit overturn is when a vehicle continues past the point at which it would normally start the turn (i.e. delays the start of the turn) prior to turning back and exiting the turn. The lateral deviation from the normal path is the exit overturn distance.

Fastest Line

The Fastest Line is the centreline of the path taken by a vehicle travelling as fast as possible through the junction. It is defined by various standards in different ways but usually there is a minimum offset from the apex of the path at entry, exit and island. There are also often specified starting and ending positions.

Follow

A means of driving a vehicle in which you specify a required path as a polyline and let the vehicle attempt to follow it.

Grips

Small squares that appear when an object is selected. Grips can be selected and moved using the mouse.

Hairpin marking

A type of parking bay marking comprising twin sidelines connected at the entrance.

Hardware Lock

A hardware lock or dongle is a security device that must be plugged into the parallel port of your computer to allow AutoTrack 5 to run.

In bay numbering

In bay numbering is when bay numbers are placed within each marked parking bay.

Independent Bogies

Multiple linked bogies arranged along a unit each with their own turntable. Also known as Tandem Axles. See also Pendel Axles.

Inscribed Circle

The Definition Line representing the outer limit of the Circulatory Width.

Intermediate Grips

Transient editing grips that are displayed along the path between Target Points to make path editing easier. An Intermediate Grip becomes a Target Point if it is selected.

Kerb Line

A line representing the roadside edge of the physical kerb.

Kerb Offset

The distance that the Kerb Line is offset (outside) the Definition Line.

Kerbside numbering

Kerbside numbering is when the bay numbers are placed adjacent to the bay.

Kerb-to-Kerb Turning Circle Radius

The radius of the smallest circle within which the vehicle's wheels can turn. It is assumed that this occurs when full steering lock is applied.

Lane Line

A line between lanes of traffic travelling in the same direction.

Layer

A means of grouping objects together within an AutoCAD drawing. The properties of layers (e.g. visibility) may be controlled independently of the objects they include. See also Level, the equivalent in MicroStation.

Level

A means of grouping objects together within a MicroStation drawing. The properties of layers (e.g. visibility) may be controlled independently of the objects they include. See also Layer, the equivalent in AutoCAD.

Linkage Proportion

The linkage proportion is the proportion of the articulation or wheel angle at one end of a unit that is applied to the axle group at the other end. The proportion may be specified in terms of angles or tangents of angles. In arithmetic terms if the linkage is on an angular basis the linkage proportion would be:-

$$\text{LinkageProportion} = \text{LinkedAngle} / \text{PrimaryAngle}$$

If the linkage is on a tangential basis the linkage proportion would be:-

$$\text{LinkageProportion} = \tan(\text{LinkedAngle}) / \tan(\text{PrimaryAngle})$$

We understand that the latter is the more common form of linkage and in this case the effective cut in point offset is fixed for all primary angles.

Loci

The plural of locus. See Locus.

Lock

Steering angle; thus, maximum left lock is the maximum steering possible when turning left and right lock is the maximum when turning right.

Lock to lock time

Lock-to-lock time is the time that it takes the driver of the vehicle to turn the steering from the maximum angle (full lock) in one direction to maximum angle (full lock) in the opposite direction in a single continuous movement.

Locus

The path of a moving point in space. In the context of AutoTrack the path of the wheel tracks or the body vertices. Referred to in AutoTrack in it's plural form loci.

Manual Drive

A means of driving a vehicle that uses a control overlay displayed on screen. The vehicle moves forwards, reverse, left and right according to the position of the cursor on the control overlay.

Maximum Drawbar Articulation Angle

The largest Drawbar Articulation Angle permitted.

Maximum Wheel Angle

The maximum angle of any wheel in a group, i.e. at the front or at the rear. This is normally the inside wheel on the innermost axle but may be otherwise if the widths of the axles in the group vary. See also 'Cramp Angle' and 'Wheel Cut'.

Minimum Cut-in Radius

The radius of the arc traversed by the Cut-in Point when the vehicle is turning at the Maximum Steering Angle.

Model Settings

The criteria that control the how a specified vehicle should behave in a specific situation. For example, a lower limit might be placed on the allowable lock rate.

Object enabler

An AutoCAD add-on that allows third party entities, like AutoTrack path entities, to be regenerated but not edited.

Offset Envelope

The envelope of maximum body or wheel movement with a further margin added. This may represent a safety or clearance margin.

Overrun Area

See Apron.

Overturn

A technique for reducing the vehicle cut-in on corners whereby the vehicle either turns temporarily in the opposite direction (side overturn) or delays the exit from the turn (exit overturn).

Overturn angle

When performing an overturn (side or exit) the overturn angle is the angular deviation of the wheels from the path the same vehicle would take if performing a non-overturn manoeuvre.

Pendel Axles

Multiple linked bogies arranged both across and along a unit that turn in much the same manner as Ackerman axles, i.e. those axles furthest away from the centre of turn follow the widest radius arc.

Predictive Turning

Predictive Turning is an AutoDrive feature that displays the limits of the vehicle path **from** the last position placed and the limits of body or wheel envelope **from** the ghosted unselected position. Also known as “Cat’s Whiskers”.

Primary Axle

The innermost axle of a group, i.e. the rearmost axle of a front axle group and the front most axle on a rear axle group.

Privacy post

Privacy posts are used to prevent use of parking bays by unauthorized personnel.

Rail wheels

Wheels designed to run on rails typically with an inner flange to prevent the wheel from derailing.

Retracted Axle

An axle that is present but not in contact with the road surface. Retracted axles are ignored when AutoTrack calculates the effective axle positions.

Safety post

Safety posts may be placed at the ends of parking bays to prevent vehicles from overshooting.

Safety zone

Safety zones are areas of extra space provided to meet special requirements and are measured from the centres of the bay side and entrance lines.

Script

A means of driving a vehicle by issuing commands such as; forwards 10 metres, turn left 30 degrees, continue for 5 metres.

Secondary steering

A turning axle group whose angle is controllable but which is not the main steering for the vehicle. The axle may be linked to another axle or independently controllable.

Secondary steering angle

The angle of an imaginary wheel at the centre of a secondary steering axle. See Secondary Steering.

Self-steering

Wheels that are part of a fixed axle group but that are free to rotate. Sometimes referred to as castors.

Separator Line

A line between lanes of traffic travelling in opposite directions.

Service type

The different usages of parking areas are called service types.

Side Overturn

A side overturn is when a vehicle starts a turn with opposite lock for a short distance prior to making the turn. The lateral deviation from the normal path is the side overturn distance.

Splitter

The splitter is formed by the boundaries of the entry and exit roadway Definition Lines and the Inscribed Circle.

Splitter Island

The Splitter may include a Splitter Island, especially if there are pedestrian crossings. The physical limits of the Splitter Island are normally inside the Splitter.

Steering Angle

The angle of an imaginary wheel at the centre of the controlling axle or coupling.

Stub axle

An axle carrying wheel(s) at only one end.

Stub axle length

The length of a stub axle is measured from the pivot point to the centre of the wheel group.

T-markings

A type of parking bay marking consisting of a T painted at the entrance between each adjacent parking bay. The leg of the T runs a short distance down the side of the bay and the cross runs part way along the entrance line.

Tandem Axles

See Independent Bogies.

Target Point

A point through which the vehicle must travel.

Tracking Point

The Tracking Point is the point on the vehicle that must pass through the specified Target Points. It is the point on the vehicle that you move and position when you use AutoDrive and also the point that follows the line in the Follow drive mode.

Tyred Wheels

Wheels with tyres fitted.

Vehicle class

Vehicles using parking areas are grouped into classes; vehicles with similar parking requirements.

Wall-to-Wall Turning Circle Radius

The radius of the smallest circle within which the vehicle's body can turn. It is assumed that this occurs when full steering lock is applied.

Wheel Cut

A term (seemingly used only by US fire departments) for the maximum wheel angle. See also 'Wheel Cramp'.

Wheel Diameter

The diameter of the outer face of the tyre.

Wheel stop

Wheels stops are placed at the ends of bays to prevent the vehicle from overshooting.

Wheel Track

The distance between the outer faces of the wheels on an axle.

Index

3

- 3D Animations (AutoCAD & MicroStation only) 325
- 3D body shapes for animation 261

A

- A few do's and don'ts 58
- Access to parking standards 285
- Access to parking standards in the Pool 286
- Access to vehicle libraries 213
- Access to vehicles in the Pool 214
- Active Hitch 337
- Actual Wheelbase 337
- Adding files to an installation 35
- Adjusting dynamics settings (not Rail) 209
- Adjusting model settings (Roads only) 206
- Adjusting speed settings 207
- Adjusting the path alignment (Path toolbar) 191
- Adjusting the path alignment using grip editing 195
- Adjusting the tracking point (not Rail) 208
- Adjusting the view (View toolbar) 188
- Adjusting transition settings (not Rail) 207
- Advanced animation options (Advanced Animation dialog) (8005) 321
- AEC BS1192 Part 5 Layer/Level naming Convention 122
- Animation Commands dialog (8040) 323
- Animations dialog (8010) 325
- Apron (or Overrun Area) (Parking) 337
- Attributes dialog 316
- Attributes dialog (3830) 91
- Audit 329
- Audit dialog (8210) 329
- Audit dialog: Exception Details (8200) 330
- Authorisation code 2, 337
- AutoCAD object enabler 32
- AutoDrive 337
- AutoDrive (Roads only) 158
- AutoDrive options (5110) 161
- AutoTrack hardware lock 1
- AutoTrack parking standards 285
- AutoTrack script commands 172
- AutoTrack Updates dialog (1970) 104

- AutoTrack vehicle libraries 213
- Axle Spacing 337

B

- Base layer or level name (Base Layer/Level Name dialog) (5120) 122
- Baseline 337
- Bay markings 338
- Bay style 338
- Bay symbol 338
- Bend island 338
- Building vehicles using drag and drop 225

C

- Capabilities 59
- Castor Steering 338
- Cats Whiskers 338
- Central Island (or simply Island) 338
- Changing your vehicle 184
- Checking vertical clearances 63
- Circulatory Width 338
- Compatibility with previous versions 214
- Configuring AutoCAD manually 36
- Configuring MicroStation, Bentley PowerDraft, Bentley PowerCivil or Bentley MX manually 38
- Context sensitive on-line help 72
- Copying standards and units using drag and drop 290
- Copying vehicles and units using drag and drop 225
- Cramp Angle 338
- Creating a new group 226, 291
- Creating a new library (Library Details dialog) (3520) 221
- Creating a new parking standard file (Parking Standard File dialog) 287
- Creating the install script 33
- Creating vehicles 228
- Customising the Library Explorer view (Library Explorer Columns dialog) (3515) 218
- Cut-in Point 338
- Cut-in Radius 338

D

- Default Parking Standard dialog (4690) 292
- Default values 71
- Default Vehicle dialog (5100) 183
- Definition Line 339
- Demonstration copies 2
- Demonstration Version dialog (1800) 45
- Development & planning scenarios 62
- Dongle 339
- Drag Lines 339
- Drawbar 339
- Drawbar Articulation Angle 339
- Drawbar Length 339

Drawing Explorer (3300) 317
Drawing file size 334
Drawing Settings 115
Drawing Settings: Construction Lines: Drag Lines 134
Drawing Settings: Construction Lines: Path 134
Drawing Settings: Construction Lines: Steering Pointer 134
Drawing Settings: Dynamics (Roads & Airports) (2180) 130
Drawing Settings: Paths: Animations (not Roads) (2150) 149
Drawing Settings: Paths: Construction Lines (3160) 133
Drawing Settings: Paths: Layers (AutoCAD only) (2060) 118
Drawing Settings: Paths: Levels (MicroStation pre-v8 only) (2065) 120
Drawing Settings: Paths: Levels (MicroStation v8 onwards) (2067) 119
Drawing Settings: Paths: Model (Roads & Airports) (2070) 125
Drawing Settings: Paths: Reports (3000) 132
Drawing Settings: Paths: Reports: Discrete (3020) 135
Drawing Settings: Paths: Reports: Envelope (3050) 141
Drawing Settings: Paths: Reports: Graph (3070) 147
Drawing Settings: Paths: Reports: Loci (3040) 139
Drawing Settings: Paths: Reports: Offset Envelope 1 143
Drawing Settings: Paths: Reports: Profile (3060) 145
Drawing Settings: Paths: Reports: Spaced (3030) 137
Drawing Settings: Paths: Speed (Roads, Rail & Airports) (2080) 127
Drawing Settings: Paths: Tracking Point (Roads & Airports) (2170) 123
Drawing Settings: Paths: Transitions (Roads & Airports) (2085) 128
Drawing Settings: Scale (2030) 117
Drawing Settings: Units (2020) 116
DXF File 339
Dynamic Edit 339
Dynamic Editing 339

E

Editing Aircraft bodies (Aircraft Body dialog) (4210) 265
Editing individual bays (Parking Bay Properties dialog) (4440) 280
Editing islands (Parking Island Properties dialog) (4460) 281
Editing Jet Blast contours (Jet Blast Contour dialog) (4230) 266
Editing parking row layout 282

Editing path properties (Path Properties dialog) 202
Editing rows (Parking Row Properties dialog) (4450) 278
Editing Tractor bodies (Tractor body dialog) (4220) 263
Editing Tram bodies (Tram Body dialog) (4200) 264
Editing vertices (Vertices dialog) (4180) 262
Effective Fixed Axle 339
Effective Front Axle Offset 340
Effective Front Track Width 340
Effective Rear Axle Offset 340
Effective Rear Track Width 340
Effective Steered Axle 340
Effective Wheelbase 340
End island 339
Envelope 340
Exit Overturn 340
Exporting AutoTrack data (Export AutoTrack Data dialog) (5090) 331
Extending or trimming a path 201
Extracting path data 211

F

Fastest Line 340
Fastest line through roundabouts 63
Features 59
Finding vehicles online (Online Vehicle Library Explorer) 3580 217
Fly-By Camera control (AutoCAD & MicroStation only) (8060) 326
Follow 341
Follow (not Rail) 169

G

Generating turn templates 151
Getting help 71
Grips 341
Guided Drive (Rail only) 176

H

Hairpin marking 341
Hardware Lock 341
Height and ground clearance 260
Help tutor 72
How to use AutoTrack 60

I

Identifying and resolving problems 41
Importing AutoCAD drawing files 268
Importing AutoTrack data (Import AutoTrack Data dialog) (5080) 333
Importing outlines (Import Outlines dialog) (not MicroStation version) (4190) 267
In bay numbering 341

- Independent Bogies 341
- Inscribed Circle 341
- Installing AutoTrack 14
- Installing AutoTrack from the web 31
- Installing the licence manager on a Novell Netware server 10
- Installing the licence manager on a Windows NT/2000/XP server 5
- Installing the licence monitor on a Windows NT/2000/xp client computer 11
- Installing the NetHASP Licence Manager software (Network version only) 5
- Installing the NetHASP Licence Monitor software (Network version only) 11
- Installing the software 3
- Intermediate Grips 341

K

- Kerb Line 341
- Kerb Offset 341
- Kerbside numbering 341
- Kerb-to-Kerb Turning Circle Radius 342

L

- Lane Line 342
- Layer 342
- Layer / Level naming conventions 121
- Level 342
- Library Details: Library 221
- Library Details: Users (3530) 221
- Licences 2
- Limitations 59
- Linkage Proportion 342
- Loading AutoTrack 2.x vehicle libraries 214
- Loci 342
- Lock 342
- Lock to lock time 342
- Locus 342

M

- Manual Drive 343
- Manual Drive (not Rail) 165
- Manual layout 71
- Master Reset dialog (2310) 95
- Maximum Drawbar Articulation Angle 343
- Maximum Wheel Angle 343
- Migrating from WinTrack 60
- Minimum Cut-in Radius 343
- Model Settings 343
- Modelling Active Hitches 62
- Modelling aircraft 62
- Modelling articulated semi-trailer vehicles 61
- Modelling combination steered vehicles 62
- Modelling conveyor systems 63
- Modelling drawbar and multi-trailer vehicles 61
- Modelling rigid vehicles 61

- Modelling the effects of super elevation and side friction 63
- Modelling trams and light rail vehicles 63
- Modelling vehicles with pushing tractors 62
- Modelling vehicles with steerable couplings 62
- Modifying, repairing or removing AutoTrack 28
- Mouse conventions 71
- Moving the NetHASP Licence Manager (Network version only) 10
- Multiple heights 270, 271

N

- Network licences 2
- Network version 4
- Notation conventions 71

O

- Object enabler 343
- Offset Envelope 343
- On-line assistance 72
- Overrun Area 343
- Overturn 343
- Overturn angle 343

P

- Park a Vehicle 180
- Parking Report (4410) 277
- Parking Standard File: Parking Standard File 287
- Parking Standard File: Users 287
- Parking Standard Group dialog (4670) 291
- Parking Standard: Bay Dimensions (4600) 302
- Parking Standard: Bay Markings (4580) 304
- Parking Standard: Bay Styles (4610) 310
- Parking Standard: Bay Symbols (4620) 306
- Parking Standard: Bend Islands (4470) 296
- Parking Standard: Construction Lines (4490) 315
- Parking Standard: End Islands (4480) 295
- Parking Standard: General (4500) 294
- Parking Standard: In Bay Numbering (4510) 297
- Parking Standard: Kerbside Bay Numbering (4520) 298
- Parking Standard: Parking Meters (4530) 303
- Parking Standard: Privacy Posts (4540) 313
- Parking Standard: Safety Posts (4550) 312
- Parking Standard: Safety Zones (4560) 308
- Parking Standard: Service Types (4570) 300
- Parking Standard: Valid Bay Angles (4630) 301
- Parking Standard: Vehicle Classes (4640) 299
- Parking Standard: Wheel Stops (4650) 314
- Path Animation dialog (8020) 322
- Path Properties: Manoeuvres (5020) 204
- Path Properties: Manoeuvres: Dynamics 205
- Path Properties: Manoeuvres: General (5040) 205
- Path Properties: Manoeuvres: Model 205

- Path Properties: Manoeuvres: Speed 205
- Path Properties: Manoeuvres: Tracking Point 205
- Path Properties: Manoeuvres: Transitions 205
- Path Properties: Path Notes (5010) 203
- Path Properties: Reports 206
- Path Properties: Vehicle 203
- Pendel Axles 344
- Placing access roads (4430) 275
- Placing discrete body outlines (5140) 210
- Placing rows of bays 273
- Positioning a vehicle (Position Vehicle dialog) (6000) 186
- Positioning a vehicle interactively 185
- Predictive Turning 344
- Primary Axle 344
- Print Audit Options dialog (8220) 331
- Printing library or vehicle details (Print dialog) (5070) 224
- Privacy post 344
- Properties 317
- Purging AutoTrack data (Purge AutoTrack dialog) (5060) 334

R

- Rail wheels 344
- Reading extracted data in Excel 211
- Reading pre-v5 AutoTrack libraries 60
- Recording an animation as an AVI file (8050) 327
- Recovering space in AutoCAD drawings 334
- Recovering space in MicroStation drawings 334
- Releasing network licences 101
- Removing a partially installed USB dongle 3
- Rental Version dialog (1820) 46
- Repair AutoTrack data 334
- Report Attributes dialog (3820) 91
- Report Wizard 84
- Report Wizard: Construction Lines (3800) 90
- Report Wizard: Finish (3810) 92
- Report Wizard: Graphical sub-reports (3710) 86
- Report Wizard: Path Annotation (3790) 87
- Report Wizard: Profile (3805) 88
- Report Wizard: Start (3700) 85
- Report Wizard: Steering & Articulation Graph (3795) 89
- Resolving hardware lock problems 40
- Retracted Axle 344
- Retrieve Rental Licence dialog (1840) 47
- Running a silent install 34
- Running AutoTrack in AutoCAD 48
- Running AutoTrack in MicroStation 53
- Running stand-alone AutoTrack 43
- Running the Licence Manager on a remote computer 41
- Running the Licence Manager on the same computer as AutoTrack 40

S

- Safety post 344
- Safety zone 344
- Saving a library 223
- Saving a parking standard file 289
- Savoy Basic Layer/Level naming convention 121
- Savoy Complex Layer/Level naming convention 121
- Savoy Standard Layer/Level naming convention 121
- Scale dialog (5130) 183
- Script 344
- Script (not Rail) 171
- Script Commands: Drive 174
- Script Commands: General 172
- Script Commands: New Path 172
- Script Commands: Positional 173
- Script Commands: Stop Conditions {S} 174
- Script Commands: Turn Conditions [T] 175
- Scripted 'silent' installations 33
- Secondary steering 344
- Secondary steering angle 345
- Selecting a Parking Standard 292
- Selecting a vehicle to drive 181
- Self-steering 345
- Separator Line 345
- Service type 345
- Settings 61
- Settings Wizard 73
- Settings Wizard: Articulation Limits (2455) 80
- Settings Wizard: Design Speed (2430) 78
- Settings Wizard: Dynamics (2460) 81
- Settings Wizard: Editing Units (2410) 75
- Settings Wizard: Finish (2480) 83
- Settings Wizard: Layers (2420) 76
- Settings Wizard: Scale (2400) 74
- Settings Wizard: Steering Limits (2450) 79
- Settings Wizard: Turn Transitions (2440) 77
- Settings Wizard: Updates (2470) 82
- Sharing a library (Share Data dialog) (3590) 224
- Sharing a parking standard (Share Data dialog) 289
- Side Overturn 345
- Simple animations (Basic Animation dialog) (8000) 320
- Single user licences 2
- Single user version 3
- Some final points to note 26
- Some tips for defining trams (Rail only) 229
- Splitter 345
- Splitter Island 345
- Steering Angle 345
- Stub axle 345
- Stub axle length 345
- System Settings 93
- System Settings: AutoLoad (2005) 97
- System Settings: Directories (2200) 96
- System Settings: Internet (2210) 102
- System Settings: Language (2010) 99
- System Settings: Network (2015) 100

- System Settings: Paths: AutoDrive (Roads only) (2100) 108
- System Settings: Paths: Follow Drive (Roads only) (2120) 112
- System Settings: Paths: Guided Drive (Rail only) (2130) 114
- System Settings: Paths: Manual Drive (Roads only) (2110) 110
- System Settings: Skill Level (2050) 107
- System Settings: Start Up (2000) 94
- System Settings: Updates (2190) 103
- System Settings: View (2040) 105

T

- Tandem Axles 346
- Target Point 346
- Technical Support 42
- Template Wizard: Format (6530) 156
- Template Wizard: Model Settings (6515) 154
- Template Wizard: Turn Angles (6520) 155
- Template Wizard: Type (6500) 152
- Template Wizard: Vehicle (6510) 153
- The Advanced Editor 245
- The Getting Started dialog (not AutoTrack Templates) (1900) 57
- The New Features dialog (1975) 56
- The Template Wizard 151
- The Vehicle Wizard 229
- T-markings 345
- To add a new user 222, 288
- To add a vertex to a row of parking bays 283
- To add the "loopback" address 40
- To adjust a bearing turn (not Rail) 198
- To adjust a parking row 283
- To adjust the articulation 185
- To adjust the vehicle start heading (not Rail) 192, 196
- To adjust the vehicle start position (not Rail) 192
- To adjust the vehicle start spine angles (not Rail) 192, 197
- To adjust the vehicle start steering angle (not Rail) 192
- To adjust the vehicle start steering angle (not Rail) 196
- To adjust the view 167, 187
- To change dynamics settings 209
- To change the absolute articulation limits 207
- To change the absolute steering limits 206
- To change the design speed 207
- To change the heading of the vehicle 185
- To change the position of the vehicle 185
- To change the selected vehicle 184
- To change the tracking point 208
- To change the turn transition types 207
- To close a vehicle library 182
- To copy a row of bays 282
- To copy the path 193
- To create a new vehicle 228
- To create or edit an AutoTrack script (6050) 171

- To customise the parking report 277
- To delete a path 193
- To delete a row of bays 283
- To delete the last target point (not Rail) 195
- To display the parking report 277
- To drive backwards on an arc 159
- To drive forwards on an arc 159
- To edit a parking bay 280
- To edit a parking island 281
- To edit a parking row 278
- To edit a parking standard 293
- To edit an existing user (Maintain User dialog) 289
- To edit an existing user (Maintain Users dialog) (3560) 223
- To edit the path properties 168
- To edit the path reports 168
- To enter grip editing mode 195
- To explode a row of bays 282
- To explode the path entity (or cell) 193
- To export a parking report 278
- To extend a path 201
- To extend a row of parking bays 283
- To extract path data 211
- To extract the software 31
- To generate a turn template 151
- To insert a new target point (not Rail) 194, 198
- To insert a vehicle details report 209
- To install the object enabler version from CD 32
- To install the software 31
- To install the software from the web 32
- To join two rows of parking bays 283
- To load an AutoTrack 2.x library 214
- To load an AutoTrack 2.x vehicle 215
- To load an AutoTrack script 172
- To load and run AutoTrack for AutoCAD manually 50
- To load and run AutoTrack for MicroStation manually... 55
- To move a path 197
- To move a row of bays 282
- To move a target point (not Rail) 197
- To move a vehicle details report 209
- To move target points (not Rail) 194
- To move the path 192
- To open a vehicle library 182
- To pan the image (e.g. if the vehicle is close to the edge of the window) 188
- To pause driving 167
- To place a parallel row of bays 274
- To place a row of bays freehand 273
- To place an access road freehand 275
- To place an access road on a line 276
- To place discrete outlines 210
- To position the vehicle at a point on an existing path 187
- To position the vehicle at the end of an existing path 187
- To position the vehicle at the start of an existing path 187

- To redraw the path and update the reports 168
- To remove a target point (not Rail) 198
- To remove a vehicle details report 209
- To remove intermediate target points (not Rail) 195
- To reset any drawing rotation 188
- To rotate a row of bays 282
- To rotate the drawing automatically 188
- To rotate the drawing to the left 188
- To rotate the drawing to the right 188
- To rotate the path 193
- To run an AutoTrack script 172
- To run AutoTrack from the Taskbar Start Programs Menu 48
- To run AutoTrack from the Taskbar Start Programs menu... 53
- To run AutoTrack from within AutoCAD 48
- To run AutoTrack from within MicroStation... 54
- To save an AutoTrack script 172
- To see the steering pointer 192, 196
- To see the target points on a path 196
- To see the target points on the path 191
- To select a vehicle from a loaded library 182
- To set a default parking standard 292
- To set a default vehicle 182
- To set or change the heading of the entire vehicle 186
- To set or change the position of the vehicle 186
- To set or change the starting orientation of a selected spine 186
- To set or change the starting steering angle 186
- To show both the vehicle body and chassis 189
- To show only the vehicle body 189
- To show only the vehicle chassis 189
- To show or hide the vehicle trail 168
- To start driving 187
- To start driving (Control Overlay) (6020) 166
- To stretch a section in a path (not Rail) 197
- To terminate the current path 168
- To trim the end of the path 194, 199, 201
- To trim the start of the path 193, 198, 201
- To undo part of the path 168
- To undo the last operation 187
- To use AutoDrive in Arc mode 158
- To use AutoDrive in Bearing mode 159
- To use Follow 169
- To use Guided Drive 176
- To use Manual Drive 165
- To use Park a Vehicle 180
- To use Vertical Clearance 178
- To view the model settings 187
- To view the path properties 187
- To zoom in 188
- To zoom out 188
- Tracking Point 346
- Transfer Rental Licence dialog (1850) 47
- Trial copies 2
- Tyred Wheels 346

U

- Undriveable Paths (5050) 200
- Uninstalling AutoTrack 35
- Unique parking standard names (Parking Standard Name dialog) 275
- Unit Details dialog (4060) 246
- Unit Details: Axle Groups: Secondary Steering Details (4090) 253
- Unit Details: Body / Outlines (4120) 258
- Unit Details: Couplings (4140) 269
- Unit Details: Front Axles / Rear Axles (4070) 249
- Unit Details: Servicing (Aircraft only) (4125) 271
- Unit Details: Steering (4150) 256
- Unit Details: Unit 247
- Units Details: Doors (Aircraft only) (4125) 270
- Unlocking a library (Unlock Library dialog) (3550) 226
- Unlocking a parking standard file (Unlock Parking Standard File dialog) (3555) 290
- Updating AutoTrack 35
- Using Export / Import for personal settings 333
- Using Follow to check fastest line 113

V

- Vehicle class 346
- Vehicle Details dialog (4050) 245
- Vehicle details report 209
- Vehicle Diagram dialog (3570) 219
- Vehicle Group dialog (4040) 227
- Vehicle wizard: Aircraft Fuselage (aircraft only) (7110) 242
- Vehicle wizard: Aircraft Tailplane (aircraft only) (7100) 241
- Vehicle wizard: Aircraft wings (aircraft only) (7090) 240
- Vehicle wizard: Axles (7010) 231
- Vehicle wizard: Body (7070) 237
- Vehicle wizard: Couplings (7060) 236
- Vehicle wizard: Drawbar (7050) 233
- Vehicle wizard: Finish (7130) 244
- Vehicle wizard: Manoeuvrability (7040) 235
- Vehicle wizard: Name (7000) 230
- Vehicle wizard: Pantograph (trams only) (7120) 243
- Vehicle wizard: Steering (not Rail) (7030) 234
- Vehicle wizard: Tractor body (7075) 238
- Vehicle wizard: Tram body (trams only) (7080) 239
- Vehicle wizard: Wheelbase (7020) 232
- Vertical Clearance 178
- Video tutorial 72
- Viewing a standard in a parking standard file or the pool (Parking Standard Explorer dialog) (4400) 286
- Viewing a vehicle in a library or the pool (Library Explorer dialog) (3510) 215
- Viewing a vehicle used on a particular path 227
- Viewing AutoTrack paths in AutoCAD if you don't have AutoTrack 52

Viewing or editing an existing vehicle 227
Viewing or editing parking standards 293

W

Wall-to-Wall Turning Circle Radius 346
Welcome dialog (1700) 44
What AutoTrack can and can't do 59
What's new in version 8? 64
Wheel Cut 346
Wheel Diameter 346
Wheel stop 346
Wheel Track 346
Windows NT based systems (NT4, 2000, XP,
2003, Vista, Windows 7, etc.) 26